

City of Gig Harbor Stormwater Management and Site Development Manual

Volume II Construction Stormwater Pollution Prevention

Prepared by:
Pierce County Surface Water Management

Modified by:
City of Gig Harbor Public Works Department

Table of Contents

Chapter 1 - Introduction to Construction Stormwater Pollution Prevention		1-1
1.1	Purpose of this Volume.....	1-1
1.2	Content and Organization of this Volume	1-2
1.3	How to Use this Volume.....	1-2
1.4	Twelve Elements of Construction Stormwater Pollution Prevention	1-3
1.5	Water Quality Standards.....	1-4
1.5.1	Surface Water Quality Standards.....	1-4
1.5.2	Compliance with Standards	1-5
1.6	Other Applicable Regulations and Permits.....	1-5
Chapter 2 - Stormwater Pollution Prevention Plan		2-1
2.1	General Guidelines.....	2-1
2.1.1	What is a Construction Stormwater Pollution Prevention Plan?	2-1
2.1.2	What is an Adequate Plan?	2-2
2.1.3	BMP Standards and Specifications.....	2-2
2.1.4	General Principles.....	2-3
2.2	Step-By-Step Procedure.....	2-3
2.2.1	Step 1 – Data Collection	2-4
2.2.2	Step 2 – Data Analysis.....	2-5
2.2.3	Step 3 – Construction SWPPP Development and Implementation	2-7
2.3	Construction Stormwater Pollution Prevention Requirements	2-18
2.3.1	Narrative	2-18
2.3.2	Drawings.....	2-20
Chapter 3 - Standards and Specifications for Best Management Practices		3-1
3.1	Source Control Best Management Practices.....	3-2
BMP C101:	Preserving Natural Vegetation.....	3-2
BMP C102:	Buffer Zones	3-5
BMP C103:	High Visibility Plastic Fence	3-6
BMP C105:	Stabilized Construction Entrance.....	3-7
BMP C106:	Wheel Wash.....	3-9
BMP C107:	Construction Road/Parking Area Stabilization	3-11
BMP C120:	Temporary and Permanent Seeding.....	3-13
BMP C121:	Mulching.....	3-21
BMP C122:	Nets and Blankets.....	3-23
BMP C123:	Plastic Covering.....	3-27
BMP C124:	Sodding	3-29
BMP C125:	Topsoiling	3-31
BMP C126:	Polyacrylamide for Soil Erosion Protection.....	3-34
BMP C130:	Surface Roughening.....	3-39
BMP C131:	Gradient Terraces.....	3-42
BMP C140:	Dust Control.....	3-45

BMP C150: Materials on Hand 3-47

BMP C151: Concrete Handling 3-49

BMP C152: Sawcutting and Surfacing Pollution Prevention 3-51

BMP C153: Material Delivery, Storage and Containment 3-53

BMP C160: Certified Erosion and Sediment Control Lead 3-55

BMP C161: Payment of Erosion Control Work 3-61

BMP C162: Scheduling 3-63

3.2 Runoff Conveyance and Treatment Best Management Practices 3-64

 BMP C200: Interceptor Dike and Swale 3-64

 BMP C201: Grass-Lined Channels 3-67

 BMP C202: Channel Lining 3-72

 BMP C203: Water Bars 3-74

 BMP C204: Pipe Slope Drains 3-76

 BMP C205: Subsurface Drains 3-79

 BMP C206: Level Spreader 3-82

 BMP C207: Check Dams 3-85

 BMP C208: Triangular Silt Dike (Geotextile-Encased Check Dam) 3-87

 BMP C209: Outlet Protection 3-89

 BMP C220: Storm Drain Inlet Protection 3-91

 BMP C230: Straw Bale Barrier 3-97

 BMP C231: Brush Barrier 3-100

 BMP C233: Silt Fence 3-101

 BMP C234: Vegetated Strip 3-107

 BMP C235: Straw Wattles 3-109

 BMP C240: Sediment Trap 3-112

 BMP C241: Temporary Sediment Pond 3-115

 BMP C250: Construction Stormwater Chemical Treatment 3-121

 BMP C251: Construction Stormwater Filtration 3-130

 BMP C252: High pH Neutralization Using CO₂ 3-136

 BMP C253: pH Control for High pH Water 3-140

References and Information Sources Ref-1

Appendix II-A – Recommended Standard Notes for Erosion and Sediment Control Plans A-1

Appendix II-B – Background Information on Chemical Treatment B-1

Tables

Table 3.1.	Temporary Erosion Control Seed Mix.....	3-17
Table 3.2.	Landscaping Seed Mix.....	3-18
Table 3.3.	Low-Growing Turf Seed Mix.....	3-18
Table 3.4.	Bioswale Seed Mix. ^a	3-18
Table 3.5.	Wet Area Seed Mix. ^a	3-19
Table 3.6.	Meadow Seed Mix.....	3-19
Table 3.7.	Mulch Standards and Guidelines.....	3-22
Table 3.8.	PAM and Water Application Rates.....	3-35
Table 3.9.	Storm Drain Inlet Protection.....	3-91
Table 3.10.	Geotextile Standards.....	3-102
Table 3.11.	Vegetated Strips.....	3-107

Figures

Figure 3.1.	Wheel Wash.....	3-10
Figure 3.2.	Channel Installation.....	3-25
Figure 3.3.	Surface Roughening by Tracking and Contour Furrows.....	3-40
Figure 3.4.	Gradient Terraces.....	3-42
Figure 3.5.	Typical Grass-Lined Channels.....	3-67
Figure 3.6.	Temporary Channel Liners.....	3-69
Figure 3.7.	Cross-Section of Level Spreader.....	3-83
Figure 3.8.	Detail of Level Spreader.....	3-84
Figure 3.9.	Block and Gravel Curb Inlet Protection.....	3-95
Figure 3.10.	Curb and Gutter Barrier.....	3-96
Figure 3.11.	Straw Bale Barrier Conditions of Use.....	3-97
Figure 3.12.	Silt Fence Installation by Slicing Method.....	3-105
Figure 3.13.	Straw Wattles.....	3-110
Figure 3.14.	Riser Inflow Curves.....	3-118

Chapter 1 - Introduction to Construction Stormwater Pollution Prevention

1.1 Purpose of this Volume

Volume II of this Stormwater Management and Site Development Manual is entirely devoted to stormwater effects and controls associated with construction activities. It addresses the planning, design, and implementation of stormwater management activities prior to and during the construction phase of projects.

The objective of this volume is to provide information for avoiding adverse stormwater impacts from construction activities on downstream resources and onsite stormwater facilities. In the case where zoning regulations require low impact development (LID), or LID best management practices (BMPs) are selected, the approaches shall be applied to mimic natural hydrologic functions. The natural hydrologic condition of a site is the pre-European settlement condition and is assumed to be forested unless historic evidence to the contrary can be shown. Volume VI provides additional information on LID approaches and BMPs.

Minimization of stormwater flows, prevention of soil erosion, capture of water-borne sediment that has been unavoidably released from exposed soils, and protection of water quality from onsite pollutant sources are all normally achievable when the proper BMPs are planned, installed, and properly maintained.

This volume details BMPs for controlling or maintaining stormwater runoff quality from a developed or artificially altered site during construction. The project applicant or his/her designated project engineer shall develop an Erosion and Sediment Control (ESC) Plan (see Volume I, Section 3.4); for most projects a component of this plan is the Construction Stormwater Pollution Prevention Plan (SWPPP).

The construction phase of a project is usually considered a temporary condition, which will be supplanted by the permanent improvements and facilities for the completed project. However, construction work may take place over an extended period of time, including several seasons of multiple years. All management practices and control facilities used in the course of construction should be of sufficient size, strength, and durability to readily outlast the longest possible construction schedule and the worst anticipated rainfall conditions.

Linear projects, such as roadway construction and utility installations, are special cases of construction activities and present their own, unique set of stormwater protection challenges. Many of the BMPs can be adapted and

modified to provide the controls needed to adequately address these projects. It may be advantageous to segment long, linear projects into a series of separate units that can apply all necessary controls pertinent to that particular unit in a timely manner.

The goal of a Construction SWPPP is to avoid immediate and long-term environmental loss and degradation potentially caused by poorly managed construction sites. Submittal requirements for the ESC Plan and Construction SWPPP are detailed in Volume I, Section 3.4. Additional information on erosion and sedimentation processes as well as factors influencing erosion potential may be found in the Stormwater Management Manual for Western Washington, Washington State Department of Ecology (Ecology), February 2005, or latest edition.

1.2 Content and Organization of this Volume

Volume II consists of three chapters that address the key considerations and mechanics of construction stormwater BMPs.

Chapter 1 includes the introduction and purpose of the volume. The chapter briefly lists 12 elements of pollution prevention to be considered for all projects. Additional regulatory requirements that may apply to construction sites and their stormwater discharges are noted. This includes Ecology's National Pollutant Discharge Elimination System (NPDES) Discharge Permit and Washington's water quality standards pertaining to construction stormwater and explains how they apply to field situations.

Chapter 2 provides additional information on requirements for construction erosion control, including seasonal limitations and required components of the SWPPP.

Chapter 3 contains BMPs for construction stormwater control and site management. The first section of Chapter 3 contains BMPs for source control. The second section addresses runoff, conveyance, and treatment BMPs. Various combinations of these BMPs should be used in the Construction SWPPP to satisfy each of the 12 elements applying to the project. Design and facility sizing information is included within the applicable BMP sections. Additional site BMPs and design approaches targeting minimization of construction impacts are presented in Volume VI.

1.3 How to Use this Volume

This volume should be used in developing the Construction Stormwater Pollution Prevention Plan (SWPPP), which is a required component of an Erosion and Sediment Control Plan (see Volume I, Section 3.4). Chapter 1 should be consulted to determine the regulatory requirements

that apply to a construction site, including permit requirements that deal with stormwater at construction sites. Users should read Chapter 2 to determine the organization and content of the Construction SWPPP. This chapter includes lists of suggested BMPs to meet each element of construction stormwater pollution prevention. Based on these lists, the project applicant should refer to Chapter 3 to determine which BMPs will be included in the Construction SWPPP, and to design and document application of these BMPs to the project construction site.

1.4 Twelve Elements of Construction Stormwater Pollution Prevention

The **12 elements** listed below must be considered in the development of the Construction SWPPP unless site conditions render the element unnecessary. If an element is considered unnecessary, the Construction SWPPP must provide the justification.

These elements cover the general water quality protection strategies of limiting site impacts, preventing erosion and sedimentation, and managing activities and sources.

The **12 elements** are:

1. Mark clearing limits
2. Establish construction access
3. Control flow rates
4. Install sediment controls
5. Stabilize soils
6. Protect slopes
7. Protect drain inlets
8. Stabilize channels and outlets
9. Control pollutants
10. Control dewatering
11. Maintain BMPs
12. Manage the project

A complete description of each element and associated BMPs is given in Chapter 2.

Because Ecology has determined that a local manual may be used where the local requirements for construction sites are at least as stringent as Ecology's, applicants should be able to prepare one Construction SWPPP under the city's manual to satisfy both the Ecology permit and Gig Harbor permits. However, for sites also subject to Ecology's NPDES Construction General Permit requirements, applicants are responsible for confirming that no additional requirements apply to comply with Ecology's regulations.

1.5 Water Quality Standards

1.5.1 Surface Water Quality Standards

“Numerical” water quality criteria are numerical values set forth in the State of Washington's Water Quality Standards for Surface Waters (Chapter 173-201A Washington Administrative Code [WAC]). They specify the levels of pollutants allowed in a receiving water that are protective of aquatic life.

U.S. Environmental Protection Agency (U.S. EPA) has promulgated 91 numeric water quality criteria for the protection of human health that are applicable to Washington State. These criteria are designed to protect humans from cancer and other disease and are primarily applicable to fish and shellfish consumption and drinking water obtained from surface waters.

In addition to numerical criteria, “narrative” water quality criteria (e.g., WAC 173-201A-200, -240, and -250) limit concentrations of toxic, radioactive, or deleterious material below those that have the potential to adversely affect characteristic water uses, cause acute or chronic toxicity to biota, impair aesthetic values, or adversely affect human health. Narrative criteria protect the specific beneficial uses of fresh (WAC 173-201A-600 and -602) and marine (WAC 173-201A-610 and -612) waters in the State of Washington.

Pollutants that might be expected in the discharge from construction sites are turbidity, pH, and petroleum products. The surface water quality standards for turbidity and pH for waters designated for the salmon and trout spawning, core rearing, and migration use are:

- Turbidity: shall not exceed 5 nephelometric turbidity units (NTU) over background turbidity when the background turbidity is 50 NTU or less, or have more than a 10 percent increase in turbidity when the background turbidity is more than 50 NTU.
- pH: shall be within the range of 6.5 to 8.5 (freshwater) or 7.0 to 8.5 (marine water) with a human-caused variation within a range of less than 0.2 units. For Class A and lower water classifications, the permissible induced increase is 0.5 units.

Although there is no specific surface or groundwater quality standard for petroleum products, the narrative surface water quality criteria prohibits any visible sheen in a discharge to surface water.

The groundwater quality criteria require protection from contamination in order to support the beneficial uses of the groundwater, such as for drinking water. Therefore, the primary water quality consideration for stormwater discharges to groundwater from construction sites are the

control of contaminants other than sediment. Sediment control is necessary to protect permanent infiltration facilities from clogging during the construction phase.

1.5.2 Compliance with Standards

Stormwater discharges associated with construction activity are subject to applicable state water quality standards. The site development permit does not authorize the violation of those standards. Gig Harbor expects that the selection and implementation of appropriate BMPs outlined in this volume of the manual will result in compliance with water quality standards. Proper implementation and maintenance of appropriate BMPs is critical to adequately control any adverse water quality impacts from construction activity.

Stormwater discharges from construction sites must not cause or contribute to violations of Washington State's surface water quality standards (Chapter 173-201A WAC), sediment management standards (Chapter 173-204 WAC), groundwater quality standards (Chapter 173-200 WAC), and human health based criteria in the National Toxics Rule (Federal Register 1992).

1.6 Other Applicable Regulations and Permits

Where Gig Harbor zoning requires LID, or the applicant selects to use LID, Volume VI must be reviewed to identify site assessment and stormwater management requirements.

In addition to Gig Harbor regulations, other regulations and permits may require the implementation of BMPs to control pollutants in construction site stormwater runoff. These include but may not be limited to the following: (principal permitting agency in brackets)

- NPDES Construction General Permit (Ecology)
- Total maximum daily load or water cleanup plans (Ecology)
- Endangered Species Act (ESA) – (National Oceanic and Atmospheric Administration, National Marine Fisheries Service [NOAA Fisheries] or U.S. Fish and Wildlife Service [USFWS])
- Hydraulic project approval permits – (WDFW)
- General provisions from WSDOT – (WSDOT)
- Contaminated site remediation agreements.

See Volume I, Section 1.7, for further information on these regulations and permits.

Chapter 2 - Stormwater Pollution Prevention Plan

This chapter provides an overview of the important components of, and the process for, developing and implementing a Construction SWPPP.

Section 2.1 contains general guidelines with which site planners should become familiar. It describes criteria for plan format and content and ideas for improved plan effectiveness.

Section 2.2 outlines and describes the step-by-step procedure for developing a Construction SWPPP from data collection to finished product. This procedure is written in general terms to be applicable to all types of projects.

Design standards and specifications for BMPs referred to in this chapter are found in Chapter 3.

The Construction SWPPP is a subset of the Erosion and Sediment Control Plan submittal requirements outlined in Volume I. Details on how to integrate the Construction SWPPP with an Erosion and Sediment Control Plan are provided in Volume I.

2.1 General Guidelines

2.1.1 What is a Construction Stormwater Pollution Prevention Plan?

The Construction SWPPP is a document that describes the potential for pollution problems on a construction project. The Construction SWPPP explains and illustrates the measures to be taken on the construction site to control those problems. A Construction SWPPP for projects that add or replace 2,000 square feet or more of impervious surface or clear more than 7,000 square feet must have a narrative as well as drawings and details (see Volume I, Chapter 3, Table 3.1 for threshold limits for various plan submittals). For some single-family home construction projects, a relatively simple Engineered Abbreviated Plan may be acceptable for ESC purposes. See also Volume I, Appendix I-A.

The Construction SWPPP must be located on the construction site or within reasonable access to the site for construction and inspection personnel, although a copy of the drawings must be kept on the construction site at all times.

As site work progresses, the plan must be modified to reflect changing site conditions.

The owner or lessee of the land being developed has the responsibility for Construction SWPPP preparation and submission to the city. The owner

or lessee may designate someone (i.e., an engineer, architect, contractor, etc.) to prepare the Construction SWPPP, but he/she retains the ultimate responsibility.

2.1.2 What is an Adequate Plan?

When the Construction SWPPP is required it must contain sufficient information to satisfy the city that the problems of sediment erosion and pollution have been adequately addressed for the proposed project. An adequate Construction SWPPP includes a narrative and drawings. The narrative is a written statement to explain and justify the pollution prevention decisions made for a particular project. The narrative contains concise information about existing site conditions, construction schedules, and other pertinent items that are not contained on the drawings. The drawings and notes describe where and when the various BMPs should be installed, the performance the BMPs are expected to achieve, and actions to be taken if the performance goals are not achieved.

On construction sites that discharge to surface water, the primary concern in the preparation of the Construction SWPPP is compliance with Washington State water quality standards. Each of the 12 elements must be included in the Construction SWPPP unless an element is determined not to be applicable to the project and the exemption is justified in the narrative. The step-by-step procedure outlined in Section 2.2 of this volume is recommended for the development of the Construction SWPPPs.

On construction sites that infiltrate all stormwater runoff, the primary concern in the preparation of the Construction SWPPP is the protection of the infiltration facilities from fine sediments during the construction phase and protection of groundwater from other pollutants. Several of the other elements are very important at these sites as well, such as marking the clearing limits, establishing the construction access, and managing the project.

2.1.3 BMP Standards and Specifications

Chapter 3 contains standards and specifications for the BMPs referred to in this chapter. Wherever any of these BMPs are to be employed on a site, the specific title and number of the BMP should be clearly referenced in the narrative and marked on the drawings.

The standards and specifications in Chapter 3 of this volume are not intended to limit any innovative or creative effort to effectively control erosion and sedimentation. In those instances where appropriate BMPs are not in this chapter, experimental management practices can be considered. Minor modifications to standard practices may also be employed. However, such practices must be approved by the city before

they may be used. All experimental management practices and modified standard practices are required to achieve the same or better performance than the BMPs listed in Chapter 3.

2.1.4 General Principles

The following general principles should be applied to the development of the Construction SWPPP:

- Retain the duff layer, native topsoil, and natural vegetation in an undisturbed state to the maximum extent practicable.
- Prevent pollutant release. Select source control BMPs as a first line of defense. Prevent erosion rather than treat turbid runoff.
- Select BMPs depending on site characteristics (topography, drainage, soil type, ground cover, and critical areas) and the construction plan.
- Divert runoff away from exposed areas wherever possible. Keep clean water clean.
- Limit the extent of clearing operations and phase construction operations.
- Amend all soils with compost wherever topsoil has been removed before reseeding a disturbed soil area.
- Incorporate natural drainage features whenever possible, using adequate buffers and protecting areas where flow enters the drainage system.
- Minimize slope length and steepness.
- Reduce runoff velocities to prevent channel erosion.
- Prevent the tracking of sediment off site.
- Select appropriate BMPs for the control of pollutants other than sediment.
- Be realistic about the limitations of controls that you specify and the operation and maintenance (O&M) of those controls. Anticipate what can go wrong, how you can prevent it from happening, and what will need to be done to fix it.

2.2 Step-By-Step Procedure

There are three basic steps in producing a Construction SWPPP:

1. Data collection
2. Data analysis
3. Construction SWPPP development and implementation.

Steps 1 and 2 described below are intended for projects that meet or exceed the Erosion and Sediment Control Plan threshold limits shown in Volume I, Chapter 3, Table 3.1. For some single-family home construction projects, a relatively simple Engineered Abbreviated Plan may be acceptable for ESC purposes. See also Volume I, Appendix I-A.

2.2.1 Step 1 – Data Collection

Evaluate existing site conditions and gather information that will help develop the most effective Construction SWPPP. The information gathered should be explained in the narrative and shown on the drawings.

- **Evaluate Zoning:** Determine if site zoning requires LID or if applicant chooses to apply LID. If pursuing LID, see Volume VI for additional requirements and guidelines.
- **Topography:** Prepare a topographic drawing of the site to show the existing contour elevations at intervals of 1 to 5 feet depending upon the slope of the terrain.
- **Drainage:** Locate and clearly mark existing drainage swales and patterns on the drawing, including existing storm drain pipe systems.
- **Soils:** Identify and label soil type(s) and erodibility (slight, moderate, severe, very severe, or an index value from the NRCS manual) on the drawing. Soils information can be obtained from a soil survey if one has been published for the city. If a soil survey is not available, a request can be made to a district Natural Resource Conservation Service Office. Can we refer to a soils map of the city?

Soils must be characterized for permeability, water holding capacity, percent organic matter, and effective depth by a qualified soil professional or engineer. These qualities should be expressed in averaged or nominal terms for the subject site or project. This information is typically available in the published Natural Resources Conservation Service (NRCS) – formerly the Soil Conservation Service (SCS) – Soil Survey of Gig Harbor.

- **Ground Cover:** Label existing vegetation on the drawing. Such features as tree clusters, grassy areas, and unique or sensitive vegetation should be shown. Unique vegetation may include existing trees above a given diameter. Requirements regarding tree

preservation should be investigated; these are primarily found in GHMC. In addition, existing denuded or exposed soil areas should be indicated.

- **Critical Areas:** Delineate critical areas adjacent to or within the site on the drawing. Such features as steep slopes, streams, floodplains, lakes, wetlands, sole source aquifers, and geologic hazard areas, etc., should be shown. Delineate setbacks and buffer limits for these features on the drawings. Other related jurisdictional boundaries such as Shorelines Management and the Federal Emergency Management Agency (FEMA) base floodplain should also be shown on the drawings.
- **Adjacent Areas:** Identify existing buildings, roads, and facilities adjacent to or within the project site on the drawings. Identify existing and proposed utility locations, construction clearing limits and ESC BMPs on the drawings.
- **Existing Encumbrances:** Identify wells, existing and abandoned septic drainfield, utilities, and site constraints.
- **Precipitation Records:** Determine the average monthly rainfall and rainfall intensity for the required design storm events. These records may be available from the county or from weather information service providers.

2.2.2 Step 2 – Data Analysis

Consider the data collected in Step 1 to visualize potential problems and limitations of the site. Determine those areas that have critical erosion hazards. The following are some important factors to consider in data analysis:

- **Evaluate Zoning:** Determine if site zoning requires LID or if applicant chooses to apply LID. If pursuing LID, see Volume VI for additional requirements and guidelines.
- **Topography:** The primary topographic considerations are slope steepness and slope length. Because of the effect of runoff, the longer and steeper the slope, the greater the erosion potential. Erosion potential should be determined by a qualified engineer, soil professional, or certified erosion control specialist.
- **Drainage:** Natural drainage patterns that consist of overland flow, swales and depressions should be used to convey runoff through the site to avoid constructing an artificial drainage system. Man-made ditches and waterways will become part of the erosion problem if they are not properly stabilized. Care should also be

taken to ensure that increased runoff from the site will not erode or flood the existing natural drainage system. Possible sites for temporary stormwater retention and detention should be considered at this point.

Construction should be directed away from areas of saturated soil - areas where groundwater may be encountered - and critical areas where drainage will concentrate. Preserve natural drainage patterns on the site.

- **Soils:** Evaluate soil properties such as surface and subsurface runoff characteristics, depth to impermeable layer, depth to seasonal groundwater table, permeability, shrink-swell potential, texture, ability to settle, and erodibility. Develop the Construction SWPPP based on known soil characteristics. Infiltration sites should be properly protected from clay and silt which will reduce infiltration capacities.
- **Ground Cover:** Ground cover is the most important factor in terms of preventing erosion. Existing vegetation that can be saved will prevent erosion better than constructed BMPs. Trees and other vegetation protect the soil structure. See Volume VI to determine what credit can be received for using LID techniques. If the existing vegetation cannot be saved, consider such practices as phasing construction, temporary seeding, and mulching. Phasing of construction involves stabilizing one part of the site before disturbing another. In this way, the entire site is not disturbed at once.
- **Critical Areas:** Critical areas per Title 18 Environment GHMC, may include but not limited to flood hazard areas, mine hazard areas, slide hazard areas, sole source aquifers, wetlands, stream banks, fish-bearing streams, and other water bodies. Any critical areas within or adjacent to the development will require at a minimum that an Engineered Abbreviated Plan be submitted and should exert a strong influence on land development decisions. Critical areas and their buffers shall be delineated on the drawings and clearly flagged in the field. Fencing may be more useful than flagging to assure that equipment operators stay out of critical areas. Only unavoidable work should take place within critical areas and their buffers. Such unavoidable work will require special BMPs, permit restrictions, and mitigation plans.
- **Adjacent Areas:** An analysis of adjacent properties should focus on areas upslope and downslope from the construction project. Water bodies that will receive direct runoff from the site are a major concern. The types, values, sensitivities of and risks to downstream resources, such as private property, stormwater

facilities, public infrastructure, or aquatic systems, should be evaluated. ESCs should be selected accordingly.

- **Precipitation Records:** Refer to Volume III, Chapter 2 to determine the required rainfall records and the method of analysis for design of BMPs.
- **Timing of the Project:** An important consideration in selecting BMPs is the timing and duration of the project. Projects that will proceed during the wet season and projects that will last through several seasons must take all necessary precautions to remain in compliance with the water quality standards.

2.2.3 Step 3 – Construction SWPPP Development and Implementation

After collecting and analyzing the data to determine the site limitations, a Construction SWPPP can then be developed. Each of the 12 elements below must be considered and included in the Construction SWPPP unless site conditions render the element unnecessary and the exemption from that element is clearly justified in the narrative of the SWPPP.

If LID is required or selected, also see Volume VI, Chapter 2, for additional guidelines and requirements related to LID site designs.

Element #1: Mark Clearing Limits

- Prior to beginning land disturbing activities, including clearing and grading, clearly mark all clearing limits, sensitive areas and their buffers, and trees that are to be preserved within the construction area. These shall be clearly marked, both in the field and on the plans, to prevent damage and offsite impacts.
- Plastic, metal, or stake wire fence may be used to mark the clearing limits.
- The duff layer, native top soil, and natural vegetation shall be retained in an undisturbed state to the maximum extent practicable. If it is not practicable to retain the duff layer in place, it should be stockpiled on site, covered to prevent erosion, and replaced immediately upon completion of the ground disturbing activities.
- Suggested BMPs:
 - BMP C101: Preserving Natural Vegetation
 - BMP C102: Buffer Zones
 - BMP C103: High Visibility Plastic Fence.

Element #2: Establish Construction Access

- Construction vehicle access and exit shall be limited to one route, if possible, or two for linear projects such as roadways where more than one access is necessary for large equipment maneuvering.
- Access points shall be stabilized with a pad of quarry spalls, crushed rock, or equivalent BMP prior to traffic leaving the construction site to minimize the tracking of sediment onto all roads and accesses.
- Wheel wash or tire baths should be located on site, if the stabilized construction entrance is not effective in preventing sediment from being tracked onto roads/accesses.
- If sediment is tracked off site, roads/accesses shall be cleaned thoroughly at the end of each day, or more frequently during wet weather, if necessary to prevent sediment from entering waters of the state. Sediment shall be removed from roads by shoveling or pickup sweeping and shall be transported to a controlled sediment disposal area. Street washing will be allowed only after sediment is removed in this manner.
- Street wash wastewater shall be controlled by pumping back on site to an approved infiltration facility, or otherwise must be prevented from discharging into systems tributary to state surface waters. Options include discharge to the sanitary sewer, or discharge to an approved offsite treatment system. For discharges to the sanitary sewer, permits must be obtained from the Gig Harbor Public Works Department at (253) 851-6170.
- Suggested BMPs:
 - BMP C105: Stabilized Construction Entrance
 - BMP C106: Wheel Wash
 - BMP C107: Construction Road/Parking Area Stabilization.

Element #3: Control Flow Rates

- Properties and waterways downstream from development sites shall be protected from erosion due to increases in the volume, velocity, and peak flow rate of stormwater runoff from the project site.
- Downstream analysis is necessary if changes in offsite flows could impair or alter conveyance systems, stream banks, bed sediment, or aquatic habitat. See Volume I, Chapter 3, for potential offsite analysis requirements and guidelines.

- Where necessary to comply with Minimum Requirement #7, stormwater retention/detention facilities shall be constructed as one of the first steps in grading. Detention facilities shall be functional prior to construction of site improvements (e.g., impervious surfaces).
- The city may require pond designs that provide additional or different stormwater flow control if necessary to address local conditions or to protect properties and waterways downstream from erosion due to increases in the volume, velocity, and peak flow rate of stormwater runoff from the project site.
- If permanent infiltration ponds are used for flow control during construction, these facilities should be protected from siltation during the construction phase.
- Suggested BMPs:
 - BMP C240: Sediment Trap
 - BMP C241: Temporary Sediment Pond
 - Refer to Volume III, Detention Facilities, Infiltration Stormwater Quantity and Flow Control.

Element #4: Install Sediment Controls

- Prior to leaving a construction site or prior to discharge to an infiltration facility, stormwater runoff from disturbed areas shall pass through a sediment pond or other appropriate sediment removal BMP. Runoff from fully stabilized areas (see Element #5 second bullet item) may be discharged without a sediment removal BMP, but must meet the flow control performance standard of Element #3 (first bullet item).
- Sediment ponds, vegetated buffer strips, sediment barriers or filters, dikes, and other BMPs intended to trap sediment on site shall be constructed as one of the first steps in grading. These BMPs shall be functional before other land disturbing activities take place.
- Earthen structures such as dams, dikes, and diversions shall be seeded and mulched according to the timing indicated in Element #5.
- BMPs intended to trap sediment on site must be located in a manner to avoid interference with the movement of juvenile salmonids attempting to enter off-channel areas or drainages, often

during non-storm events, in response to rain event changes in stream elevation or wetted area.

- Suggested BMPs:
 - BMP C230: Straw Bale Barrier
 - BMP C231: Brush Barrier
 - BMP C233: Silt Fence
 - BMP C234: Vegetated Strip
 - BMP C235: Straw Wattles
 - BMP C240: Sediment Trap
 - BMP C241: Temporary Sediment Pond
 - BMP C250: Construction Stormwater Chemical Treatment
 - BMP C251: Construction Stormwater Filtration.

Element #5: Stabilize Soils

- All exposed and unworked soils shall be stabilized by application of effective BMPs that protect the soil from the erosive forces of raindrop impact, flowing water, and wind.
- Full stabilization means all soil disturbing activities at the site have been completed and areas where the soil or natural vegetative cover has been disturbed have been properly covered and accepted to meet permanent erosion control. Permanent erosion control can include concrete or asphalt paving; quarry spalls used as ditch lining; application of thick layers of gravel or mulch; or vegetative cover in a manner that will fully prevent soil erosion. Where the term "fully established" is used to describe vegetative cover or plantings, it shall be understood to mean that healthy vegetation covers 90 percent of exposed bare soil. The application of hydroseeding, even in conjunction with a bonded fiber matrix (BFM) or rolled erosion product, will not be accepted as fully established permanent erosion control before the necessary development and ground cover requirements of the plantings are met. The strong root structures of well established vegetation are an essential mechanism in controlling soil erosion. The city will inspect and must approve all areas as fully stabilized before the release of financial guarantees.
- Temporary erosion control measures shall remain in place until permanent measures are established.
- From October 1 through April 30, no soils shall remain exposed and unworked for more than 2 days. From May 1 to September 30, no soils shall remain exposed and unworked for more than 7 days. This condition applies to all soils on site, whether at final grade or not.

- Soils shall be stabilized at the end of the shift before a holiday or weekend if needed based on the weather forecast.
- Applicable practices include, but are not limited to, temporary and permanent seeding, sodding, mulching, plastic covering, erosion control fabrics and matting, soil application of polyacrylamide (PAM), the early application of gravel base on areas to be paved, and dust control.
- Soil stabilization measures should be appropriate for the time of year, site conditions, estimated duration of use, and potential water quality impacts that stabilization agents may have on downstream waters or groundwater.
- Soil stockpiles must be stabilized from erosion, protected with sediment trapping measures, and when possible, be located away from storm drain inlets, waterways and drainage channels.
- Linear construction activities, including right-of-way and easement clearing, roadway development, pipelines, and trenching for utilities, shall be conducted to meet the soil stabilization requirement. Contractors shall install the bedding materials, roadbeds, structures, pipelines, or utilities and restabilize the disturbed soils so that:
 - From October 1 through April 30 no soils shall remain exposed and unworked for more than 2 days, and
 - From May 1 to September 30, no soils shall remain exposed and unworked for more than 7 days.
- Suggested BMPs:
 - BMP C120: Temporary and Permanent Seeding
 - BMP C121: Mulching
 - BMP C122: Nets and Blankets
 - BMP C123: Plastic Covering
 - BMP C124: Sodding
 - BMP C125: Topsoiling
 - BMP C126: Polyacrylamide for Soil Erosion Protection
 - BMP C130: Surface Roughening
 - BMP C131: Gradient Terraces
 - BMP C140: Dust Control.

Element #6: Protect Slopes

- Design and construct cut and fill slopes in a manner that will minimize erosion.

- Consider soil type and its potential for erosion.
- Reduce slope runoff velocities by reducing continuous length of slope with terracing and diversions, reduce slope steepness, and roughen slope surface.
- Offsite stormwater (run-on) shall be diverted away from slopes and disturbed areas with interceptor dikes and/or swales. Offsite stormwater must be managed separately from stormwater generated on the site.
- At the top of slopes, collect drainage in pipe slope drains or protected channels to prevent erosion. Temporary pipe slope drains shall handle the peak flow from a 10-year, 24-hour event assuming a Type 1A rainfall distribution. Alternatively, the 10-year, 1-hour time step flow rates indicated by an approved continuous runoff model, increased by a factor of 1.6, may be used. If a 15-minute (or less) time step is used, no correction factor is required. The hydrologic analysis shall use the existing land cover condition for predicting flow rates from tributary areas outside the project limits. For tributary areas on the project site, the analysis shall use the temporary or permanent project land cover condition, whichever will produce the highest flow rates.
- Permanent pipe slope drains shall be sized for the 100-year, 24-hour event.
- Provide drainage to remove groundwater intersecting the slope surface of exposed soil areas.
- Excavated material shall be placed on the uphill side of trenches, consistent with safety and space considerations.
- Check dams shall be placed at regular intervals within channels that are cut down a slope.
- Stabilize soils on slopes, as specified in Element #5.
- Suggested BMPs:
 - BMP C120: Temporary and Permanent Seeding
 - BMP C130: Surface Roughening
 - BMP C131: Gradient Terraces
 - BMP C200: Interceptor Dike and Swale
 - BMP C201: Grass-Lined Channels
 - BMP C204: Pipe Slope Drains
 - BMP C205: Subsurface Drains

- BMP C206: Level Spreader
- BMP C207: Check Dams
- BMP C208: Triangular Silt Dike (Geotextile-Encased Check Dam).

Element #7: Protect Drain Inlets

- All storm drain inlets made operable during construction shall be protected so that stormwater runoff does not enter the conveyance system without first being filtered or treated to remove sediment.
- All approach roads shall be kept clean. Sediment and street wash wastewater shall be controlled as specified above in Element #2.
- Inlets should be inspected weekly at a minimum and daily during storm events. Inlet protection devices should be cleaned or removed and replaced when sediment has filled one-third of the available storage (unless a different standard is specified by the product manufacturer).
- Suggested BMPs:
 - BMP C220: Storm Drain Inlet Protection.

Element #8: Stabilize Channels and Outlets

- All temporary onsite conveyance channels shall be designed, constructed and stabilized to prevent erosion from the expected peak 10 minute velocity of flow from a Type 1A, 10-year, 24-hour frequency storm for the developed condition. Alternatively, the 10-year, 1-hour time step flow rate indicated by an approved continuous runoff model, increased by a factor of 1.6, may be used. If a 15-minute (or less) time step is used, no correction factor is required. The hydrologic analysis shall use the existing land cover condition for predicting flow rates from tributary areas outside the project limits. For tributary areas on the project site, the analysis shall use the temporary or permanent project land cover condition, whichever will produce the highest flow rates.
- Stabilization, including armoring material, adequate to prevent erosion of outlets, adjacent stream banks, slopes, and downstream reaches shall be provided at the outlets of all conveyance systems.
- Suggested BMPs:
 - BMP C202: Channel Lining
 - BMP C209: Outlet Protection.

Element #9: Control Pollutants

- All pollutants, including waste materials and demolition debris, that occur onsite shall be handled and disposed of in a manner that does not cause contamination of stormwater. Woody debris may be chopped and spread on site.
- Cover, containment, and protection from vandalism shall be provided for all chemicals, liquid products, petroleum products, and other materials that have the potential to pose a threat to human health or the environment. Onsite fueling tanks shall include secondary containment.
- Maintenance and repair of heavy equipment and vehicles involving oil changes, hydraulic system drain down, solvent and de-greasing cleaning operations, fuel tank drain down and removal, and other activities which may result in discharge or spillage of pollutants to the ground or into stormwater runoff must be conducted using spill prevention measures, such as drip pans. Contaminated surfaces shall be cleaned immediately following any discharge or spill incident. Emergency repairs may be performed on site using temporary plastic placed beneath and, if raining, over the vehicle.
- Wheel wash or tire bath wastewater shall be discharged to a separate onsite treatment system or to the sanitary sewer.
- Application of agricultural chemicals, including fertilizers and pesticides, shall be conducted in a manner and at application rates that will not result in loss of chemical to stormwater runoff. Manufacturers' recommendations for application rates and procedures shall be followed.
- BMPs shall be used to prevent or treat contamination of stormwater runoff by pH modifying sources. These sources include, but are not limited to, bulk cement, cement kiln dust, fly ash, new concrete washing and curing waters, waste streams generated from concrete grinding and sawing, exposed aggregate processes, and concrete pumping and mixer washout waters. Stormwater discharges shall not cause or contribute to a violation of the water quality standard for pH in the receiving water.
- Construction sites shall adjust the pH of stormwater if necessary to prevent violations of water quality standards. Projects must obtain written approval from the Department of Ecology prior to using chemical treatment other than CO₂ or dry ice to adjust pH.
- Suggested BMPs:

- BMP C151: Concrete Handling
- BMP C152: Sawcutting and Surfacing Pollution Prevention
- See Volume IV – Source Control BMPs.

Element #10: Control Dewatering

- Foundation, vault, and trench dewatering water, which have similar characteristics to stormwater runoff at the site, shall be discharged into a controlled conveyance system prior to discharge to a sediment trap or sediment pond. Channels must be stabilized, as specified in Element #8.
- Clean, non-turbid dewatering water, such as well-point groundwater, can be discharged to systems tributary to state surface waters, as specified in Element #8, provided the dewatering flow does not cause erosion or flooding of receiving waters. These clean waters should not be routed through stormwater sediment ponds.
- Highly turbid or contaminated dewatering water from construction equipment operation, clamshell digging, concrete tremie pour, or work inside a cofferdam, shall be handled separately from stormwater.
- Other disposal options, depending on site constraints, may include:
 - Infiltration
 - Transport offsite in a vehicle, such as a vacuum flush truck, for legal disposal in a manner that does not pollute state waters
 - Ecology-approved onsite chemical treatment or other suitable treatment technologies
 - Sanitary sewer discharge with local sewer district approval, if there is no other option
 - Use of a sedimentation bag with outfall to a ditch or swale for small volumes of localized dewatering.

Element #11: Maintain BMPs

- All temporary and permanent ESC BMPs shall be maintained and repaired as needed to assure continued performance of their intended function. Maintenance and repair shall be conducted in accordance with BMP specifications.

- All temporary ESC BMPs shall be removed within 30 days after final site stabilization is achieved or after the temporary BMPs are no longer needed. Trapped sediment shall be removed or stabilized on site. Disturbed soil resulting from removal of BMPs or vegetation shall be permanently stabilized.

Element #12: Manage the Project

Phasing of Construction

- Development projects shall be phased where feasible in order to prevent soil erosion and, to the maximum extent practicable, the transport of sediment from the site during construction. Revegetation of exposed areas and maintenance of that vegetation shall be an integral part of the clearing activities for any phase.
- Clearing and grading activities for developments shall be permitted only if conducted pursuant to an approved site development plan (e.g., subdivision approval) that establishes permitted areas of clearing, grading, cutting, and filling. When establishing these permitted clearing and grading areas, consideration should be given to minimizing removal of existing trees and minimizing disturbance/compaction of native soils except as needed for building purposes. These permitted clearing and grading areas and any other areas required to preserve critical or sensitive areas, buffers, native growth protection easements, or tree retention areas as may be required by local jurisdictions, shall be delineated on the site plans and the development site.
- Seasonal Work Limitations:

From October 1 through April 30, clearing, grading, and other soil disturbing activities shall only be permitted if shown to the satisfaction of the city that silt-laden runoff will be prevented from leaving the site through a combination of the following:

 - Site conditions including existing vegetative coverage, slope, soil type, and proximity to receiving waters
 - Limitations on activities and the extent of disturbed areas
 - Proposed ESC measures.
- Based on the information provided and/or local weather conditions, the city may expand or restrict the seasonal limitation on site disturbance. The city shall take enforcement action – such as a notice of violation, administrative order, penalty, or stop-work order under the following circumstances:

- If, during the course of any construction activity or soil disturbance during the seasonal limitation period, sediment leaves the construction site causing a violation of the surface water quality standard
- If clearing and grading limits or ESC measures shown in the approved plan are not maintained.
- The following activities are exempt from the seasonal clearing and grading limitations:
 - Routine maintenance and necessary repair of ESC BMPs
 - Routine maintenance of public facilities or existing utility structures that do not expose the soil or result in the removal of the vegetative cover to soil
 - Activities where there is 100 percent infiltration of surface water runoff within the site in approved and installed ESC facilities.

Coordination with Utilities and Other Contractors

- The primary project applicant shall evaluate, with input from utilities and other contractors, the stormwater management requirements for the entire project, including the utilities, when preparing the Construction SWPPP.
- Inspection and Monitoring:
 - All BMPs shall be inspected, maintained, and repaired as needed to assure continued performance of their intended function. Site inspections shall be conducted by a person who is knowledgeable in the principles and practices of ESC. The person must have the skills to: 1) assess the site conditions and construction activities that could impact the quality of stormwater and 2) assess the effectiveness of ESC measures used to control the quality of stormwater discharges.
 - For construction sites that will disturb 1 acre or more and that discharge stormwater to surface waters of the state, a Certified Erosion and Sediment Control Lead (CESCL) shall be identified in the Construction SWPPP and shall be on site or on-call at all times. Certification may be obtained through an approved training program that meets the ESC training standards established by Ecology.

- Whenever inspection and/or monitoring reveals that the BMPs identified in the Construction SWPPP are inadequate, due to the actual discharge of or potential to discharge a significant amount of any pollutant, appropriate BMPs or design changes shall be implemented as soon as possible.
- Maintaining an updated Construction SWPPP:
 - The Construction SWPPP shall be retained on site or within reasonable access to the site.
 - The SWPPP shall be modified whenever there is a change in the design, construction, operation, or maintenance at the construction site that has, or could have, a significant effect on the discharge of pollutants to waters of the state.
 - The SWPPP shall be modified if, during inspections or investigations conducted by the owner/operator, or the applicable local or state regulatory authority, it is determined that the SWPPP is ineffective in eliminating or significantly minimizing pollutants in stormwater discharges from the site. The SWPPP shall be modified as necessary to include additional or modified BMPs designed to correct problems identified. Revisions to the SWPPP shall be completed within 7 days following the inspection.

2.3 Construction Stormwater Pollution Prevention Requirements

The Construction SWPPP shall consist of two parts: a narrative and the drawings. The following two sections describe the contents of the narrative and the drawings. A checklist is included that can be used as a quick reference to determine if all the major items are included in the Construction SWPPP. Note that project applicants typically will also be required to develop an Erosion and Sediment Control Plan as outlined in Volume I, Chapter 3. The SWPPP makes up the majority of the erosion and sediment control plan submittal.

2.3.1 Narrative

- Twelve elements – Describe how the Construction SWPPP addresses each of the 12 required elements. Include the type and location of BMPs used to satisfy the required element. If an element is not applicable to a project, provide a written justification for why it is not necessary.

- Project description – Describe the nature and purpose of the construction project. Include the total size of the area, any increase in existing impervious area; the total area expected to be disturbed by clearing, grading, excavation or other construction activities, including offsite borrow and fill areas; and the volumes of grading cut and fill that are proposed.
- Existing site conditions – Describe the existing topography, vegetation, and drainage. Include a description of any structures or development on the parcel including the area of existing impervious surfaces.
- Adjacent areas – Describe adjacent areas, including streams, lakes, wetlands, residential areas, and roads that might be affected by the construction project. Provide a description of the downstream drainage leading from the site to the receiving body of water.
- Critical areas – Describe areas on or adjacent to the site that are classified as critical areas. Critical areas that receive runoff from the site shall be described up to one-fourth mile away. Describe special requirements and provisions for working near or within these areas.
- Soil – Describe the soil on the site, giving such information as soil names, mapping unit, erodibility, ability to settle, permeability, depth, texture, and soil structure.
- Potential erosion problem areas – Describe areas on the site that have potential erosion problems.
- Construction phasing – Describe the intended sequence and timing of construction activities any proposed construction phasing.
- Construction schedule – Describe the construction schedule. If the schedule extends into the wet season, describe what activities will continue during the wet season and how the transport of sediment from the construction site to receiving waters will be prevented.
- Financial/ownership responsibilities – Describe ownership and obligations for the project. Include bond forms and other evidence of financial responsibility for environmental liabilities associated with construction. See also Volume I, Section 2.5.
- Engineering calculations – Attach any calculations made for the design of such items as sediment ponds, diversions, and waterways, as well as calculations for runoff and stormwater detention design (if applicable).

- A responsible, certified erosion control specialist shall be identified. Telephone and/or pager numbers should be included.

2.3.2 Drawings

- Vicinity map – Provide a map with enough detail to identify the location of the construction site; adjacent roads; and receiving waters.
- Site map – Provide a site map(s) showing the following features. The site map requirements may be met using multiple plan sheets for ease of legibility.
 - A legal description of the property boundaries or an illustration of property lines (including distances) in the drawings
 - The direction of north in relation to the site
 - Existing structures and roads
 - The boundaries and types of different soil types
 - Areas of potential erosion problems
 - Any on site and adjacent surface waters, critical areas, their buffers, flood plain boundaries, and Shoreline Management boundaries
 - Existing contours and drainage basins and the direction of flow for the different drainage areas. Contour intervals on the site plan shall be at a minimum as follows:

Slope (%)	Contour Interval (feet)
0 – 15	2
16 – 40	5
>40	10

- Topography must be field verified for drainage easements and conveyance systems. Contours shall extend a minimum of 25 feet beyond property lines and shall extend sufficiently to depict existing conditions. If survey is restricted to the project site due to lack of legal access, contours shall be provided by other means; i.e., comprehensive drainage maps, etc.
- Final and interim grade contours as appropriate, drainage basins, and the direction of stormwater flow during and upon completion of construction

- Areas of soil disturbance, including all areas affected by clearing, grading, and excavation
- Locations where stormwater will discharge to surface waters during and upon completion of construction
- Existing unique or valuable vegetation and the vegetation that is to be preserved
- Cut and fill slopes indicating top and bottom of slope catch lines
- Total cut and fill quantities and the method of disposal for excess material
- Stockpile, waste storage, and vehicle storage, maintenance, and washdown areas
- Locations of all joint utility trenches and details of associated erosion and sediment transport control features.
- Conveyance systems – Show on the site map the following temporary and permanent conveyance features:
 - Locations for swales, interceptor trenches, or ditches
 - Drainage pipes, ditches, or cut-off trenches associated with ESC and stormwater management
 - Temporary and permanent pipe inverts and minimum slopes and cover
 - Grades, dimensions, and direction of flow in all ditches and swales, culverts, and pipes
 - Details for bypassing offsite runoff around disturbed areas
 - Locations and outlets of any dewatering systems.
- Location of treatment and detention BMPs – Show on the site map the locations of temporary and permanent stormwater treatment and/or flow control BMPs.
- Erosion and sediment control BMPs – Show on the site map all major structural and nonstructural BMPs, including:
 - The location of sediment pond(s), pipes, and structures
 - Dimension pond berm widths and inside and outside pond slopes

- The trap/pond storage required and the depth, length, and width dimensions
- Typical section views through pond and outlet structure
- Typical details of gravel cone and standpipe, and/or other filtering devices
- Stabilization technique details for inlets and outlets
- Control/restrictor device location and details
- Stabilization and cover practices for berms, slopes, and disturbed areas
- Rock specifications and detail for rock check dam, if used
- Spacing for rock check dams as required
- Front and side sections of typical rock check dams
- The location, detail, and specification for silt fence
- The construction entrance location and a detail.
- Detailed drawings – Any structural practices used that are not referenced in this manual or other local manuals should be explained and illustrated with detailed drawings.
- Other pollutant BMPs – Indicate on the site map the location of BMPs to be used for the control of pollutants other than sediment.
- Monitoring locations – Indicate on the site map the water quality sampling locations, if required by the local permitting authority or the Ecology. Sampling stations shall be located in accordance with applicable permit requirements.
- Standard notes are suggested in Appendix II-A. Notes addressing construction phasing and scheduling shall be included on the drawings.

Chapter 3 - Standards and Specifications for Best Management Practices

BMPs are defined as schedules of activities, prohibitions of practices, maintenance procedures, and structural and/or managerial practices, that when used singly or in combination, prevent or reduce the release of pollutants to waters of Washington. This chapter contains standards and specifications for temporary BMPs to be used as applicable during the construction phase of a project.

Section 3.1 contains the standards and specifications for source control BMPs.

Section 3.2 contains the standards and specifications for runoff conveyance and treatment BMPs.

The standards for each individual BMP are divided into four sections:

1. Purpose
2. Conditions of Use
3. Design and Installation Specifications
4. Maintenance Standards.

Note that the “conditions of use” always refers to site conditions. As site conditions change, BMPs must be changed to remain in compliance.

Information on stream bank stabilization is available in the *Integrated Streambank Protection Guidelines*, Washington State Department of Fish and Wildlife (WDFW), 2003.

Additional site BMPs and design approaches targeting minimization of construction impacts are presented in Volume VI. Zoning may require the use of these LID BMPs. Applicant may also choose to implement LID BMPs voluntarily.

3.1 Source Control Best Management Practices

BMP C101: Preserving Natural Vegetation

Purpose

The purpose of preserving natural vegetation is to reduce erosion wherever practicable. Limiting site disturbance is the single most effective method for reducing erosion. For example, conifers can hold up to about 50 percent of all rain that falls during a storm. Up to 20 to 30 percent of this rain may never reach the ground but is taken up by the tree or evaporates. Another benefit is that the rain held in the tree can be released slowly to the ground after the storm.

Conditions of Use

- Natural vegetation should be preserved on steep slopes, near perennial and intermittent watercourses or swales, and on building sites in wooded areas.
- As required by the city.

Design and Installation Specifications

Natural vegetation can be preserved in natural clumps or as individual trees, shrubs and vines.

The preservation of individual plants is more difficult because heavy equipment is generally used to remove unwanted vegetation. The points to remember when attempting to save individual plants are:

- Is the plant worth saving? Consider the location, species, size, age, vigor, and the work involved. City ordinances to save natural vegetation and trees should be reviewed.
- Fence or clearly mark areas around trees that are to be saved. It is preferable to keep ground disturbance away from the trees at least as far out as the dripline.

Plants need protection from three kinds of injuries:

- *Construction Equipment* – This injury can be above or below the ground level. Damage results from scarring, cutting of roots, and compaction of the soil. Placing a fenced buffer zone around plants to be saved prior to construction can prevent construction equipment injuries.
- *Grade Changes* – Changing the natural ground level will alter grades, which affects the plant's ability to obtain the necessary air,

water, and minerals. Minor fills usually do not cause problems although sensitivity between species does vary and should be checked. Trees can tolerate fill of 6 inches or less. For shrubs and other plants, the fill should be less.

When there are major changes in grade, it may become necessary to supply air to the roots of plants. This can be done by placing a layer of gravel and a tile system over the roots before the fill is made. A tile system protects a tree from a raised grade. The tile system should be laid out on the original grade leading from a dry well around the tree trunk. The system should then be covered with small stones to allow air to circulate over the root area.

Lowering the natural ground level can seriously damage trees and shrubs. The highest percentage of the plant roots are in the upper 12 inches of the soil and cuts of only 2 to 3 inches can cause serious injury. To protect the roots it may be necessary to terrace the immediate area around the plants to be saved. If roots are exposed, construction of retaining walls may be needed to keep the soil in place. Plants can also be preserved by leaving them on an undisturbed, gently sloping mound. To increase the chances for survival, it is best to limit grade changes and other soil disturbances to areas outside the dripline of the plant.

- *Excavations* – Protect trees and other plants when excavating for drainfields, power, water, and sewer lines. Where possible, the trenches should be routed around trees and large shrubs. When this is not possible, it is best to tunnel under them. This can be done with hand tools or with power augers. If it is not possible to route the trench around plants to be saved, then the following should be observed:
 - Cut as few roots as possible. When you have to cut, cut clean. Backfill the trench as soon as possible.
 - Tunnel beneath root systems as close to the center of the main trunk to preserve most of the important feeder roots.

Some problems that can be encountered with a few specific trees are:

- Maple, Dogwood, Red alder, Western hemlock, Western red cedar, and Douglas fir do not readily adjust to changes in environment and special care should be taken to protect these trees.
- The windthrow hazard of Pacific Silver Fir and Madrona is high, while that of Western hemlock is moderate. The danger of windthrow increases where dense stands have been thinned. Other

species (unless they are on shallow, wet soils less than 20 inches deep) have a low windthrow hazard.

- Cottonwoods, maples, and willows have water-seeking roots. These can cause trouble in sewer lines and infiltration fields. On the other hand, they thrive in high moisture conditions that other trees would not.
- Thinning operations in pure or mixed stands of Grand Fir, Pacific Silver Fir, Noble Fir, Sitka Spruce, Western Red Cedar, Western Hemlock, Pacific Dogwood, and Red Alder can cause serious disease problems. Disease can become established through damaged limbs, trunks, roots, and freshly cut stumps. Diseased and weakened trees are also susceptible to insect attack.

Maintenance Standards

- Inspect flagged and/or fenced areas regularly to make sure flagging or fencing has not been removed or damaged. If the flagging or fencing has been damaged or visibility reduced, it shall be repaired or replaced immediately and visibility restored.
- If tree roots have been exposed or injured, prune cleanly with an appropriate pruning saw or loppers directly above the damaged roots and recover with native soils. Treatment of sap flowing trees (fir, hemlock, pine, soft maples) is not advised as sap forms a natural healing barrier.

BMP C102: Buffer Zones

Purpose

An undisturbed area or strip of natural vegetation or an established suitable planting that will provide a living filter to reduce soil erosion and runoff velocities.

Conditions of Use

Natural buffer zones are used along streams, wetlands and other bodies of water that need protection from erosion and sedimentation. Vegetative buffer zones can be used to protect natural swales and can be incorporated into the natural landscaping of an area.

Critical-areas buffer zones should not be used as sediment treatment areas. These areas shall remain completely undisturbed. The city may expand the buffer widths temporarily to allow the use of the expanded area for removal of sediment.

Design and Installation Specifications

- Preserving natural vegetation or plantings in clumps, blocks, or strips is generally the easiest and most successful method.
- Leave all unstable steep slopes in natural vegetation.
- Mark clearing limits and keep all equipment and construction debris out of the natural areas. High visibility plastic fencing is the most effective method in protecting sensitive areas and buffers. Alternatively, wire-backed silt fence on steel posts is marginally effective. Flagging alone is typically not effective.
- Keep all excavations outside the dripline of trees and shrubs.
- Do not push debris or extra soil into the buffer zone area because it will cause damage from burying and smothering.
- Vegetative buffer zones for streams, lakes or other waterways shall be established by the city or other state or federal permits or approvals.

Maintenance Standards

- Inspect the area frequently to make sure flagging remains in place and the area remains undisturbed.

BMP C103: High Visibility Plastic Fence

Purpose

Fencing is intended to: (1) restrict clearing to approved limits; (2) prevent disturbance of sensitive areas, their buffers, and other areas required to be left undisturbed; (3) limit construction traffic to designated construction entrances or roads; and (4) protect areas where marking with survey tape may not provide adequate protection.

Conditions of Use

To establish clearing limits plastic fence may be used:

- At the boundary of sensitive areas, their buffers, and other areas required to be left uncleared
- As necessary to control vehicle access to and on the site.

Design and Installation Specifications

- High visibility plastic fence shall be composed of a high-density polyethylene material and shall be at least 4 feet in height. Posts for the fencing shall be steel or wood and placed every 6 feet on center (maximum) or as needed to ensure rigidity. The fencing shall be fastened to the post every 6 inches with a polyethylene tie. On long continuous lengths of fencing, a tension wire or rope shall be used as a top stringer to prevent sagging between posts. The fence color shall be high visibility orange. The fence tensile strength shall be 360 pounds/feet using the American Society for Testing and Materials (ASTM) D4595 testing method.
- Fences shall not be wired or stapled to trees.

Maintenance Standards

- If the fence has been damaged or visibility reduced, it shall be repaired or replaced immediately and visibility restored.

BMP C105: Stabilized Construction Entrance

Purpose

Construction entrances are stabilized to reduce the amount of sediment transported onto paved roads by vehicles or equipment by constructing a stabilized pad of quarry spalls at entrances to construction sites.

Conditions of Use

Construction entrances shall be stabilized wherever traffic will be leaving a construction site and traveling on paved roads or other paved areas within 1,000 feet of the site.

On large commercial, highway, and road projects, the designer should include enough extra materials in the contract to allow for additional stabilized entrances not shown in the initial Construction SWPPP. It is difficult to determine exactly where access to these projects will take place; additional materials will enable the contractor to install them where needed.

Design and Installation Specifications

See Attachments Section C, Detail 4.0 for details. Note: the 100 foot minimum length of the entrance shall be reduced to the maximum practicable size when the size or configuration of the site does not allow the full length (100 feet).

- A separation geotextile shall be placed under the spalls to prevent fine sediment from pumping up into the rock pad. The geotextile shall meet the following standards:
 - Grab Tensile Strength (ASTM D4751): 200 psi minimum
 - Grab Tensile Elongation (ASTM D4632): 30 percent maximum
 - Mullen Burst Strength (ASTM D3786-80a): 400 psi minimum
 - AOS (ASTM D4751): 20 to 45 (U.S. standard sieve size).
- Hog fuel (wood-based mulch) may be substituted for or combined with quarry spalls in areas that will not be used for permanent roads. Hog fuel is generally less effective at stabilizing construction entrances and should be used only at sites where the amount of traffic is very limited. Hog fuel is not recommended for entrance stabilization in urban areas. The effectiveness of hog fuel is highly variable and it generally requires more maintenance than quarry spalls. The inspector may at any time require the use of

quarry spalls if the hog fuel is not preventing sediment from being tracked onto pavement or if the hog fuel is being carried onto pavement. Hog fuel is prohibited in permanent roadbeds because organics in the subgrade soils cause degradation of the subgrade support over time.

- Fencing (see BMP C103) shall be installed as necessary to restrict traffic to the construction entrance.
- Whenever possible, the entrance shall be constructed on a firm, compacted subgrade. This can substantially increase the effectiveness of the pad and reduce the need for maintenance.

Maintenance Standards

- Quarry spalls (or hog fuel) shall be added if the pad is no longer in accordance with the specifications.
- If the entrance is not preventing sediment from being tracked onto pavement, then alternative measures to keep the streets free of sediment shall be used. This may include an increase in the dimensions of the entrance or the installation of a wheel wash.
- Any sediment that is tracked onto pavement shall be removed by shoveling or street sweeping. The sediment collected by sweeping shall be removed or stabilized on site. The pavement shall not be cleaned by washing down the street, except when sweeping is ineffective and there is a threat to public safety. If it is necessary to wash the streets, the construction of a small sump shall be considered. The sediment would then be washed into the sump where it can be controlled.
- Any quarry spalls that are loosened from the pad, which end up on the roadway shall be removed immediately.
- If vehicles are entering or exiting the site at points other than the construction entrance(s), fencing (see BMP C103) shall be installed to control traffic.
- Upon project completion and site stabilization, all construction accesses intended as permanent access for maintenance shall be permanently stabilized.

BMP C106: Wheel Wash

Purpose

Wheel washes reduce the amount of sediment transported onto paved roads by motor vehicles.

Conditions of Use

When a stabilized construction entrance (see BMP C105) is not preventing sediment from being tracked onto pavement

- Wheel washing is generally an effective BMP when installed with careful attention to topography. For example, a wheel wash can be detrimental if installed at the top of a slope abutting a right-of-way where the water from the dripping truck can run unimpeded into the street.
- Pressure washing combined with an adequately sized and surfaced pad with direct drainage to a large 10 x 10-foot sump can be very effective.

Design and Installation Specifications

Suggested details are shown in Figure 3.1. A minimum of 6 inches of asphalt treated base over crushed base material or 8 inches over a good subgrade is recommended to pave the wheel wash.

Use a low clearance truck to test the wheel wash before paving. Either a belly dump or lowboy will work well to test clearance.

Keep the water level from 12 to 14 inches deep to avoid damage to truck hubs and filling the truck tongues with water.

Midpoint spray nozzles are only needed in extremely muddy conditions.

Wheel wash systems should be designed with a small grade change, 6 to 12 inches for a 10-foot-wide pond, to allow sediment to flow to the low side of pond to help prevent resuspension of sediment. A drainpipe with a 2- to 3-foot riser should be installed on the low side of the pond to allow for easy cleaning and refilling. Polymers may be used to promote coagulation and flocculation in a closed-loop system.

Maintenance Standards

The wheel wash should start out the day with fresh water.

The washwater should be changed a minimum of once per day. On large earthwork jobs where more than 10 to 20 trucks per hour are expected, the washwater will need to be changed more often.

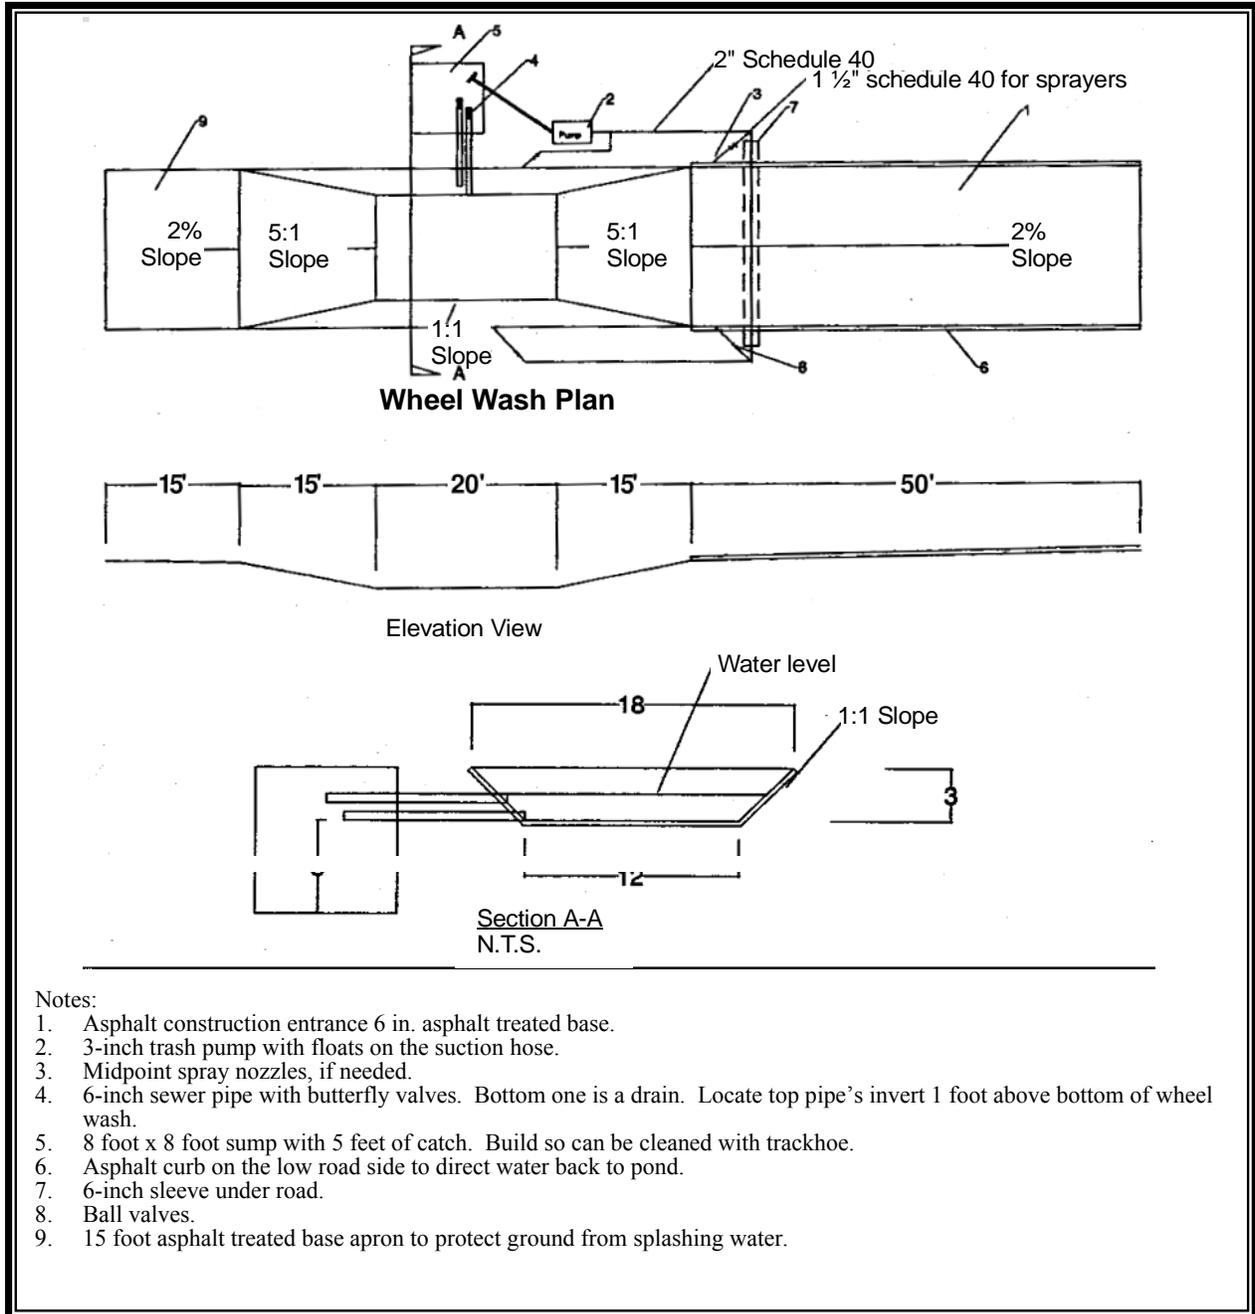


Figure 3.1. Wheel Wash.

Wheel wash or tire bath wastewater shall be controlled by pumping back on site to an approved infiltration facility, or otherwise must be prevented from discharging into systems tributary to state surface waters. Options include discharge to the sanitary sewer, or discharge to an approved offsite treatment system. For discharges to the sanitary sewer, permits must be obtained from the Gig Harbor Public Works Department at (253) 6170.

BMP C107: Construction Road/Parking Area Stabilization

Purpose

Stabilizing subdivision roads, parking areas and other onsite vehicle transportation routes immediately after grading reduces erosion caused by construction traffic or runoff.

Conditions of Use

- Roads or parking areas shall be stabilized wherever they are constructed, whether permanent or temporary, for use by construction traffic.
- Fencing (see BMP C103) shall be installed, if necessary, to limit the access of vehicles to only those roads and parking areas that are stabilized.

Design and Installation Specifications

- On areas that will receive asphalt as part of the project, install the first lift as soon as possible.
- A 6-inch depth of 2- to 4-inch crushed rock, gravel base, or crushed surfacing base course shall be applied immediately after grading or utility installation. A 4-inch course of asphalt treated base may also be used, or the road/parking area may be paved. It may also be possible to use cement or calcium chloride for soil stabilization. If cement or cement kiln dust is used for roadbase stabilization, pH monitoring and BMPs are necessary to evaluate and minimize the effects on stormwater. If the area will not be used for permanent roads, parking areas, or structures, a 6-inch depth of hog fuel may also be used, but this is likely to require more maintenance. Whenever possible, construction roads and parking areas shall be placed on a firm, compacted subgrade.
- Temporary road gradients shall not exceed 15 percent. Roadways shall be carefully graded to drain. Drainage ditches shall be provided on each side of the roadway in the case of a crowned section, or on one side in the case of a super-elevated section. Drainage ditches shall be directed to a sediment control BMP.
- Rather than relying on ditches, it may also be possible to grade the road so that runoff sheet-flows into a heavily vegetated area with a well-developed topsoil. Landscaped areas are not adequate. If this area has at least 50 feet of vegetation, then it is generally preferable to use the vegetation to treat runoff, rather than a sediment pond or trap. The 50 feet shall not include wetlands. If

runoff is allowed to sheetflow through adjacent vegetated areas, it is vital to design the roadways and parking areas so that no concentrated runoff is created.

- Storm drain inlets shall be protected to prevent sediment-laden water entering the stormwater drainage system (see BMP C220).

Maintenance Standards

- Inspect stabilized areas regularly, especially after large storm events
- Crushed rock, gravel base, hog fuel, etc. shall be added as required to maintain a stable driving surface and to stabilize any areas that have eroded
- Following construction, these areas shall be restored to preconstruction condition or better to prevent future erosion.

BMP C120: Temporary and Permanent Seeding

Purpose

Seeding is intended to reduce erosion by stabilizing exposed soils. A well-established vegetative cover is one of the most effective methods of reducing erosion.

Conditions of Use

- Seeding may be used throughout the project on disturbed areas that have reached final grade or that will remain unworked for more than 30 days.
- Channels that will be vegetated should be installed before major earthwork and hydroseeded with a Bonded Fiber Matrix. The vegetation should be well established (i.e., 75 percent cover) before water is allowed to flow in the ditch. With channels that will have high flows, erosion control blankets should be installed over the hydroseed. If vegetation cannot be established from seed before water is allowed in the ditch, sod should be installed in the bottom of the ditch over hydromulch and blankets.
- Retention/detention ponds should be seeded as required.
- Mulch is required at all times because it protects seeds from heat, moisture loss, and transport due to runoff.
- All disturbed areas shall be reviewed in late August to early September and all seeding should be completed by the end of September. Otherwise, vegetation will not establish itself enough to provide more than average protection.
- At final site stabilization, all disturbed areas not otherwise vegetated or stabilized shall be seeded and mulched. Final stabilization means the completion of all soil disturbing activities at the site and the establishment of a permanent vegetative cover, or equivalent permanent stabilization measures (such as pavement, riprap, gabions or, geotextiles) which will prevent erosion.

Design and Installation Specifications

- Seeding should be done during those seasons most conducive to growth and will vary with the climate conditions of the region. Local experience should be used to determine the appropriate seeding periods.

- The optimum seeding windows for western Washington are April 1 through June 30 and September 1 through October 1. Seeding that occurs between July 1 and August 30 will require irrigation until 75 percent grass cover is established. Seeding that occurs between October 1 and March 30 will require a mulch or plastic cover until 75 percent grass cover is established.
- To prevent seed from being washed away, confirm that all required surface water control measures have been installed.
- The seedbed should be firm and rough. All soil should be roughened no matter what the slope. If compaction is required for engineering purposes, slopes must be track walked before seeding. Backblading or smoothing of slopes greater than 4:1 is not allowed if they are to be seeded.
- New and more effective restoration-based landscape practices rely on deeper incorporation than that provided by a simple single-pass rototilling treatment. Wherever practical the subgrade should be initially ripped to improve long-term permeability, infiltration, and water inflow qualities. At a minimum, permanent areas shall use soil amendments to achieve organic matter and permeability performance defined in engineered soil/landscape systems. For systems that are deeper than 8 inches the rototilling process should be done in multiple lifts, or the prepared soil system shall be prepared properly and then placed to achieve the specified depth.
- Organic matter is the most appropriate form of “fertilizer” because it provides nutrients (including nitrogen, phosphorus, and potassium) in the least water-soluble form. A natural system typically releases 2 to 10 percent of its nutrients annually. Chemical fertilizers have since been formulated to simulate what organic matter does naturally.
- In general, 10-4-6 N-P-K (nitrogen-phosphorus-potassium) fertilizer can be used at a rate of 90 pounds per acre. Slow-release fertilizers should always be used because they are more efficient and have fewer environmental impacts. It is recommended that areas being seeded for final landscaping conduct soil tests to determine the exact type and quantity of fertilizer needed. This will prevent the over-application of fertilizer. Fertilizer should not be added to the hydromulch machine and agitated more than 20 minutes before it is to be used. If agitated too much, the slow-release coating is destroyed.
- There are numerous products available on the market that takes the place of chemical fertilizers. These include several with seaweed

extracts that are beneficial to soil microbes and organisms. If 100 percent cottonseed meal is used as the mulch in hydroseed, chemical fertilizer may not be necessary. Cottonseed meal is a good source of long-term, slow-release, available nitrogen.

- Hydroseed applications shall include a minimum of 1,500 pounds per acre of mulch with 3 percent tackifier. Mulch may be made up of 100 percent: cottonseed meal; fibers made of wood, recycled cellulose, hemp, and kenaf; compost; or blends of these. Tackifier shall be plant-based, such as guar or alpha plantago, or chemical-based such as polyacrylamide or polymers. Any mulch or tackifier product used shall be installed per manufacturer's instructions. Generally, mulches come in 40 to 50 pound bags. Seed and fertilizer are added at time of application.
- Mulch is always required for seeding. Mulch can be applied on top of the seed or simultaneously by hydroseeding.
- On steep slopes, BFM or Mechanically Bonded Fiber Matrix (MBFM) products should be used. BFM/MBFM products are applied at a minimum rate of 3,000 pounds per acre of mulch with approximately 10 percent tackifier. Application is made so that a minimum of 95 percent soil coverage is achieved. Numerous products are available commercially and should be installed per manufacturer's instructions. Most products require 24 to 36 hours to cure before a rainfall and cannot be installed on wet or saturated soils. Generally, these products come in 40 to 50 pound bags and include all necessary ingredients except for seed and fertilizer.
- BFMs and MBFMs have some advantages over blankets:
 - No surface preparation required
 - Can be installed via helicopter in remote areas
 - On slopes steeper than 2.5:1, blanket installers may need to be roped and harnessed for safety
 - They are at least \$1,000 per acre cheaper installed.
- In most cases, the shear strength of blankets is not a factor when used on slopes, only when used in channels. BFMs and MBFMs are good alternatives to blankets in most situations where vegetation establishment is the goal.
 - When installing seed via hydroseeding operations, only about one-third of the seed actually ends up in contact with the soil

surface. This reduces the ability to establish a good stand of grass quickly. One way to overcome this is to increase seed quantities by up to 50 percent.

- Vegetation establishment can also be enhanced by dividing the hydromulch operation into two phases:
 - Phase 1 – Install all seed and fertilizer with 25 to 30 percent mulch and tackifier onto soil in the first lift
 - Phase 2 – Install the rest of the mulch and tackifier over the first lift.
- An alternative is to install the mulch, seed, fertilizer, and tackifier in one lift. Then, spread or blow straw over the top of the hydromulch at a rate of about 800 to 1,000 pounds per acre. Hold straw in place with a standard tackifier. Both of these approaches will increase cost moderately but will greatly improve and enhance vegetative establishment. The increased cost may be offset by the reduced need for:
 - Irrigation
 - Reapplication of mulch
 - Repair of failed slope surfaces.
- This technique works with standard hydromulch (1,500 pounds per acre minimum) and BFM/MBFMs (3,000 pounds per acre minimum).
- Areas to be permanently landscaped shall provide healthy topsoil that reduces the need for fertilizers, improves overall topsoil quality, provides for better vegetal health and vitality, improves hydrologic characteristics, and reduces the need for irrigation. This can be accomplished in a number of ways:
 - Recent research has shown that the best method to improve till soils is to amend these soils with compost. The optimum mixture is approximately two parts soil to one part compost. This equates to 4 inches of compost mixed to a depth of 12 inches in till soils. Increasing the concentration of compost beyond this level can have negative effects on vegetal health, while decreasing the concentrations can reduce the benefits of amended soils. Please note: The compost should meet specifications for Grade A quality compost in Ecology Publication 94-038.

- Other soils, such as gravel or cobble outwash soils, may require different approaches. Organics and fines easily migrate through the loose structure of these soils. Therefore, the importation of at least 6 inches of quality topsoil, underlain by some type of filter fabric to prevent the migration of fines, may be more appropriate for these soils.
- Areas that already have good topsoil, such as undisturbed areas, do not require soil amendments.
- Areas that will be seeded only and not landscaped may need compost or meal-based mulch included in the hydroseed in order to establish vegetation. Native topsoil should be reinstalled on the disturbed soil surface before application.
- Seed that is installed as a temporary measure may be installed by hand if it will be covered by straw, mulch, or topsoil. Seed that is installed as a permanent measure may be installed by hand on small areas (usually less than 1 acre) that will be covered with mulch, topsoil, or erosion blankets. The seed mixes listed below include recommended mixes for both temporary and permanent seeding. These mixes, with the exception of the wetland mix, shall be applied at a rate of 120 pounds per acre. This rate can be reduced if soil amendments or slow-release fertilizers are used. Local suppliers or the local conservation district should be consulted for their recommendations because the appropriate mix depends on a variety of factors, including location, exposure, soil type, slope, and expected foot traffic. Alternative seed mixes approved by the city may be used.
- Table 3.1 represents the standard mix for those areas where just a temporary vegetative cover is required.

Table 3.1. Temporary Erosion Control Seed Mix.

	% Weight	% Purity	% Germination
Chewings or annual blue grass <i>Festuca rubra</i> var. <i>commutata</i> or <i>Poa anna</i>	40	98	90
Perennial rye <i>Lolium perenne</i>	50	98	90
Redtop or colonial bentgrass <i>Agrostis alba</i> or <i>Agrostis tenuis</i>	5	92	85
White dutch clover <i>Trifolium repens</i>	5	98	90

- Table 3.2 provides just one recommended possibility for landscaping seed.

Table 3.2. Landscaping Seed Mix.

	% Weight	% Purity	% Germination
Perennial rye blend <i>Lolium perenne</i>	70	98	90
Chewings and red fescue blend <i>Festuca rubra</i> var. <i>commutata</i> or <i>Festuca rubra</i>	30	98	90

- This turf seed mix in Table 3.3 is for dry situations where there is no need for much water. The advantage is that this mix requires very little maintenance.

Table 3.3. Low-Growing Turf Seed Mix.

	% Weight	% Purity	% Germination
Dwarf tall fescue (several varieties) <i>Festuca arundinacea</i> var.	45	98	90
Dwarf perennial rye (Barclay) <i>Lolium perenne</i> var. <i>barclay</i>	30	98	90
Red fescue <i>Festuca rubra</i>	20	98	90
Colonial bentgrass <i>Agrostis tenuis</i>	5	98	90

- Table 3.4 presents a mix recommended for bioswales and other intermittently wet areas.

Table 3.4. Bioswale Seed Mix. ^a

	% Weight	% Purity	% Germination
Tall or meadow fescue <i>Festuca arundinacea</i> or <i>Festuca elatior</i>	75-80	98	90
Seaside/Creeping bentgrass <i>Agrostis palustris</i>	10-15	92	85
Redtop bentgrass <i>Agrostis alba</i> or <i>Agrostis gigantea</i>	5-10	90	80

^a Modified Briargreen, Inc. Hydroseeding Guide Wetlands Seed Mix

- The seed mix shown in Table 3.5 is a recommended low-growing, relatively non-invasive seed mix appropriate for very wet areas that are not regulated wetlands. Other mixes may be appropriate,

depending on the soil type and hydrology of the area. Recent research suggests that bentgrass (*agrostis* sp.) should be emphasized in wet-area seed mixes. Apply this mixture at a rate of 60 pounds per acre.

Table 3.5. Wet Area Seed Mix. ^a

	% Weight	% Purity	% Germination
Tall or meadow fescue <i>Festuca arundinacea</i> or <i>Festuca elatior</i>	60-70	98	90
Seaside/Creeping bentgrass <i>Agrostis palustris</i>	10-15	98	85
Meadow foxtail <i>Alepocurus pratensis</i>	10-15	90	80
Alsike clover <i>Trifolium hybridum</i>	1-6	98	90
Redtop bentgrass <i>Agrostis alba</i>	1-6	92	85

^a Modified Briargreen, Inc. Hydroseeding Guide Wetlands Seed Mix

- The meadow seed mix in Table 3.6 is recommended for areas that will be maintained infrequently or not at all and where colonization by native plants is desirable. Likely applications include rural road and utility right-of-way. Seeding should take place in September or very early October in order to obtain adequate establishment prior to the winter months. The appropriateness of clover in the mix may need to be considered, as this can be a fairly invasive species. If the soil is amended, the addition of clover may not be necessary.

Table 3.6. Meadow Seed Mix.

	% Weight	% Purity	% Germination
Redtop or Oregon bentgrass <i>Agrostis alba</i> or <i>Agrostis oregonensis</i>	20	92	85
Red fescue <i>Festuca rubra</i>	70	98	90
White dutch clover <i>Trifolium repens</i>	10	98	90

Maintenance Standards

- Any seeded areas that fail to establish at least 80 percent cover (100 percent cover for areas that receive sheet or concentrated flows) shall be reseeded. If reseeding is ineffective, an alternate

method, such as sodding, mulching, or nets/blankets, shall be used. If winter weather prevents adequate grass growth, this time limit may be relaxed at the discretion of the city when sensitive areas would otherwise be protected.

- After adequate cover is achieved, any areas that experience erosion shall be reseeded and protected by mulch. If the erosion problem is drainage related, the problem shall be fixed and the eroded area reseeded and protected by mulch.
- Seeded areas shall be supplied with adequate moisture, but not watered to the extent that it causes runoff.

BMP C121: Mulching

Purpose

The purpose of mulching soils is to provide immediate temporary protection from erosion. Mulch also enhances plant establishment by conserving moisture, holding fertilizer, seed, and topsoil in place, and moderating soil temperatures. There is an enormous variety of mulches that can be used. Only the most common types are discussed in this section.

Conditions of Use

As a temporary cover measure, mulch should be used:

- On disturbed areas that require cover measures for less than 30 days
- As a cover for seed during the wet season and during the hot summer months
- During the wet season on slopes steeper than 3H:1V with more than 10 feet of vertical relief
- Mulch may be applied at any time of the year and must be refreshed periodically.

Design and Installation Specifications

For mulch materials, application rates, and specifications, see Table 3.7. Note: Thicknesses may be increased for disturbed areas in or near sensitive areas or other areas highly susceptible to erosion.

Mulch used within the ordinary high-water mark of surface waters should be selected to minimize potential flotation of organic matter. Composted organic materials have higher specific gravities (densities) than straw, wood, or chipped material.

Maintenance Standards

- The thickness of the cover must be maintained
- Any areas that experience erosion shall be remulched and/or protected with a net or blanket. If the erosion problem is drainage related, then the problem shall be fixed and the eroded area remulched.

Table 3.7. Mulch Standards and Guidelines.

Mulch Material	Quality Standards	Application Rates	Remarks
Straw	Air-dried; free from undesirable seed and coarse material.	2"-3" thick; 5 bales per 1,000 sf or 2-3 tons per acre.	Cost-effective protection when applied with adequate thickness. Hand-application generally requires greater thickness than blown straw. The thickness of straw may be reduced by half when used in conjunction with seeding. In windy areas straw must be held in place by crimping, using a tackifier, or covering with netting. Blown straw always has to be held in place with a tackifier as even light winds will blow it away. Straw, however, has several deficiencies that should be considered when selecting mulch materials. It often introduces and/or encourages the propagation of weed species and it has no significant long-term benefits. Straw should be used only if mulches with long-term benefits are unavailable locally. It should also not be used within the ordinary high-water elevation of surface waters (due to flotation).
Hydromulch	No growth inhibiting factors.	Approx. 25-30 lbs per 1,000 sf or 1,500 – 2,000 lbs per acre.	Shall be applied with hydromulcher. Shall not be used without seed and tackifier unless the application rate is at least doubled. Fibers longer than about 0.75 to 1-inch clog hydromulch equipment. Fibers should be kept to less than 0.75 inch.
Composted Mulch and Compost	No visible water or dust during handling. Must be purchased from supplier with Solid Waste Handling Permit (unless exempt).	2" thick min.; approx. 100 tons per acre (approx. 800 lbs per yard).	More effective control can be obtained by increasing thickness to 3 inches. Excellent mulch for protecting final grades until landscaping because it can be directly seeded or tilled into soil as an amendment. Composted mulch has a coarser size gradation than compost. It is more stable and practical to use in wet areas and during rainy weather conditions.
Chipped Site Vegetation	Average size shall be several inches. Gradations from fines to 6 inches in length for texture, variation, and interlocking properties.	2" minimum thickness.	This is a cost-effective way to dispose of debris from clearing and grubbing, and it eliminates the problems associated with burning. Generally, it should not be used on slopes above approx. 10 percent because of its tendency to be transported by runoff. It is not recommended within 200 feet of surface waters. If seeding is expected shortly after mulch, the decomposition of the chipped vegetation may tie up nutrients important to grass establishment.
Wood-Based Mulch	No visible water or dust during handling. Must be purchased from a supplier with a Solid Waste Handling Permit or one exempt from solid waste regulations.	2" thick; approx. 100 tons per acre (approx. 800 lbs. per cubic yard).	This material is often called "hog or hogged fuel." It is usable as a material for Stabilized Construction Entrances (BMP C105) and as a mulch. The use of mulch ultimately improves the organic matter in the soil. Special caution is advised regarding the source and composition of wood-based mulches. Its preparation typically does not provide any weed seed control, so evidence of residual vegetation in its composition or known inclusion of weed plants or seeds should be monitored and prevented (or minimized).

BMP C122: Nets and Blankets

Purpose

Erosion control nets and blankets are intended to prevent erosion and hold seed and mulch in place on steep slopes and in channels so that vegetation can become well established. In addition, some nets and blankets can be used to permanently reinforce turf to protect drainage ways during high flows. Nets (commonly called matting) are strands of material woven into an open, but high-tensile strength net (for example, coconut fiber matting). Blankets are strands of material that are not tightly woven, but instead form a layer of interlocking fibers, typically held together by a biodegradable or photodegradable netting (for example, excelsior or straw blankets). They generally have lower tensile strength than nets, but cover the ground more completely. Coir (coconut fiber) fabric comes as both nets and blankets.

Conditions of Use

Erosion control nets and blankets should be used:

- To aid permanent vegetated stabilization of slopes 2H:1V or greater and with more than 10 feet of vertical relief
- For drainage ditches and swales (highly recommended). The application of appropriate netting or blanket to drainage ditches and swales can protect bare soil from channelized runoff while vegetation is established. Nets and blankets also can capture a great deal of sediment due to their open, porous structure. Synthetic nets and blankets can be used to permanently stabilize channels and may provide a cost-effective, environmentally preferable alternative to riprap. One-hundred percent synthetic blankets manufactured for use in ditches may be easily reused as temporary ditch liners.

Disadvantages of blankets include:

- Surface preparation required
- On slopes steeper than 2.5H:1V, blanket installers may need to be roped and harnessed for safety
- They cost at least \$4,000 to \$6,000 per acre installed.

Advantages of blankets include:

- Can be installed without mobilizing special equipment
- Can be installed by anyone with minimal training

- Can be installed in stages or phases as the project progresses
- Seed and fertilizer can be hand-placed by the installers as they progress down the slope
- Can be installed in any weather
- There are numerous types of blankets that can be designed with various parameters in mind. Those parameters include: fiber blend, mesh strength, longevity, biodegradability, cost, and availability.

Design and Installation Specifications

- See Figure 3.2 and Attachments Section C, Detail 16.0 for typical orientation and installation of blankets used in channels and as slope protection. Note: These are typical only; all blankets must be installed per manufacturer's installation instructions.
- Installation is critical to the effectiveness of these products. If good ground contact is not achieved, runoff can concentrate under the product, resulting in significant erosion.
- Installation of Blankets on Slopes:
 - Complete final grade and track walk up and down the slope.
 - Install hydromulch with seed and fertilizer.
 - Dig a small trench, approximately 12 inches wide by 6 inches deep along the top of the slope.
 - Install the leading edge of the blanket into the small trench and staple approximately every 18 inches. NOTE: Staples are metal, U-shaped, and a minimum of 6 inches long. Longer staples are used in sandy soils. Biodegradable stakes are also available.
 - Roll the blanket slowly down the slope as installer walks backwards. NOTE: The blanket rests against the installer's legs. Staples are installed as the blanket is unrolled. It is critical that the proper staple pattern is used for the blanket being installed. The blanket is not to be allowed to roll down the slope on its own as this stretches the blanket making it impossible to maintain soil contact. In addition, no one is allowed to walk on the blanket after it is in place.

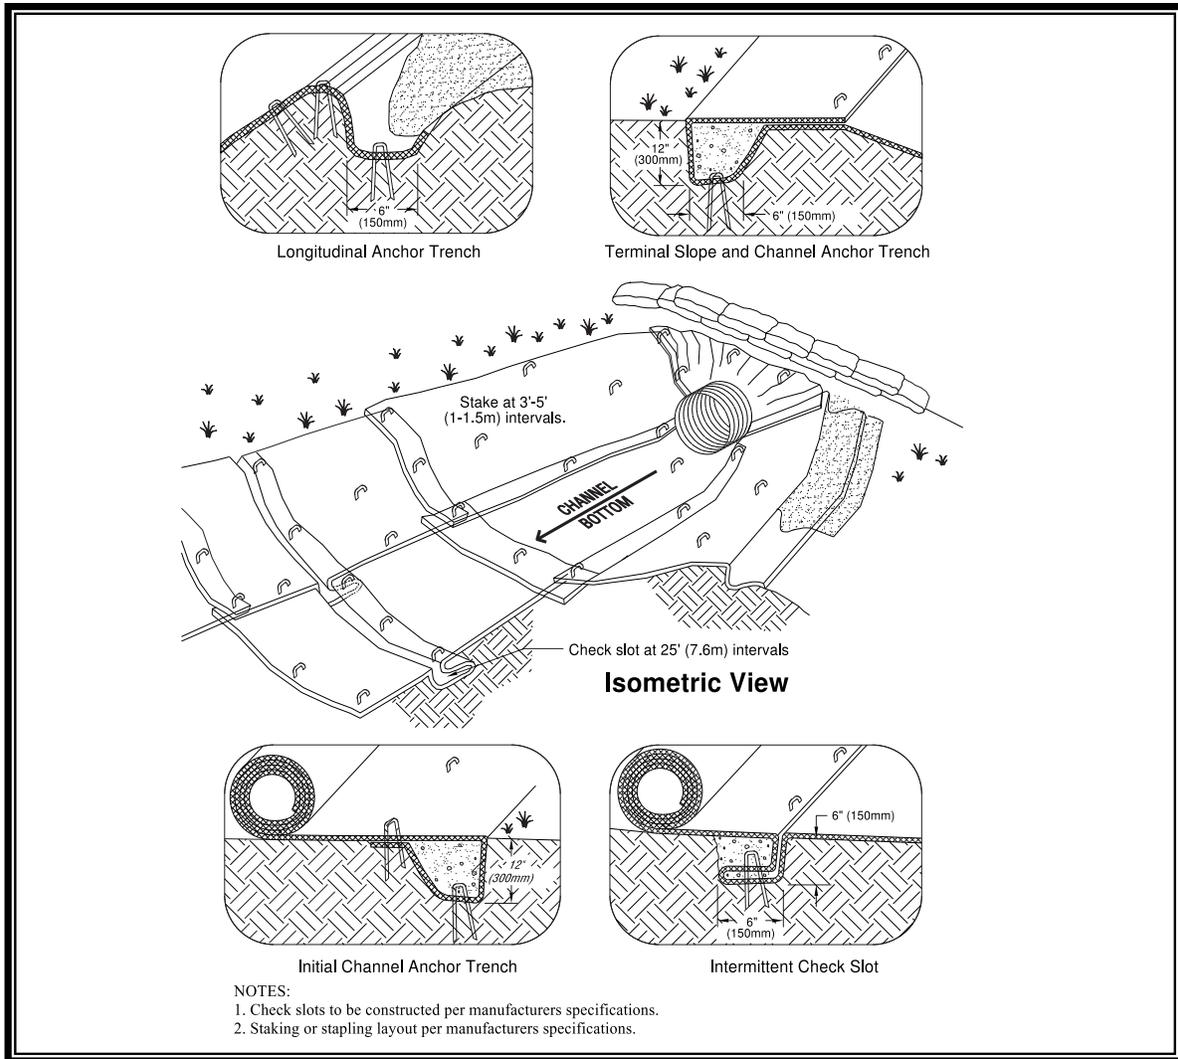


Figure 3.2. Channel Installation.

- If the blanket is not long enough to cover the entire slope length, the trailing edge of the upper blanket should overlap the leading edge of the lower blanket and be stapled. On steeper slopes, this overlap should be installed in a small trench, stapled, and covered with soil.
- With the variety of products available, it is impossible to cover all the details of appropriate use and installation. Therefore, it is critical that the design engineer consults the manufacturer's information and that a site visit takes place in order to insure that the product specified is appropriate. Information is also available at the following web sites:
 - WSDOT: (<<http://www.wsdot.wa.gov/eesc/environmental/>>)

- Texas Transportation Institute:
(<http://www.dot.state.tx.us/insdot/orgchart/cmd/erosion/contents.htm>)
- Jute matting must be used in conjunction with mulch (BMP C121). Excelsior, woven straw blankets and coir (coconut fiber) blankets may be installed without mulch. There are many other types of erosion control nets and blankets on the market that may be appropriate in certain circumstances.
- In general, most nets (e.g., jute matting) require mulch in order to prevent erosion because they have a fairly open structure. Blankets typically do not require mulch because they usually provide complete protection of the surface.
- Extremely steep, unstable, wet, or rocky slopes are often appropriate candidates for use of synthetic blankets, as are riverbanks, beaches and other high-energy environments. If synthetic blankets are used, the soil should be hydromulched first.
- One-hundred percent biodegradable blankets are available for use in sensitive areas. These organic blankets are usually held together with a paper or fiber mesh and stitching which may last up to a year.
- Most netting used with blankets is photodegradable, meaning they break down under sunlight (not UV stabilized). However, this process can take months or years even under bright sun. Once vegetation is established, sunlight does not reach the mesh. It is not uncommon to find non-degraded netting still in place several years after installation. This can be a problem if maintenance requires the use of mowers or ditch cleaning equipment. In addition, birds and small animals can become trapped in the netting.

Maintenance Standards

- Good contact with the ground must be maintained, and erosion must not occur beneath the net or blanket
- Any areas of the net or blanket that are damaged or not in close contact with the ground shall be repaired and stapled
- If erosion occurs due to poorly controlled drainage, the problem shall be fixed and the eroded area protected.

BMP C123: Plastic Covering

Purpose

Plastic covering provides immediate, short-term erosion protection to slopes and disturbed areas.

Conditions of Use

- Plastic covering may be used on disturbed areas that require cover measures for less than 30 days, except as stated below.
- Plastic is particularly useful for protecting cut and fill slopes and stockpiles. Note: The relatively rapid breakdown of most polyethylene sheeting makes it unsuitable for long-term (greater than 6 months) applications.
- Clear plastic sheeting can be used over newly-seeded areas to create a greenhouse effect and encourage grass growth if the hydroseed was installed too late in the season to establish 75 percent grass cover, or if the wet season started earlier than normal. Clear plastic should not be used for this purpose during the summer months because the resulting high temperatures can kill the grass.
- Due to rapid runoff caused by plastic sheeting, this method shall not be used upslope of areas that might be adversely impacted by concentrated runoff. Such areas include steep and/or unstable slopes.
- While plastic is inexpensive to purchase, the added cost of installation, maintenance, removal, and disposal make this an expensive material, up to \$1.50 to \$2 per square yard.
- Whenever plastic is used to protect slopes, water collection measures must be installed at the base of the slope. These measures include plastic-covered berms, channels, and pipes used to convey clean rainwater away from bare soil and disturbed areas. At no time is clean runoff from a plastic covered slope to be mixed with dirty runoff from a project.
- Other uses for plastic include:
 - Temporary ditch liner
 - Pond liner in temporary sediment pond
 - Liner for bermed temporary fuel storage area if plastic is not reactive to the type of fuel being stored

- Emergency slope protection during heavy rains
- Temporary drainpipe (“elephant trunk”) used to direct water.

Design and Installation Specifications

- Plastic slope cover must be installed as follows:
 - Run plastic up and down slope, not across slope
 - Plastic may be installed perpendicular to a slope if the slope length is less than 10 feet
 - Minimum of 8-inch overlap at seams
 - On long or wide slopes, or slopes subject to wind, all seams should be taped
 - Place plastic into a small (12-inch wide by 6-inch deep) slot trench at the top of the slope and backfill with soil to keep water from flowing underneath
 - Place sand filled burlap or geotextile bags every 3 to 6 feet along seams and pound a wooden stake through each to hold them in place
 - Inspect plastic for rips, tears, and open seams regularly and repair immediately. This prevents high velocity runoff from contacting bare soil which causes extreme erosion
 - Sandbags may be lowered into place tied to ropes. However, all sandbags must be staked in place.
- Plastic sheeting shall have a minimum thickness of 0.06 millimeters.
- If erosion at the toe of a slope is likely, a gravel berm, riprap, or other suitable protection shall be installed at the toe of the slope in order to reduce the velocity of runoff.

Maintenance Standards

- Torn sheets must be replaced and open seams repaired
- If the plastic begins to deteriorate due to ultraviolet radiation, it must be completely removed and replaced
- When the plastic is no longer needed, it shall be completely removed.

BMP C124: Sodding

Purpose

The purpose of sodding is to establish permanent turf for immediate erosion protection and to stabilize drainage ways where concentrated overland flow will occur.

Conditions of Use

Sodding may be used in the following areas:

- Disturbed areas that require short-term or long-term cover
- Disturbed areas that require immediate vegetative cover
- All waterways that require vegetative lining. Waterways may also be seeded rather than sodded, and protected with a net or blanket.

Design and Installation Specifications

Sod shall be free of weeds, of uniform thickness (approximately 1-inch thick), and shall have a dense root mat for mechanical strength.

The following steps are recommended for sod installation:

- Shape and smooth the surface to final grade in accordance with the approved grading plan. The swale needs to be overexcavated 4 to 6 inches below design elevation to allow room for placing soil amendment and sod.
- Amend 4 inches (minimum) of compost into the top 8 inches of the soil if the organic content of the soil is less than 10 percent or the permeability is less than 0.6 inches per hour. Compost used should meet Ecology publication 94-038 specifications for Grade A quality compost.
- Fertilize according to the supplier's recommendations.
- Work lime and fertilizer 1 to 2 inches into the soil, and smooth the surface.
- Lay strips of sod beginning at the lowest area to be sodded and perpendicular to the direction of water flow. Wedge strips securely into place. Square the ends of each strip to provide for a close, tight fit. Stagger joints at least 12 inches. Staple on slopes steeper than 3H:1V. Staple the upstream edge of each sod strip.
- Roll the sodded area and irrigate.

- When sodding is carried out in alternating strips or other patterns, seed the areas between the sod immediately after sodding.

Maintenance Standards

If the grass is unhealthy, the cause shall be determined and appropriate action taken to reestablish a healthy groundcover. If it is impossible to establish a healthy groundcover due to frequent saturation, instability, or some other cause, the sod shall be removed, the area seeded with an appropriate mix, and protected with a net or blanket.

BMP C125: Topsoiling

Purpose

The purpose is to provide a suitable growth medium for final site stabilization with vegetation. While not a permanent cover practice in itself, topsoiling is an integral component of providing permanent cover in those areas where there is an unsuitable soil surface for plant growth. Native soils and disturbed soils that have been organically amended not only retain much more stormwater, but they also serve as effective biofilters for urban pollutants and, by supporting more vigorous plant growth, reduce the water, fertilizer and pesticides needed to support installed landscapes. Topsoil does not include any subsoils but only the material from the top several inches including organic debris.

Conditions of Use

- Native soils should be left undisturbed to the maximum extent practicable. Native soils disturbed during clearing and grading should be restored, to the maximum extent practicable, to a condition where moisture-holding capacity is equal to or better than the original site conditions. This criterion can be met by using onsite native topsoil, incorporating amendments into onsite soil, or importing blended topsoil.
- Topsoiling is a required procedure when establishing vegetation on shallow soils, and soils of critically low pH (high acid) levels.
- Stripping of existing, properly functioning soil system and vegetation for the purpose of topsoiling during construction is not acceptable. If an existing soil system is functioning properly it shall be preserved in its undisturbed and uncompacted condition.
- Depending on where the topsoil comes from, or what vegetation was on site before disturbance, invasive plant seeds may be included and could cause problems for establishing native plants, landscaped areas, or grasses.
- Topsoil from the site will contain mycorrhizal bacteria that are necessary for healthy root growth and nutrient transfer. These native mycorrhiza are acclimated to the site and will provide optimum conditions for establishing grasses. Commercially available mycorrhiza products should be used when topsoil is brought in from off site.

Design and Installation Specifications

If topsoiling is to be done, the following items should be considered:

- Maximize the depth of the topsoil wherever possible to provide the maximum possible infiltration capacity and beneficial growth medium. Topsoil depth shall be at least 8 inches with a minimum organic content of 10 percent dry weight and pH between 6.0 and 8.0 or matching the pH of the undisturbed soil. This can be accomplished either by returning native topsoil to the site and/or incorporating organic amendments. Organic amendments should be incorporated to a minimum 8-inch depth except where tree roots or other natural features limit the depth of incorporation. Subsoils below the 12-inch depth should be scarified at least 2 inches to avoid stratified layers, where feasible. The decision to either layer topsoil over a subgrade or incorporate topsoil into the underlying layer may vary depending on the planting specified.
- If blended topsoil is imported, then fines should be limited to 25 percent passing through a 200 sieve.
- The final composition and construction of the soil system will result in a natural selection or favoring of certain plant species over time. For example, recent practices have shown that incorporation of topsoil may favor grasses, while layering with mildly acidic, high-carbon amendments may favor more woody vegetation.
- Locate the topsoil stockpile so that it meets specifications and does not interfere with work on the site. It may be possible to locate more than one pile in proximity to areas where topsoil will be used.
- Allow sufficient time in scheduling for topsoil to be spread prior to seeding, sodding, or planting.
- Care must be taken not to apply to subsoil if the two soils have contrasting textures. Sandy topsoil over clayey subsoil is a particularly poor combination, as water creeps along the junction between the soil layers and causes the topsoil to slough.
- If topsoil and subsoil are not properly bonded, water will not infiltrate the soil profile evenly and it will be difficult to establish vegetation. The best method to prevent a lack of bonding is to actually work the topsoil into the layer below for a depth of at least 6 inches.
- Ripping or restructuring the subgrade may also provide additional benefits regarding the overall infiltration and interflow dynamics of the soil system.
- Field exploration of the site shall be made to determine if there is surface soil of sufficient quantity and quality to justify stripping.

Topsoil shall be friable and loamy (loam, sandy loam, silt loam, sandy clay loam, and clay loam). Areas of natural groundwater recharge should be avoided.

- Stripping shall be confined to the immediate construction area. A 4- to 6-inch stripping depth is common, but depth may vary depending on the particular soil. All surface runoff control structures shall be in place prior to stripping.

Stockpiling of topsoil shall occur in the following manner:

- Side slopes of the stockpile shall not exceed 2:1.
- An interceptor dike with gravel outlet and silt fence shall surround all topsoil stockpiles between October 1 and April 30. Between May 1 and September 30, an interceptor dike with gravel outlet and silt fence shall be installed if the stockpile will remain in place for a longer period of time than active construction grading.
- Erosion control seeding or covering with clear plastic or other mulching materials of stockpiles shall be completed within 2 days (October 1 through April 30) or 7 days (May 1 through September 30) of the formation of the stockpile. Native topsoil stockpiles shall not be covered with plastic.
- Topsoil shall not be placed while in a frozen or muddy condition, when the subgrade is excessively wet, or when conditions exist that may otherwise be detrimental to proper grading or proposed sodding or seeding.
- Previously established grades on the areas to be topsoiled shall be maintained according to the approved plan.
- When native topsoil is to be stockpiled and reused the following should apply to ensure that the mycorrhizal bacterial, earthworms, and other beneficial organisms will not be destroyed:
 - Topsoil is to be reinstalled within 4 to 6 weeks
 - Topsoil is not to become saturated with water
 - Plastic cover is not allowed.

Maintenance Standards

Inspect stockpiles regularly, especially after large storm events. Stabilize any areas that have eroded.

BMP C126: Polyacrylamide for Soil Erosion Protection

Purpose

Polyacrylamide (PAM) is used on construction sites to prevent soil erosion.

Applying PAM to bare soil in advance of a rain event significantly reduces erosion and controls sediment in two ways. First, PAM increases the soil's available pore volume, thus increasing infiltration through flocculation and reducing the quantity of stormwater runoff. Second, it increases flocculation of suspended particles and aids in their deposition, thus reducing stormwater runoff turbidity and improving water quality.

Conditions of Use

PAM shall not be directly applied to water or allowed to enter a water body.

Some PAMs are more toxic and carcinogenic than others. Only the most environmentally safe PAM products should be used.

The specific PAM copolymer formulation must be anionic. Cationic PAM shall not be used in any application because of known aquatic toxicity problems. Only the highest drinking water grade PAM, certified for compliance with ANSI/NSF Standard 60 for drinking water treatment, will be used for soil applications. Recent media attention and high interest in PAM has resulted in some entrepreneurial exploitation of the term "polymer." All PAM are polymers, but not all polymers are PAM, and not all PAM products comply with ANSI/NSF Standard 60. PAM use shall be reviewed and approved by the city. The Washington State Department of Transportation (WSDOT) has listed approved PAM products on their Web site.

In areas that drain to a sediment pond, PAM can be applied to bare soil under the following conditions:

- During rough grading operations
- Staging areas
- Balanced cut and fill earthwork
- Haul roads prior to placement of crushed rock surfacing
- Compacted soil roadbase
- Stockpiles
- After final grade and before paving or final seeding and planting

- Pit sites
- Sites having a winter shut down. In the case of winter shut down, or where soil will remain unworked for several months, PAM should be used together with mulch.

Design and Installation Specifications

PAM may be applied in dissolved form with water, or it may be applied in dry, granular or powdered form. The preferred application method is the dissolved form.

PAM is to be applied at a maximum rate of two-thirds of a pound of PAM per 1,000 gallons water (80 mg/L) per 1 acre of bare soil. Table 3.8 can be used to determine the PAM and water application rate for a disturbed soil area. Higher concentrations of PAM **do not** provide any additional effectiveness.

Table 3.8. PAM and Water Application Rates.

Disturbed Area (ac)	PAM (lbs)	Water (gal)
0.50	0.33	500
1.00	0.66	1,000
1.50	1.00	1,500
2.00	1.32	2,000
2.50	1.65	2,500
3.00	2.00	3,000
3.50	2.33	3,500
4.00	2.65	4,000
4.50	3.00	4,500
5.00	3.33	5,000

The Preferred Method:

- Premeasure the area where PAM is to be applied and calculate the amount of product and water necessary to provide coverage at the specified application rate (two-thirds of a pound PAM/ 1,000 gallons/acre).
- PAM has high solubility in water, but dissolves very slowly. Dissolve premeasured dry granular PAM with a known quantity of clean water in a bucket several hours or overnight. Mechanical mixing will help dissolve the PAM. Always add PAM to water - not water to PAM.

- Prefill the water truck about one-eighths full with water. The water does not have to be potable, but it must have relatively low turbidity – in the range of 20 NTU or less.
- Add PAM/water mixture to the truck.
- Completely fill the water truck to specified volume.
- Spray PAM/water mixture onto dry soil until the soil surface is uniformly and completely wetted.

An Alternate Method:

PAM may also be applied as a powder at the rate of 5 pounds per acre. This must be applied on a day that is dry. For areas less than 5 to 10 acres, a hand-held “organ grinder” fertilizer spreader set to the smallest setting will work. Tractor-mounted spreaders will work for larger areas.

The following shall be used for application of PAM:

- PAM shall be used in conjunction with other BMPs and not in place of other BMPs.
- Do not use PAM on a slope that flows directly into a stream or wetland. The stormwater runoff shall pass through a sediment control BMP prior to discharging to surface waters.
- Do not add PAM to water discharging from site.
- When the total drainage area is greater than or equal to 5 acres, PAM treated areas shall drain to a sediment pond.
- Areas less than 5 acres shall drain to sediment control BMPs, such as a minimum of three check dams per acre. The total number of check dams used shall be maximized to achieve the greatest amount of settlement of sediment prior to discharging from the site. Each check dam shall be spaced evenly in the drainage channel through which stormwater flows are discharged off site.
- On all sites, the use of silt fence shall be maximized to limit the discharges of sediment from the site.
- All areas not being actively worked shall be covered and protected from rainfall. PAM shall not be the only cover BMP used.
- PAM can be applied to wet soil, but dry soil is preferred due to less sediment loss.

- PAM will work when applied to saturated soil but is not as effective as applications to dry or damp soil.
- Keep the granular PAM supply out of the sun. Granular PAM loses its effectiveness in 3 months after exposure to sunlight and air.
- Proper application and reapplication plans are necessary to ensure total effectiveness of PAM usage.
- PAM, combined with water, is very slippery and can be a safety hazard. Care must be taken to prevent spills of PAM powder onto paved surfaces. During an application of PAM, prevent over-spray from reaching pavement as pavement will become slippery. If PAM powder gets on skin or clothing, wipe it off with a rough towel rather than washing with water-this only makes cleanup messier and take longer.
- PAM designated for these uses should be “water soluble” or “linear” or “non-crosslinked.” Cross-linked or water absorbent PAM, polymerized in highly acidic (pH less than 2) conditions, are used to maintain soil moisture content.
- The PAM anionic charge density may vary from 2 to 30 percent; a value of 18 percent is typical. Studies conducted by the U.S. Department of Agriculture (USDA)/ARS demonstrated that soil stabilization was optimized by using very high molecular weight (12 to 15 mg/mole), highly anionic (more than 20 percent hydrolysis) PAM.
- PAM tackifiers are available and being used in place of guar and alpha plantago. Typically, PAM tackifiers should be used at a rate of no more than 0.5 to 1 pound per 1,000 gallons of water in a hydromulch machine. Some tackifier product instructions say to use at a rate of 3 to 5 pounds per acre, which can be too much. In addition, pump problems can occur at higher rates due to increased viscosity.

Maintenance Standards

- PAM may be reapplied on actively worked areas after a 48-hour period.
- Reapplication is not required unless PAM treated soil is disturbed or unless turbidity levels show the need for an additional application. If PAM treated soil is left undisturbed a reapplication may be necessary after 2 months. More PAM applications may be

required for steep slopes, silty and clayey soils (USDA Classification Type “C” and “D” soils), long grades, and high precipitation areas. When PAM is applied first to bare soil and then covered with straw, a reapplication may not be necessary for several months.

- Loss of sediment and PAM may be a basis for penalties per Revised Code of Washington (RCW) 90.48.080.

BMP C130: Surface Roughening

Purpose

Surface roughening aids in the establishment of vegetative cover, reduces runoff velocity, increases infiltration, and provides for sediment trapping through the provision of a rough soil surface. Horizontal depressions are created by operating a tiller or other suitable equipment on the contour or by leaving slopes in a roughened condition by not fine grading them.

Conditions for Use

- All slopes steeper than 3:1 and greater than 5 vertical feet require surface roughening
- Areas with grades steeper than 3:1 should be roughened to a depth of 2 to 4 inches prior to seeding
- Areas that will not be stabilized immediately may be roughened to reduce runoff velocity until seeding takes place
- Slopes with a stable rock face do not require roughening
- Slopes where mowing is planned should not be excessively roughened.

Design and Installation Specifications

There are different methods for achieving a roughened soil surface on a slope, and the selection of an appropriate method depends upon the type of slope. Roughening methods include stair-step grading, grooving, contour furrows, and tracking. See Figure 3.3 for tracking and contour furrows. Factors to be considered in choosing a method are slope steepness, mowing requirements, and whether the slope is formed by cutting or filling.

- Disturbed areas that will not require mowing may be stair-step graded, grooved, or left rough after filling.
- Stair-step grading is particularly appropriate in soils containing large amounts of soft rock. Each “step” catches material that sloughs from above, and provides a level site where vegetation can become established. Stairs should be wide enough to work with standard earth moving equipment. Stair steps must be on contour or gullies will form on the slope.
- Areas that will be mowed (these areas should have slopes less steep than 3:1) may have small furrows left by disking, harrowing, raking, or seed-planting machinery operated on the contour.

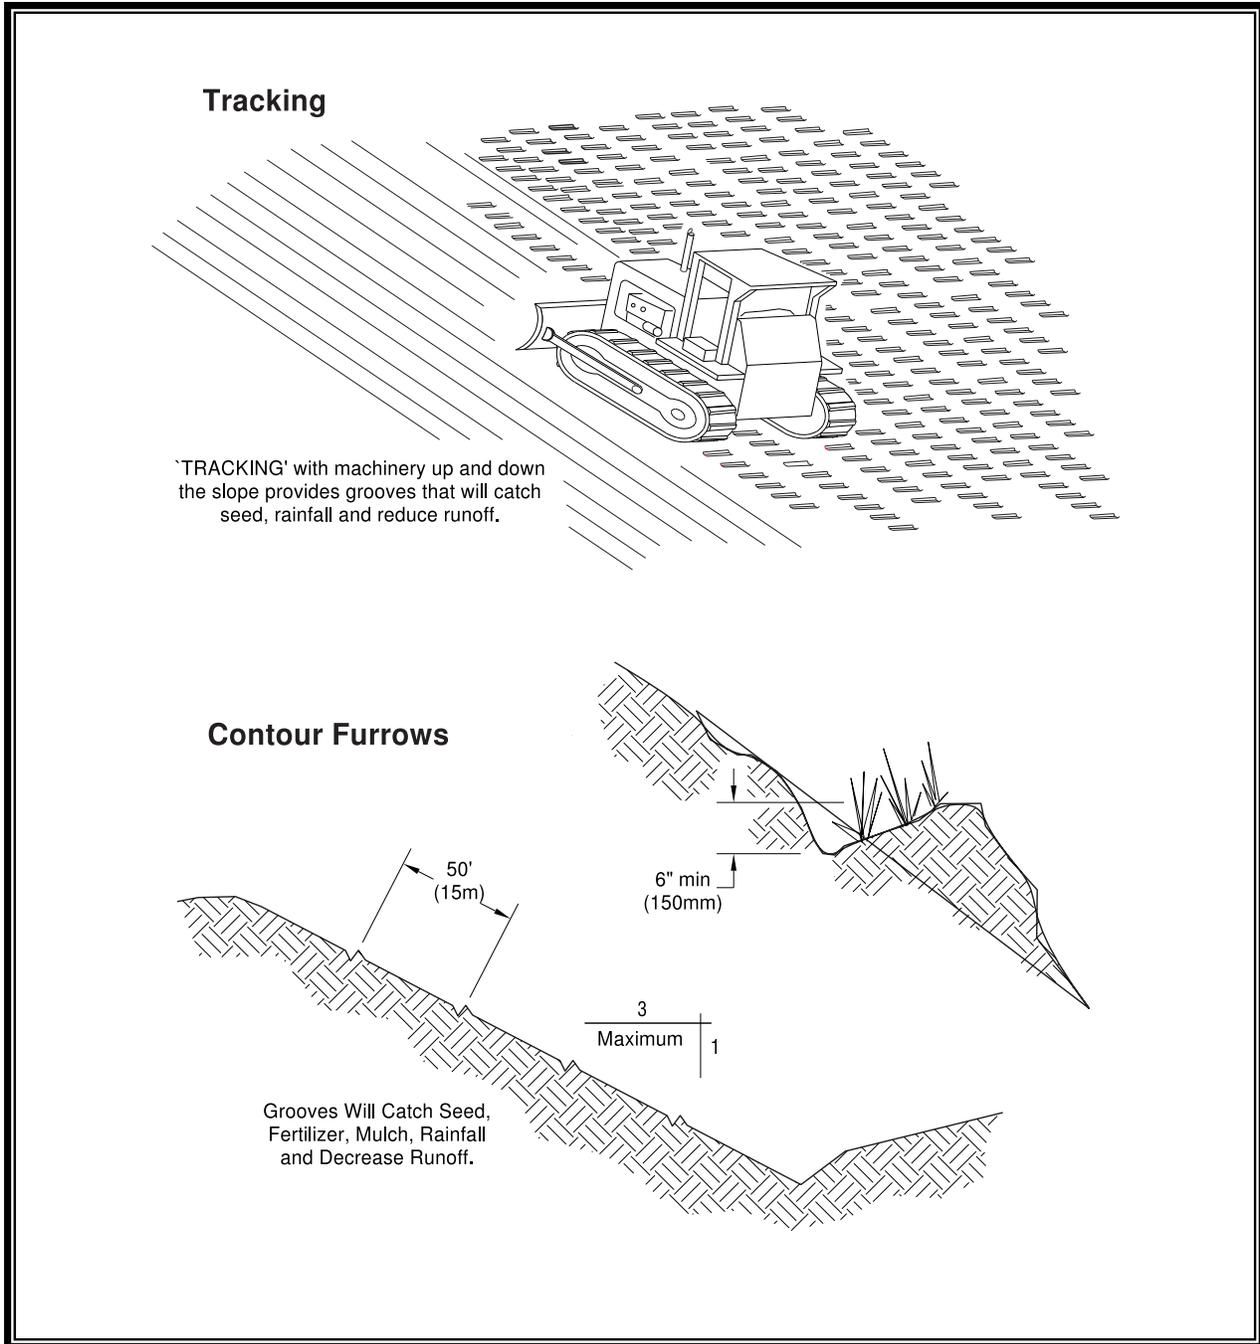


Figure 3.3. Surface Roughening by Tracking and Contour Furrows.

- Graded areas with slopes greater than 3:1 but less than 2:1 should be roughened before seeding. This can be accomplished in a variety of ways, including “track walking,” or driving a crawler tractor up and down the slope, leaving a pattern of cleat imprints parallel to slope contours.
- Tracking is done by operating equipment up and down the slope to leave horizontal depressions in the soil.

Maintenance Standards

- Areas that are graded in this manner should be seeded as quickly as possible.
- Regular inspections should be made of the area. If rills appear, they should be regraded and reseeded immediately.

BMP C131: Gradient Terraces

Purpose

Gradient terraces reduce erosion damage by intercepting surface runoff and conducting it to a stable outlet at a non-erosive velocity.

Conditions of Use

- Gradient terraces normally are limited to denuded land having a water erosion problem. They should not be constructed on deep sands or on soils that are too stony, steep, or shallow to permit practical and economical installation and maintenance. Gradient terraces may be used only where suitable outlets are or will be made available. See Figure 3.4 for gradient terraces.

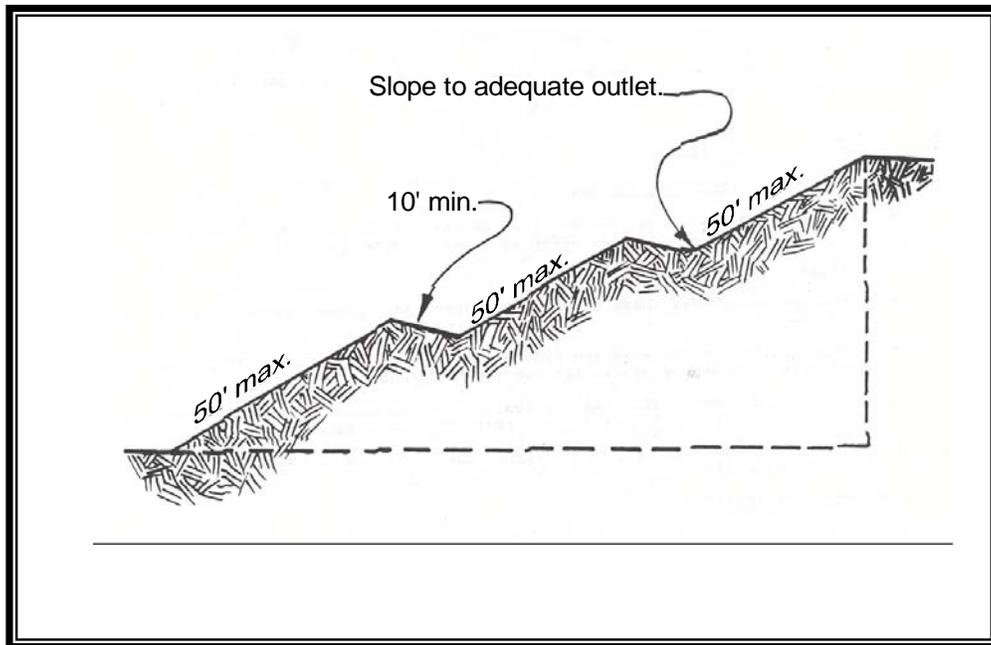


Figure 3.4. Gradient Terraces.

Design and Installation Specifications

- The maximum spacing of gradient terraces should be determined by the following method:

$$VI = (0.8)s + y$$

Where: VI = vertical interval in feet

s = land rise per 100 feet, expressed in feet

y = a soil and cover variable with values from 1.0 to 4.0

Values of “y” are influenced by soil erodibility and cover practices. The lower values are applicable to erosive soils where little to no residue is left on the surface. The higher value is applicable only to erosion-resistant soils where a large amount of residue (1.5 tons of straw/acre equivalent) is on the surface.

- The minimum constructed cross-section should meet the design dimensions.
- The top of the constructed ridge should not be lower at any point than the design elevation plus the specified overfill for settlement. The opening at the outlet end of the terrace should have a cross-section equal to that specified for the terrace channel.
- Channel grades may be either uniform or variable with a maximum grade of 0.6 feet per 100 feet length. For short distances, terrace grades may be increased to improve alignment. The channel velocity should not exceed that which is nonerosive for the soil type with the planned treatment.
- All gradient terraces should have adequate outlets. Such an outlet may be a grassed waterway, vegetated area, or tile outlet. In all cases the outlet must convey runoff from the terrace or terrace system to a point where the outflow will not cause damage. Vegetative cover should be used in the outlet channel.
- The design elevation of the water surface of the terrace should not be lower than the design elevation of the water surface in the outlet at their junction, when both are operating at design flow.
- Vertical spacing determined by the above methods may be increased as much as 0.5 feet or 10 percent, whichever is greater, to provide better alignment or location, to avoid obstacles, to adjust for equipment size, or to reach a satisfactory outlet.
- The drainage area above the top should not exceed the area that would be drained by a terrace with normal spacing.
- The terrace should have enough capacity to handle the peak runoff expected from a 2-year, 24-hour design storm without overtopping.
- The terrace cross-section should be proportioned to fit the land slope. The ridge height should include a reasonable settlement factor. The ridge should have a minimum top width of 3 feet at the design height. The minimum cross-sectional area of the terrace channel should be 8 square feet for land slopes of 5 percent or less, 7 square feet for slopes from 5 to 8 percent, and 6 square feet for

slopes steeper than 8 percent. The terrace can be constructed wide enough to be maintained using a small cat.

Maintenance Standards

- Maintenance should be performed as needed. Terraces should be inspected regularly; at least once a year, and after large storm events.

BMP C140: Dust Control

Purpose

Dust control prevents wind transport of dust from disturbed soil surfaces onto roadways, drainage ways, and surface waters.

Conditions of Use

For use in areas (including roadways) subject to surface and air movement of dust where onsite and offsite impacts to roadways, drainage ways, or surface waters are likely.

Design and Installation Specifications

- Vegetate or mulch areas that will not receive vehicle traffic. In areas where planting, mulching, or paving is impractical, apply gravel or landscaping rock.
- Limit dust generation by clearing only those areas where immediate activity will take place, leaving the remaining area(s) in the original condition, if stable. Maintain the original ground cover as long as practical.
- Construct natural or artificial windbreaks or windscreens. These may be designed as enclosures for small dust sources.
- Sprinkle the site with water until surface is wet. Repeat as needed. To prevent carryout of mud onto street, refer to Stabilized Construction Entrance (BMP C105).
- Irrigation water can be used for dust control. Irrigation systems should be installed as a first step on sites where dust control is a concern.
- Spray exposed soil areas with a dust palliative, following the manufacturer's instructions and cautions regarding handling and application. Oil based products are prohibited from use as a dust suppressant. The city may approve other dust palliatives such as calcium chloride or PAM.
- PAM (BMP C126) added to water at a rate of 0.5 pounds per 1,000 gallons of water per acre and applied from a water truck is more effective than water alone. This is due to the increased infiltration of water into the soil and reduced evaporation. In addition, small soil particles are bonded together and are not as easily transported by wind. Adding PAM may actually reduce the quantity of water needed for dust control. PAM has also shown to

be relatively affordable and thus an extremely cost-effective dust control method.

Techniques that can be used for unpaved roads and lots include:

- Lower speed limits. High vehicle speed increases the amount of dust stirred up from unpaved roads and lots.
- Upgrade the road surface strength by improving particle size, shape, and mineral types that make up the surface and base materials.
- Add surface gravel to reduce the source of dust emission. Limit the amount of fine particles (those smaller than .075 mm) to 10 to 20 percent.
- Use geotextile fabrics to increase the strength of new roads or roads undergoing reconstruction.
- Encourage the use of alternate, paved routes, if available.
- Restrict use by tracked vehicles and heavy trucks to prevent damage to road surface and base.
- Apply chemical dust suppressants using the admix method, blending the product with the top few inches of surface material. Suppressants may also be applied as surface treatments.
- Pave unpaved permanent roads and other trafficked areas.
- Use vacuum street sweepers.
- Remove mud and other dirt promptly so it does not dry and then turn into dust.
- Limit dust-causing work on windy days.

Contact your local Air Pollution Control Authority for guidance and training on other dust control measures. Compliance with the local Air Pollution Control Authority constitutes compliance with this BMP.

Maintenance Standards

Respray area as necessary to keep dust to a minimum.

BMP C150: Materials on Hand

Purpose

Quantities of erosion prevention and sediment control materials can be kept on the project site at all times to be used for emergency situations such as unexpected heavy summer rains. Having these materials on site reduces the time needed to implement BMPs when inspections indicate that existing BMPs are not meeting the Construction SWPPP requirements. In addition, contractors can save money by buying some materials in bulk and storing them at their office or yard.

Conditions of Use

- Construction projects of any size or type can benefit from having materials on hand. A small commercial development project could have a roll of plastic and some gravel available for immediate protection of bare soil and temporary berm construction. A large earthwork project, such as highway construction, might have several tons of straw, several rolls of plastic, flexible pipe, sandbags, geotextile fabric, and steel T-posts.
- Materials are stockpiled and readily available before any site clearing, grubbing, or earthwork begins. A contractor or developer could keep a stockpile of materials that are available to be used on several projects.
- If storage space at the project site is at a premium, the contractor could maintain the materials at their office or yard. The office or yard must be less than an hour from the project site.

Design and Installation Specifications

Depending on project type, size, complexity, and length, materials and quantities will vary. A good minimum that will cover numerous situations includes:

Material	Measure	Quantity
Clear Plastic, 6 mil	100 foot roll	1-2
Drainpipe, 6 or 8 inch diameter	25 foot section	4-6
Sandbags, filled	each	25-50
Straw Bales for mulching	approx. 50# each	10-20
Quarry Spalls	ton	2-4
Washed Gravel	cubic yard	2-4
Geotextile Fabric	100 foot roll	1-2
Catch Basin Inserts	each	2-4
Steel T-Posts	each	12-24

Maintenance Standards

- All materials with the exception of the quarry spalls, steel T-posts, and gravel should be kept covered and out of both sun and rain.
- Restock materials used as needed.

BMP C151: Concrete Handling

Purpose

Concrete work can generate process water and slurry that contain fine particles and high pH, both of which can violate water quality standards in the receiving water. This BMP is intended to minimize and eliminate concrete process water and slurry from entering waters of the state.

Conditions of Use

For use any time concrete is used, these management practices shall be utilized. Concrete construction projects include, but are not limited to, the following:

- Curbs
- Sidewalks
- Roads
- Bridges
- Foundations
- Floors
- Runways.

Design and Installation Specifications

- Concrete truck chutes, pumps, and internals shall be washed out only into formed areas awaiting installation of concrete or asphalt.
- Unused concrete remaining in the truck and pump shall be returned to the originating batch plant for recycling, as feasible.
- Hand tools including, but not limited to, screeds, shovels, rakes, floats, and trowels shall be washed off only into formed areas awaiting installation of concrete or asphalt.
- Equipment that cannot be easily moved, such as concrete pavers, shall only be washed in areas that do not directly drain to natural or constructed stormwater conveyances.
- Washdown from areas such as concrete aggregate driveways shall not drain directly to natural or constructed stormwater conveyances.
- When no formed areas are available, washwater and leftover product shall be contained in a lined container or a hole dug on site. Contained concrete shall be disposed of in a manner that does not violate groundwater or surface water quality standards.

Maintenance Standards

Containers shall be checked for holes in the liner daily during concrete pours and repaired the same day.

BMP C152: Sawcutting and Surfacing Pollution Prevention

Purpose

Sawcutting and surfacing operations generate slurry and process water that contains fine particles and high pH (concrete cutting), both of which can violate the water quality standards in the receiving water. This BMP is intended to minimize and eliminate process water and slurry from entering waters of the state.

Conditions of Use

Anytime sawcutting or surfacing operations take place, these management practices shall be utilized. Sawcutting and surfacing operations include, but are not limited to, the following:

- Sawing
- Coring
- Grinding
- Roughening
- Hydro-demolition
- Bridge and road surfacing.

Design and Installation Specifications

- Slurry and cuttings shall be vacuumed during cutting and surfacing operations.
- Slurry and cuttings shall not remain on permanent concrete or asphalt pavement overnight.
- Slurry and cuttings shall not drain to any natural or constructed drainage conveyance.
- Collected slurry and cuttings shall be disposed of in a manner that does not violate groundwater or surface water quality standards.
- Process water that is generated during hydro-demolition, surface roughening or similar operations shall not drain to any natural or constructed drainage conveyance and shall be disposed of in a manner that does not violate groundwater or surface water quality standards.
- Cleaning waste material and demolition debris shall be handled and disposed of in a manner that does not cause contamination of water. If the area is swept with a pick-up sweeper, the material must be hauled out of the area to an appropriate disposal site.

Maintenance Standards

Continually monitor operations to determine whether slurry, cuttings, or process water could enter waters of the state. If inspections show that a violation of water quality standards could occur, stop operations and immediately implement preventive measures such as berms, barriers, secondary containment, and vacuum trucks.

BMP C153: Material Delivery, Storage and Containment

Purpose

Prevent, reduce, or eliminate the discharge of pollutants from material delivery and storage to the stormwater system or watercourses by minimizing the storage of hazardous materials onsite, storing materials in a designated area, and installing secondary containment.

Conditions of Use

These procedures are suitable for use at all construction sites with delivery and storage of the following materials:

- Petroleum products such as fuel, oil and grease
- Soil stabilizers and binders (e.g., Polyacrylamide)
- Fertilizers, pesticides and herbicides
- Detergents
- Asphalt and concrete compounds
- Hazardous chemicals such as acids, lime, adhesives, paints, solvents and curing compounds
- Any other material that may be detrimental if released to the environment.

Design and Installation Specifications

The following steps should be taken to minimize risk:

- Temporary storage area should be located away from vehicular traffic, near the construction entrance(s), and away from waterways or storm drains.
- Material safety data sheets should be supplied for all materials stored. Chemicals should be kept in their original labeled containers.
- Hazardous material storage on site should be minimized.
- Hazardous materials should be handled as infrequently as possible.
- During the wet weather season (October 1 to April 30), consider storing materials in a covered area.

- Materials should be stored in secondary containments, such as earthen dike, horse trough, or even a children's wading pool for non-reactive materials such as detergents, oil, grease, and paints. Small amounts of material may be secondarily contained in "bus boy" trays or concrete mixing trays.
- Do not store chemicals, drums, or bagged materials directly on the ground. Place these items on a pallet and, when possible, in secondary containment.
- If drums must be kept uncovered, store them at a slight angle to reduce ponding of rainwater on the lids to reduce corrosion. Domed plastic covers are inexpensive and snap to the top of drums, preventing water from collecting.

Material Storage Areas and Secondary Containment Practices:

- Liquids, petroleum products, and substances listed in 40 CFR Parts 110, 117, or 302 shall be stored in approved containers and drums and shall not be overfilled. Containers and drums shall be stored in temporary secondary containment facilities.
- Temporary secondary containment facilities shall provide for a spill containment volume able to contain precipitation from a 25-year, 24-hour storm event, plus 10 percent of the total enclosed container volume of all containers, or 110 percent of the capacity of the largest container within its boundary, whichever is greater.
- Secondary containment facilities shall be impervious to the materials stored therein for a minimum contact time of 72 hours.
- Secondary containment facilities shall be maintained free of accumulated rainwater and spills. In the event of spills or leaks, accumulated rainwater and spills shall be collected and placed into drums. These liquids shall be handled as hazardous waste unless testing determines them to be non-hazardous.
- Sufficient separation should be provided between stored containers to allow for spill cleanup and emergency response access.
- During the wet weather season (October 1 to April 30), each secondary containment facility shall be covered during non-working days, prior to and during rain events.
- Keep material storage areas clean, organized and equipped with an ample supply of appropriate spill cleanup material (spill kit).

- The spill kit should include, at a minimum:
 - 1 water resistant nylon bag
 - 3 oil absorbent socks 3 inches x 4 feet
 - 2 oil absorbent socks 3 inches x 10 feet
 - 12 oil absorbent pads 17 inches x 19 inches
 - 1 pair splash resistant goggles
 - 3 pair nitrile gloves
 - 10 disposable bags with ties
 - Instructions.

BMP C160: Certified Erosion and Sediment Control Lead

Purpose

The project applicant designates at least one person as the responsible representative in charge of ESC, and water quality protection. The designated person shall be the CESCL who is responsible for ensuring compliance with all local, state, and federal ESC and water quality requirements.

Conditions of Use

A CESCL shall be made available on projects disturbing ground 1 acre or larger and that discharge stormwater to surface waters of the state.

The CESCL shall:

- Have a current certificate proving attendance in an ESC training course that meets the minimum ESC training and certification requirements established by Ecology (see details below).
- Ecology will maintain a list of ESC training and certification providers at: www.ecy.wa.gov/programs/wq/stormwater.

OR

- Be a Certified Professional in Erosion and Sediment Control (CPESC); for additional information go to: www.cpesc.net.

Specifications

Certification shall remain valid for 3 years.

- The CESCL shall have authority to act on behalf of the contractor or developer and shall be available, on call, 24 hours per day throughout the period of construction.
- The Construction SWPPP shall include the name, telephone number, fax number, and address of the designated CESCL.
- A CESCL may provide inspection and compliance services for multiple construction projects in the same geographic region.

Duties and responsibilities of the CESCL shall include, but are not limited to the following:

- Maintaining permit file on site at all times which includes the SWPPP and any associated permits and plans.

- Directing BMP installation, inspection, maintenance, modification, and removal.
- Updating all project drawings and the Construction SWPPP with changes made.
- Keeping daily logs, and inspection reports. Inspection reports should include:
 - Inspection date/time.
 - Weather information; general conditions during inspection and approximate amount of precipitation since the last inspection.
 - A summary or list of all BMPs implemented, including observations of all erosion/sediment control structures or practices. The following shall be noted:
 - Locations of BMPs inspected
 - Locations of BMPs that need maintenance
 - Locations of BMPs that failed to operate as designed or intended, and
 - Locations of where additional or different BMPs are required.
 - Visual monitoring results, including a description of discharged stormwater. The presence of suspended sediment, turbid water, discoloration, and oil sheen shall be noted, as applicable.
 - Any water quality monitoring performed during inspection.
 - General comments and notes, including a brief description of any BMP repairs, maintenance or installations made as a result of the inspection.
- Facilitate, participate in, and take corrective actions resulting from inspections performed by outside agencies or the owner.

Minimum Requirements for Erosion and Sediment Control Training and Certification Courses

General Requirements

1. The course shall teach the construction stormwater pollution prevention guidance provided in the most recent version of:
 - a. The Ecology Stormwater Management Manual for Western Washington.
 - b. Other equivalent stormwater management manuals approved by Ecology.
2. Upon completion of course, each attendee shall receive documentation of certification, including, at a minimum, a wallet-sized card that certifies completion of the course. Certification shall remain valid for 3 years. Recertification may be obtained by completing the 8-hour refresher course or by taking the initial 16-hour training course again.
3. The initial certification course shall be a minimum of 16 hours (with a reasonable time allowance for lunch, breaks, and travel to and from field) and include a field element and test.
 - a. The field element must familiarize students with the proper installation, maintenance and inspection of common ESC BMPs including, but not limited to, blankets, check dams, silt fence, straw mulch, plastic, and seeding.
 - b. The test shall be open book and a passing score is not required for certification. Upon completion of the test, the correct answers shall be provided and discussed.
4. The refresher course shall be a minimum of 8 hours and include a test.
 - a. The refresher course shall include:
 - i. Applicable updates to the Stormwater Management Manual for Western Washington that is used to teach the course, including new or updated BMPs
 - ii. Applicable changes to the NPDES general permit for construction activities.
 - b. The refresher course test shall be open book and a passing score is not required for certification. Upon completion of the test, the correct answers shall be provided and discussed.
 - c. The refresher course may be taught using an alternative format (e.g., Internet, CD ROM, etc.) if the module is approved by Ecology.

Required Course Elements

1. Erosion and Sedimentation Impacts
 - a. Examples/Case studies

2. Erosion and Sedimentation Processes
 - a. Definitions
 - b. Types of erosion
 - c. Sedimentation
 - i. Basic settling concepts
 - ii. Problems with clays/turbidity
3. Factors Influencing Erosion Potential
 - a. Soil
 - b. Vegetation
 - c. Topography
 - d. Climate
4. Regulatory Requirements
 - a. NPDES - Construction Stormwater General Permit
 - b. Local requirements and permits
 - c. Other regulatory requirements
5. SWPPP
 - a. SWPPP is a living document – should be revised as necessary
 - b. 12 elements of a SWPPP; discuss suggested BMPs (with examples)
 1. Mark clearing limits
 2. Establish construction access
 3. Control flow rates
 4. Install sediment controls
 5. Stabilize soils
 6. Protect slopes
 7. Protect drain inlets
 8. Stabilize channels and outlets
 9. Control pollutants
 10. Control dewatering
 11. Maintain BMPs
 12. Manage the project

6. Monitoring/Reporting/Recordkeeping
 - a. Site inspections/visual monitoring
 - i. Disturbed areas
 - ii. BMPs
 - iii. Stormwater discharge points
 - b. Water quality sampling/analysis
 - i. Turbidity
 - ii. pH
 - c. Monitoring frequency
 - i. Set by NPDES Permit
 - ii. Inactive sites – reduced frequency
 - d. Adaptive Management
 - i. When monitoring indicates problem, take appropriate action (e.g., install/maintain BMPs)
 - ii. Document the corrective action(s) in SWPPP
 - e. Reporting
 - i. Inspection reports/checklists
 - ii. Discharge monitoring reports (DMR)
 - iii. Non-compliance notification.

Instructor Qualifications

1. Instructors must be qualified to effectively teach the required course elements.
2. At a minimum, instructors must have:
 - a. Current certification as a Certified Professional in Erosion and Sediment Control (CPESC), or
 - b. Completed a training program for teaching the required course elements, or
 - c. The academic credentials and instructional experience necessary for teaching the required course elements.
3. Instructors must demonstrate competent instructional skills and knowledge of the applicable subject matter.

BMP C161: Payment of Erosion Control Work

Purpose

As with any construction operation, the contractor should be paid for erosion control work. Payment for erosion control must be addressed during project development and design. Method of payment should be identified in the SWPPP.

Conditions of Use

Erosion control work should never be “incidental” to the contract as it is extremely difficult for the contractor to bid the work. Work that is incidental to the contract is work where no separate measurement or payment is made. The cost for incidental work is included in payments made for applicable bid items in the schedule of unit prices. For example, any erosion control work associated with an item called “clearing and grubbing” is bid and paid for as part of that item, not separately.

Several effective means for payment of erosion control work are described below. These include:

- Temporary erosion and sediment control lump sum
- Temporary ESC force account
- Unit prices
- Lump sum.

Temporary Erosion and Sediment Control Lump Sum

One good method for achieving effective ESC is to set up a progress payment system whereby the contract spells out exactly what is expected and allows for monthly payments over the life of the contract.

For example, an item called a “temporary erosion and sediment control (TESC) lump sum” is listed in the bid schedule of unit prices. An amount, such as \$10,000, is written in both the unit price and amount columns. This requires all bidders to bid \$10,000 for the item. If \$10,000 is not shown in the amount column, each contractor bids the amount. Often this is under-bid, which can cause compliance difficulties later. In this example, the contractor is required to revise the project Construction SWPPP by developing a contractor’s erosion and sediment control plan that is specific to their operations.

Next, the following language is included in the temporary ESC specification payment section:

Based upon lump sum bid item “TESC lump sum,” payments will be made as follows:

- A. Upon receipt of the CЕССР, 25 percent.
- B. After notice to proceed and before substantial completion, 50 percent will be prorated and paid monthly for compliance with the CЕССР. Non-compliance will result in withholding of payment for the month of non-compliance.
- C. At final payment, 25 percent for a clean site.

Payment for “TESC lump sum” will be full compensation for furnishing all labor, equipment, materials and tools to implement the CЕССР, install, inspect, maintain, and remove temporary ESC as detailed in the drawings and specified herein, with the exception of those items measured and paid for separately.

TESC Force Account

One good method for ensuring that contingency money is available to address unforeseen ESC problems is to set up an item called “TESC-force account.” For example, an amount such as \$15,000 is written in both the unit price and amount columns for the item. This requires all bidders to bid \$15,000 for the item.

The force account is used only at the discretion of the contracting agency or developer. If there are no unforeseen erosion problems, the money is not used. If there are unforeseen erosion problems, the contracting agency would direct the work to be done and pay an agreed upon amount for the work (such as predetermined rates under a time and materials setting).

Contract language for this item could look like this:

Measurement and payment for “TESC-force account” will be on a force account basis in accordance with _____ (include appropriate section of the contract specifications). The amount entered in the schedule of unit prices is an estimate.

Unit Prices – When the material or work can be quantified, it can be paid by unit prices. For example, the project designer knows that 2 acres will need to be hydroseeded and sets up an item of work for hydroseed, with a bid quantity of 2, and a unit for acre. The bidder writes in the unit prices and amount.

Unit price items can be used in conjunction with TESC-force account and TESC-lump sum.

Lump Sum – In contracts where all the work in a project is paid as a lump sum, erosion control is usually not paid as a separate item. In order to ensure that appropriate amounts are bid into the contract, the contracting agency can request a schedule of values and require that all erosion control costs be identified.

BMP C162: Scheduling

Purpose

Sequencing a construction project reduces the amount and duration of soil exposed to erosion by wind, rain, runoff, and vehicle tracking.

Conditions of Use

The construction sequence schedule is an orderly listing of all major land-disturbing activities together with the necessary erosion and sedimentation control measures planned for the project. This type of schedule guides the contractor on work to be done before other work is started so that serious erosion and sedimentation problems can be avoided.

Following a specified work schedule that coordinates the timing of land-disturbing activities and the installation of control measures is perhaps the most cost-effective way of controlling erosion during construction. The removal of surface ground cover leaves a site vulnerable to accelerated erosion. Construction procedures that limit land clearing, provide timely installation of erosion and sedimentation controls, and restore protective cover quickly can significantly reduce the erosion potential of a site.

Design Considerations

- Avoid rainy periods
- Schedule projects to disturb only small portions of the site at any one time. Complete grading as soon as possible. Immediately stabilize the disturbed portion before grading the next portion. Practice staged seeding in order to revegetate cut and fill slopes as the work progresses.

3.2 Runoff Conveyance and Treatment Best Management Practices

BMP C200: Interceptor Dike and Swale

Purpose

Provide a ridge of compacted soil, or a ridge with an upslope swale, at the top or base of a disturbed slope or along the perimeter of a disturbed construction area to convey stormwater. Use the dike and/or swale to intercept the runoff from unprotected areas and direct it to areas where erosion can be controlled. This can prevent storm runoff from entering the work area or sediment-laden runoff from leaving the construction site. See Attachments Section C, Detail 17.0 for an example schematic.

Conditions of Use

Where the runoff from an exposed site or disturbed slope must be conveyed to an erosion control facility which can safely contain the stormwater:

- Locate upslope of a construction site to prevent runoff from entering disturbed area
- When placed horizontally across a disturbed slope, it reduces the amount and velocity of runoff flowing down the slope
- Locate downslope to collect runoff from a disturbed area and direct it to a sediment basin.

Design and Installation Specifications

- Dike and/or swale and channel must be stabilized with temporary or permanent vegetation or other channel protection during construction.
- Channel requires a positive grade for drainage; steeper grades require channel protection and check dams
- Review construction for areas where overtopping may occur
- Can be used at top of new fill before vegetation is established
- May be used as a permanent diversion channel to carry the runoff
- Subbasin tributary area should be 1 acre or less
- Design capacity for the peak flow from a 10-year, 24-hour storm, assuming a Type 1A rainfall distribution, for temporary facilities.

Alternatively, use 1.6 times the 10-year, 1-hour time step flow indicated by an approved continuous runoff model. If a 15-minute (or less) time step is used, no correction factor is required. For conveyance systems that will also serve on a permanent basis see design standards in Volume III, Chapter 4.

- **Interceptor dikes** shall meet the following criteria:

- Top Width: 2 feet minimum
- Height: 1.5 feet minimum on berm
- Side Slope: 2:1 or flatter
- Grade: Depends on topography, however, dike system minimum is 0.5 percent, maximum is 1 percent
- Compaction: Minimum of 90 percent ASTM D698 standard proctor
- Horizontal Spacing of Interceptor Dikes:

Average Slope	Slope %	Flowpath Length
20H:1V or less	3-5%	300 feet
(10 to 20)H:1V	5-10%	200 feet
(4 to 10)H:1V	10-25%	100 feet
(2 to 4)H:1V	25-50%	50 feet

- Stabilization depends on velocity and reach:
 - *Slopes less than 5 percent:* Seed and mulch applied within 5 days of dike construction (see *BMP C121, Mulching*).
 - *Slopes 5 to 40 percent:* Dependent on runoff velocities and dike materials. Stabilization should be done immediately using either sod or riprap or other measures to avoid erosion.
- The upslope side of the dike shall provide positive drainage to the dike outlet. No erosion shall occur at the outlet. Provide energy dissipation measures as necessary. Sediment-laden runoff must be released through a sediment trapping facility.
- Minimize construction traffic over temporary dikes. Use temporary cross culverts for channel crossing.

- **Interceptor swales** shall meet the following criteria:
 - Bottom Width: 2 feet minimum; the bottom shall be level
 - Depth: 1-foot minimum
 - Side Slope: 2:1 or flatter
 - Grade: Maximum 5 percent, with positive drainage to a suitable outlet (such as a sediment pond)
 - Stabilization: Seed as per *BMP C120, Temporary and Permanent Seeding*, or *BMP C202, Channel Lining*, 12 inches thick of riprap pressed into the bank and extending at least 8 inches vertical from the bottom.
- Inspect diversion dikes and interceptor swales once a week and after every rainfall. Immediately remove sediment from the flow area.
- Damage caused by construction traffic or other activity must be repaired before the end of each working day.
- Check outlets and make timely repairs as needed to avoid gully formation. When the area below the temporary diversion dike is permanently stabilized, remove the dike and fill and stabilize the channel to blend with the natural surface.

BMP C201: Grass-Lined Channels

Purpose

Purpose is to provide a channel with a vegetative lining for conveyance of runoff. See Figure 3.5 for typical grass-lined channels.

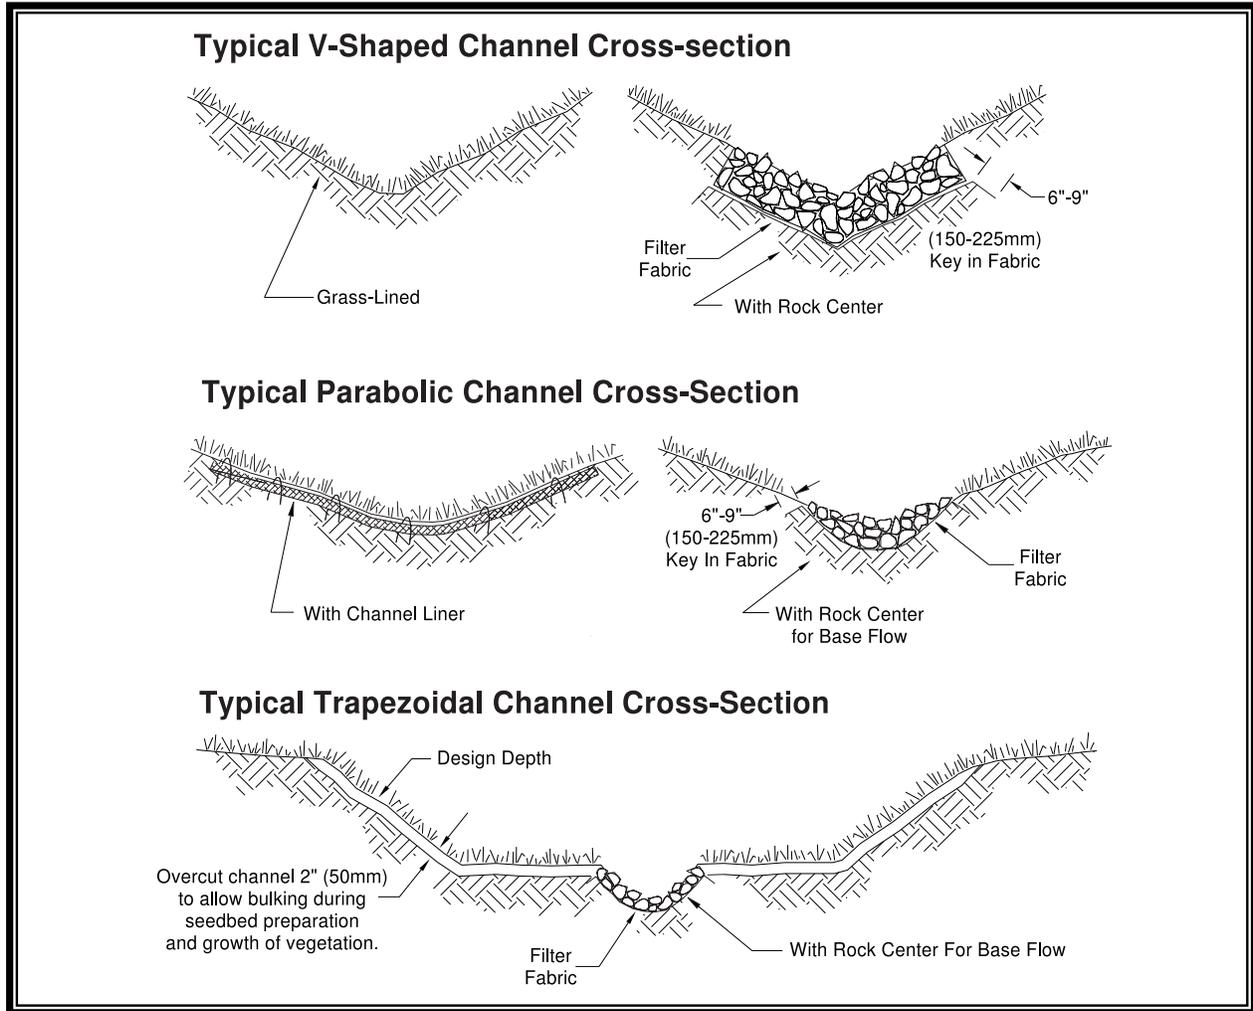


Figure 3.5. Typical Grass-Lined Channels.

Conditions of Use

This practice applies to construction sites where concentrated runoff needs to be contained to prevent erosion or flooding.

- When a vegetative lining can provide sufficient stability for the channel cross-section and at lower velocities of water (normally dependent on grade). This means that the channel slopes are generally less than 5 percent and space is available for a relatively large cross-section.

- Typical uses include roadside ditches, channels at property boundaries, outlets for diversions, and other channels and drainage ditches in low areas.
- Channels that will be vegetated should be installed before major earthwork and hydroseeded with a BFM. The vegetation should be well established (i.e., 75 percent cover) before water is allowed to flow in the ditch. With channels that will have high flows, erosion control blankets should be installed over the hydroseed. If vegetation cannot be established from seed before water is allowed in the ditch, sod should be installed in the bottom of the ditch in lieu of hydromulch and blankets.

Design and Installation Specifications

- Locate the channel where it can conform to the topography and other features such as roads.
- Locate them to use natural drainage systems to the greatest extent possible.
- Avoid sharp changes in alignment or bends and changes in grade.
- Do not reshape the landscape to fit the drainage channel.
- The maximum design velocity shall be based on soil conditions, type of vegetation, and method of revegetation, but at no times shall velocity exceed 5 feet/second. The channel shall not be overtopped by the peak runoff from a 10-year, 24-hour storm, assuming a Type 1A rainfall distribution.” Alternatively, use 1.6 times the 10-year, 1-hour time step flow indicated by an approved continuous runoff model to determine a flow rate which the channel must contain. If a 15-minute (or less) time step is used, no correction factor is required.
- Where the grass-lined channel will also function as a permanent stormwater conveyance facility the channel must meet the conveyance requirements defined in Volume III, Chapter 4.
- An **established** grass or vegetated lining is required before the channel can be used to convey stormwater, unless stabilized with nets or blankets.
- If design velocity of a channel to be vegetated by seeding exceeds 2 feet/sec, a temporary channel liner is required. Geotextile or special mulch protection such as straw or netting provides stability until the vegetation is fully established. See Figure 3.6.

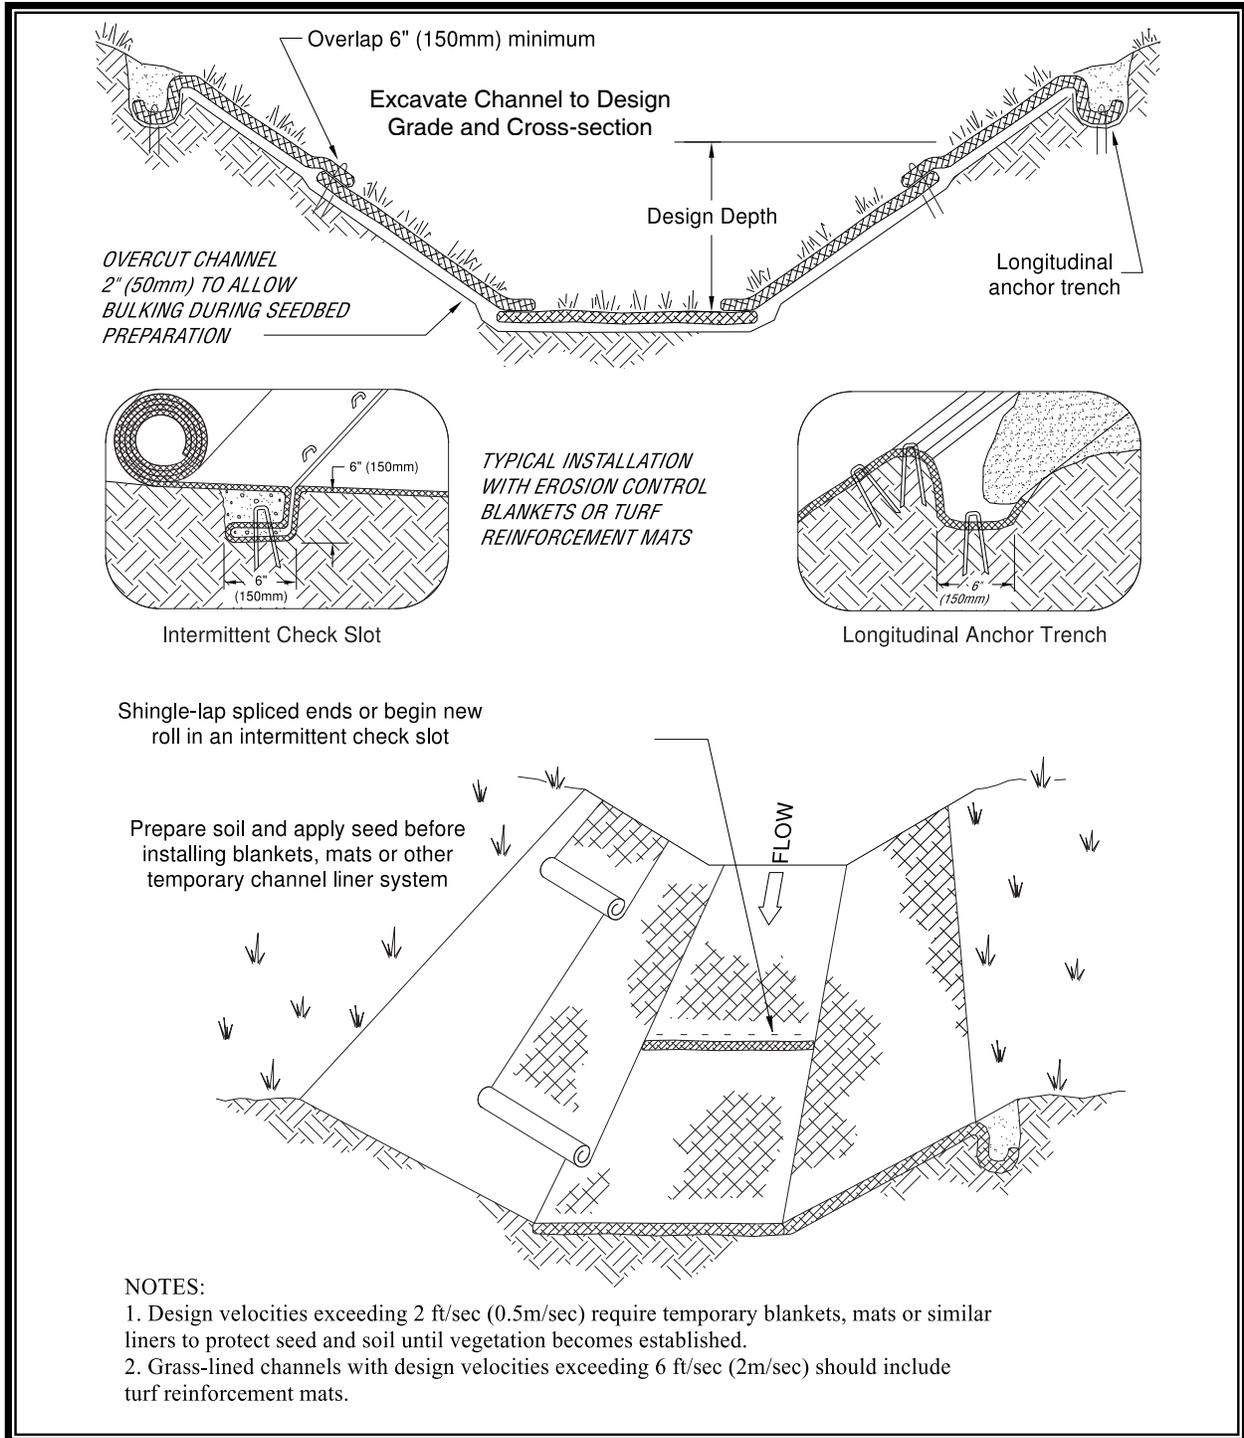


Figure 3.6. Temporary Channel Liners.

- Temporary check dams shall be removed when the grass has matured sufficiently to protect the ditch or swale unless the slope of the swale is greater than 4 percent. The area beneath the check dams shall be seeded and mulched immediately after dam removal.

- If vegetation is established by sodding, the permissible velocity for established vegetation may be used and no temporary liner is needed.
- Do not subject grass-lined channel to sedimentation from disturbed areas. Use sediment-trapping BMPs upstream of the channel.
- **V-shaped grass channels** generally apply where the quantity of water is small, such as in short reaches along roadsides. The V-shaped cross-section is least desirable because it is difficult to stabilize the bottom where velocities may be high.
- **Trapezoidal grass channels** are used where runoff volumes are large and slope is low so that velocities are nonerosive to vegetated linings. (Note: it is difficult to construct small parabolic shaped channels.)
- Subsurface drainage, or riprap channel bottoms, may be necessary on sites that are subject to prolonged wet conditions due to long duration flows or a high water table.
- Provide outlet protection at culvert ends and at channel intersections.
- Grass channels, at a minimum, should carry peak runoff for temporary construction drainage facilities from the 10-year, 24-hour storm without eroding. Where flood hazard exists, increase the capacity according to the potential damage.
- Grassed channel side slopes generally are constructed 3:1 or flatter to aid in the establishment of vegetation and for maintenance.
- Construct channels a minimum of 0.2 foot larger around the periphery to allow for soil bulking during seedbed preparations and sod buildup.

Maintenance Standards

- During the establishment period, check grass-lined channels after every rainfall.
- After grass is established, periodically check the channel; check it after every heavy rainfall event. Immediately make repairs.
- It is particularly important to check the channel outlet and all road crossings for bank stability and evidence of piping or scour holes.

- Remove all significant sediment accumulations to maintain the designed carrying capacity. Keep the grass in a healthy, vigorous condition at all times, since it is the primary erosion protection for the channel.

BMP C202: Channel Lining

Purpose

To protect erodible channels by providing a channel liner using either blankets or riprap.

Conditions of Use

- When natural soils or vegetated stabilized soils in a channel are not adequate to prevent channel erosion.
- When a permanent ditch or pipe system is to be installed and a temporary measure is needed.
- In almost all cases, synthetic and organic coconut blankets are more effective than riprap for protecting channels from erosion. Blankets can be used with and without vegetation. Blanketed channels can be designed to handle any expected flow and longevity requirement. Some synthetic blankets have a predicted life span of 50 years or more, even in sunlight.
- Other reasons why blankets are better than rock include the availability of blankets over rock. In many areas of the state, rock is not easily obtainable or is very expensive to haul to a site. Blankets can be delivered anywhere. Rock requires the use of dump trucks to haul and heavy equipment to place. Blankets usually only require laborers with hand tools, and sometimes a backhoe.
- The Federal Highway Administration recommends not using flexible liners whenever the slope exceeds 10 percent or the shear stress exceeds 8 pounds/square foot.

Design and Installation Specifications

- See BMP C122 for information on blankets.
- Since riprap is used where erosion potential is high, construction must be sequenced so that the riprap is put in place with the minimum possible delay.
- Disturbance of areas where riprap is to be placed should be undertaken only when final preparation and placement of the riprap can follow immediately behind the initial disturbance. Where riprap is used for outlet protection, the riprap should be placed before or in conjunction with the construction of the pipe or channel so that it is in place when the pipe or channel begins to operate.

- The designer, after determining the riprap size that will be stable under the flow conditions, shall consider that size to be a minimum size and then, based on riprap gradations actually available in the area, select the size or sizes that equal or exceed the minimum size. The possibility of drainage structure damage by children shall be considered in selecting a riprap size, especially if there is nearby water or a gully in which to toss the stones.
- Stone for riprap shall consist of field stone or quarry stone of approximately rectangular shape. The stone shall be hard and angular and of such quality that it will not disintegrate on exposure to water or weathering and it shall be suitable in all respects for the purpose intended.
- Rubble concrete may be used provided it has a density of at least 150 pounds per cubic foot, and otherwise meets the requirement of this standard and specification.
- A lining of engineering filter fabric (geotextile) shall be placed between the riprap and the underlying soil surface to prevent soil movement into or through the riprap. The geotextile should be keyed in at the top of the bank.
- Filter fabric shall not be used on slopes greater than 1.5:1 as slippage may occur. It should be used in conjunction with a layer of coarse aggregate (granular filter blanket) when the riprap to be placed is 12 inches and larger.

BMP C203: Water Bars

Purpose

A small ditch or ridge of material is constructed diagonally across a road or right-of-way to divert stormwater runoff from the road surface, wheel tracks, or a shallow road ditch.

Conditions of Use

Clearing right-of-way and construction of access for power lines, pipelines, and other similar installations often require long narrow right-of-ways over sloping terrain. Disturbance and compaction promotes gully formation in these cleared strips by increasing the volume and velocity of runoff. Gully formation may be especially severe in tire tracks and ruts. To prevent gulying, runoff can often be diverted across the width of the right-of-way to undisturbed areas by using small predesigned diversions.

- Give special consideration to each individual outlet area, as well as to the cumulative effect of added diversions. Use gravel to stabilize the diversion where significant vehicular traffic is anticipated.

Design and Installation Specifications

- Height: 8-inch minimum measured from the channel bottom to the ridge top.
- Side slope of channel: 2:1 maximum; 3:1 or flatter when vehicles will cross.
- Base width of ridge: 6-inch minimum.
- Locate them to use natural drainage systems and to discharge into well vegetated stable areas.
- Guideline for Spacing:

Slope %	Spacing (ft)
< 5	125
5 - 10	100
10 - 20	75
20 - 35	50
> 35	Use rock lined ditch

- Grade of water bar and angle: Select angle that results in ditch slope less than 2 percent.

- Install as soon as the clearing and grading is complete. Reconstruct when construction is complete on a section when utilities are being installed.
- Compact the ridge when installed.
- Stabilize, seed and mulch the portions that are not subject to traffic. Gravel the areas crossed by vehicles.

Maintenance Standards

- Periodically inspect right-of-way diversions for wear and after every heavy rainfall for erosion damage
- Immediately remove sediment from the flow area and repair the dike
- Check outlet areas and make timely repairs as needed
- When permanent road drainage is established and the area above the temporary right-of-way diversion is permanently stabilized, remove the dike and fill the channel to blend with the natural ground, and appropriately stabilize the disturbed area.

BMP C204: Pipe Slope Drains

Purpose

To use a pipe to convey stormwater anytime water needs to be diverted away from or over bare soil to prevent gullies, channel erosion, and saturation of slide-prone soils.

Conditions of Use

Pipe slope drains should be used when a temporary or permanent stormwater conveyance is needed to move the water down a steep slope to avoid erosion. See also Attachments Section C, Detail 15.0.

On highway projects, they should be used at bridge ends to collect runoff and pipe it to the base of the fill slopes along bridge approaches. These can be designed into a project and included as bid items. Another use on road projects is to collect runoff from pavement and pipe it away from side slopes. These are useful because there is generally a time lag between having the first lift of asphalt installed and the curbs, gutters, and permanent drainage installed. Used in conjunction with sand bags, or other temporary diversion devices, these will prevent massive amounts of sediment from leaving a project.

Water can be collected, channeled with sand bags, Triangular Silt Dikes, berms, or other material, and piped to temporary sediment ponds.

Pipe slope drains can be:

- Connected to new catch basins and used temporarily until all permanent piping is installed.
- Used to drain water collected from aquifers exposed on cut slopes and take it to the base of the slope.
- Used to collect clean runoff from plastic sheeting and direct it away from exposed soil.
- Installed in conjunction with silt fence to drain collected water to a controlled area.
- Used to divert small seasonal streams away from construction. They have been used successfully on culvert replacement and extension jobs. Large flex pipe can be used on larger streams during culvert removal, repair, or replacement.
- Connected to existing down spouts and roof drains and used to divert water away from work areas during building renovation, demolition, and construction projects.

There are now several commercially available collectors that are attached to the pipe inlet and help prevent erosion at the inlet.

Design and Installation Specifications

Size the pipe to convey the flow. The capacity for temporary drains shall be sufficient to handle the peak flow from a 10-year, 24-hour storm event, assuming a Type 1A rainfall distribution. Alternatively, use 1.6 times the 10-year, 1-hour time step flow indicated by an approved continuous runoff model. If a 15-minute (or less) time step is used, no correction factor is required.

- Use care in clearing vegetated slopes for installation.
- Reestablish cover immediately on areas disturbed by installation.
- Use temporary drains on new cut or fill slopes.
- Use diversion dikes or swales to collect water at the top of the slope.
- Ensure that the entrance area is stable and large enough to direct flow into the pipe.
- Dike material shall be compacted to 90 percent modified proctor to prevent piping of water through the berm. The entrance area is a common failure location.
- The entrance shall consist of a standard flared end section for culverts 12 inches and larger with a minimum 6-inch metal toe plate to prevent runoff from undercutting the pipe inlet. The slope of the entrance shall be at least 3 percent. Sand bags may also be used at pipe entrances as a temporary measure.
- The soil around and under the pipe and entrance section shall be thoroughly compacted to prevent undercutting.
- The flared inlet section shall be securely connected to the slope drain and have watertight connecting bands.
- Slope drain sections shall be securely fastened together, fused or have gasketed watertight fittings, and shall be securely anchored into the soil.
- Thrust blocks should be installed anytime 90 degree bends are utilized. Depending on size of pipe and flow, these can be constructed with sand bags, straw bales staked in place, T-posts and wire, or ecology blocks.

- Pipe needs to be secured along its full length to prevent movement. This can be done with steel T-posts and wire. A post is installed on each side of the pipe and the pipe is wired to them. This should be done every 10 to 20 feet of pipe length or so, depending on the size of the pipe and quantity of water to be diverted.
- Interceptor dikes shall be used to direct runoff into a slope drain. The height of the dike shall be at least 1 foot higher at all points than the top of the inlet pipe.
- The area below the outlet must be stabilized with a riprap apron (see BMP C209 Outlet Protection, for the appropriate outlet material).
- If the pipe slope drain is conveying sediment-laden water, direct all flows into the sediment trapping facility.
- Materials specifications for any permanent piped system are listed in Volume III, Section 4.7, and shall be approved by the city.

Maintenance Standards

- Check inlet and outlet points regularly, especially after storms.
- The inlet should be free of undercutting, and no water should be going around the point of entry. If there are problems, the headwall should be reinforced with compacted earth or sand bags.
- The outlet point should be free of erosion and installed with appropriate outlet protection.
- For permanent installations, inspect pipe periodically for vandalism and physical distress such as slides and wind-throw.
- Normally the pipe slope is so steep that clogging is not a problem with smooth wall pipe, however, debris may become lodged in the pipe.

BMP C205: Subsurface Drains

Purpose

To intercept, collect, and convey groundwater to a satisfactory outlet, using a perforated pipe or conduit below the ground surface. Subsurface drains are also known as “french drains.” The perforated pipe provides a dewatering mechanism to drain excessively wet soils, provide a stable base for construction, improve stability of structures with shallow foundations, or to reduce hydrostatic pressure to improve slope stability.

Conditions of Use

Use when excessive water must be removed from the soil. The soil permeability, depth to water table and impervious layers are all factors which may govern the use of subsurface drains.

Design and Installation Specifications

- **Relief drains** are used either to lower the water table in large, relatively flat areas, improve the growth of vegetation, or to remove surface water.
 - They are installed along a slope and drain in the direction of the slope
 - They can be installed in a grid pattern, a herringbone pattern, or a random pattern.
- **Interceptor drains** are used to remove excess groundwater from a slope, stabilize steep slopes, and lower the water table immediately below a slope to prevent the soil from becoming saturated.
 - They are installed perpendicular to a slope and drain to the side of the slope
 - They usually consist of a single pipe or series of single pipes instead of a patterned layout.
- **Depth and spacing of interceptor drains** – The depth of an interceptor drain is determined primarily by the depth to which the water table is to be lowered or the depth to a confining layer. For practical reasons, the maximum depth is usually limited to 6 feet, with a minimum cover of 2 feet to protect the conduit.
 - The soil should have depth and sufficient permeability to permit installation of an effective drainage system at a depth of 2 to 6 feet.

- An adequate outlet for the drainage system must be available either by gravity or by pumping.
- The quantity and quality of discharge needs to be accounted for in the receiving stream (additional detention may be required).
- This standard does not apply to subsurface drains for building foundations or deep excavations.
- The capacity of an interceptor drain is determined by calculating the maximum rate of groundwater flow to be intercepted. Therefore, it is good practice to make complete subsurface investigations, including hydraulic conductivity of the soil, before designing a subsurface drainage system.
- **Size of drain** – Size subsurface drains to carry the required capacity without pressure flow. Minimum diameter for a subsurface drain is 4 inches.
 - The minimum velocity required to prevent silting is 1.4 feet/second. The line shall be graded to achieve this velocity at a minimum. The maximum allowable velocity using a sand-gravel filter or envelope is 9 feet/second.
 - Filter material and fabric shall be used around all drains for proper bedding and filtration of fine materials. Envelopes and filters should surround the drain to a minimum of 3-inch thickness.
 - The outlet of the subsurface drain shall empty into a sediment pond through a catch basin. If free of sediment, it can then empty into a receiving channel, swale, or stable vegetated area adequately protected from erosion and undermining.
 - The trench shall be constructed on a continuous grade with no reverse grades or low spots.
 - Soft or yielding soils under the drain shall be stabilized with gravel or other suitable material.
 - Backfilling shall be done immediately after placement of the pipe. No sections of pipe shall remain uncovered overnight or during a rainstorm. Backfill material shall be placed in the trench in such a manner that the drain pipe is not displaced or damaged.
 - Do not install permanent drains near trees to avoid the tree roots that tend to clog the line. Use solid pipe with watertight

connections where it is necessary to pass a subsurface drainage system through a stand of trees.

- **Outlet** – Ensure that the outlet of a drain empties into a channel or other watercourse above the normal water level.
 - Secure an animal guard to the outlet end of the pipe to keep out rodents.
 - Use outlet pipe of corrugated metal, cast iron, or heavy-duty plastic without perforations and at least 10 feet long. Do not use an envelope or filter material around the outlet pipe, and bury at least two-thirds of the pipe length.
 - When outlet velocities exceed those allowable for the receiving stream, outlet protection must be provided.

Maintenance Standards

- Subsurface drains shall be checked periodically to ensure that they are free-flowing and not clogged with sediment or roots.
- The outlet shall be kept clean and free of debris.
- Trees located too close to a subsurface drain often clog the system with their roots. If a drain becomes clogged, relocate the drain or remove the trees as a last resort. Drain placement should be planned to minimize this problem.
- Where drains are crossed by heavy vehicles use steel plate or boards to prevent the lines from being crushed. After work is complete the line shall be checked to ensure that it was not crushed.

BMP C206: Level Spreader

Purpose

To provide a temporary outlet for dikes and diversions consisting of an excavated depression constructed at zero grade across a slope. To convert concentrated runoff to sheet flow and release it onto areas stabilized by existing vegetation or an engineered filter strip.

Conditions of Use

Used when a concentrated flow of water needs to be dispersed over a large area with existing stable vegetation.

Items to consider are:

- What is the risk of erosion or damage if the flow may become concentrated?
- Is an easement required if discharged to adjoining property?
- Most of the flow should be as groundwater and not as surface flow.
- Is there an unstable area downstream that cannot accept additional groundwater?

Use only where the slopes are gentle, the water volume is relatively low, and the soil will adsorb most of the low flow events.

Design and Installation Specifications

- Use above undisturbed areas that are stabilized by existing vegetation.
- If the level spreader has any low points, flow will concentrate, create channels and may cause erosion.
- Discharge area below the outlet must be uniform with a slope of less than 5H:1V.
- Outlet to be constructed level in a stable, undisturbed soil profile (not on fill).
- The runoff shall not reconcentrate after release unless intercepted by another downstream measure.
- The grade of the channel for the last 20 feet of the dike or interceptor entering the level spreader shall be less than or equal to

1 percent. The grade of the level spreader shall be 0 percent to ensure uniform spreading of storm runoff.

- A 6-inch high gravel berm placed across the level lip shall consist of washed crushed rock, 2- to 4-inch or 0.75-inch to 1.5-inch size.
- The spreader length shall be determined by estimating the peak flow expected from the 10-year, 24-hour design storm. The length of the spreader shall be a minimum of 15 feet for 0.1 cubic feet per second and shall be 10 feet for each 0.1 cubic feet per second thereafter to a maximum of 0.5 cubic feet per second per spreader. Use multiple spreaders for higher flows.
- The width of the spreader should be at least 6 feet.
- The depth of the spreader as measured from the lip should be at least 6 inches and it should be uniform across the entire length.
- Level spreaders shall be setback 100 feet minimum from the property line unless there is an easement for flow or the flow is directed to a natural drainage course.
- Level spreaders, when installed every so often in grassy swales, keep the flows from concentrating. Materials that can be used include sand bags, lumber, logs, concrete, and pipe. To function properly, the material needs to be installed level and on contour. Figures 3.7 and 3.8 provide a cross-section and a detail of a level spreader.

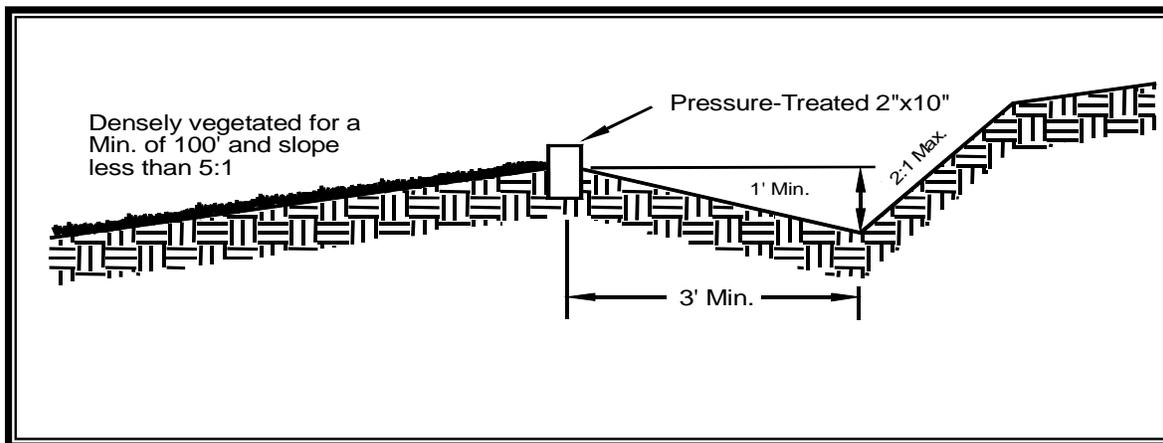


Figure 3.7. Cross-Section of Level Spreader.

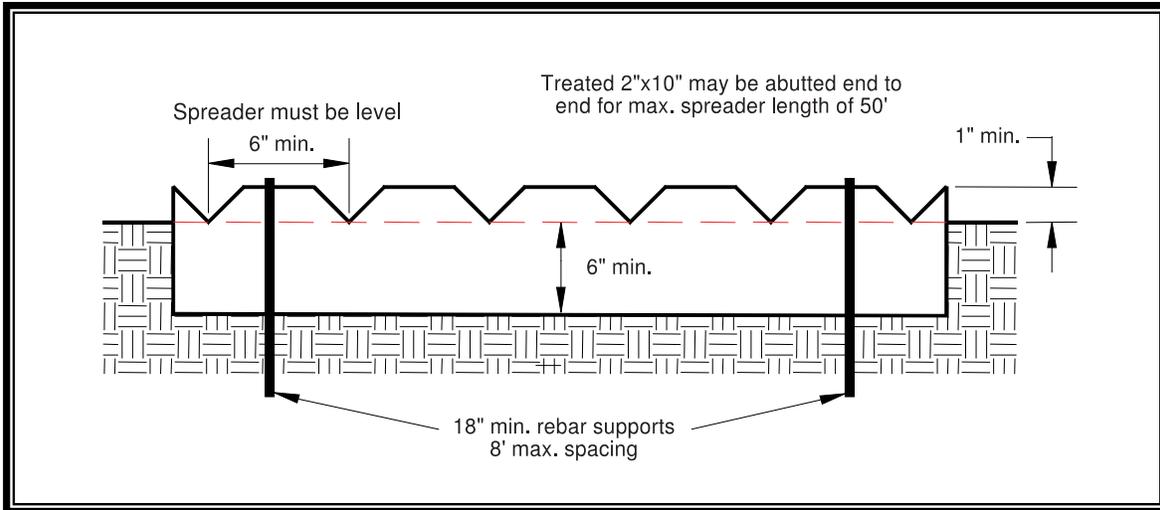


Figure 3.8. Detail of Level Spreader.

Maintenance Standards

- The spreader should be inspected after every runoff event to ensure that it is functioning correctly.
- The contractor should avoid the placement of any material on the structure and should prevent construction traffic from crossing over the structure.
- If the spreader is damaged by construction traffic, it shall be immediately repaired.

BMP C207: Check Dams

Purpose

Construction of small dams across a swale or ditch reduces the velocity of concentrated flow and dissipates energy at the check dam.

Conditions of Use

- Where temporary channels or permanent channels are not yet vegetated, channel lining is infeasible, and velocity checks are required.
- Check dams may not be placed in streams unless approved by the WDFW. Check dams may not be placed in wetlands without approval from a permitting agency.
- Check dams shall not be placed below the expected backwater from any salmonid bearing water between October 1 and May 31 to ensure that there is no loss of high flow refuge habitat for overwintering juvenile salmonids and emergent salmonid fry.

Design and Installation Specifications

- Whatever material is used, the dam should form a triangle when viewed from the side. This prevents undercutting as water flows over the face of the dam rather than falling directly onto the ditch bottom.
- Check dams in association with sumps work more effectively at slowing flow and retaining sediment than just a check dam alone. A deep sump should be provided immediately upstream of the check dam.
- In some cases, if carefully located and designed, check dams can remain as permanent installations with very minor regrading. They may be left as either spillways, in which case accumulated sediment would be graded and seeded, or as check dams to prevent further sediment from leaving the site.
- Check dams can be constructed of either rock or pea-gravel filled bags. Straw bales are not an allowed construction material. Numerous new products are also available for this purpose. They tend to be reusable, quick and easy to install, effective, and cost efficient.
- Check dams should be placed perpendicular to the flow of water.
- The maximum spacing between the dams shall be such that the toe of the upstream dam is at the same elevation as the top of the downstream dam.

- Keep the maximum height at 2 feet at the center of the dam.
- Keep the center of the check dam at least 12 inches lower than the outer edges at natural ground elevation.
- Keep the side slopes of the check dam at 2:1 or flatter.
- Key the stone into the ditch banks and extend it beyond the abutments a minimum of 18 inches to avoid washouts from overflow around the dam.
- Use filter fabric foundation under a rock or sand bag check dam. If a blanket ditch liner is used, this is not necessary. A piece of organic or synthetic blanket cut to fit will also work for this purpose.
- Rock check dams shall be constructed of appropriately sized rock. The rock must be placed by hand or by mechanical means (no dumping of rock to form dam) to achieve complete coverage of the ditch or swale and to ensure that the center of the dam is lower than the edges. The rock used must be large enough to stay in place given the expected design flow through the channel.
- In the case of grass-lined ditches and swales, all check dams and accumulated sediment shall be removed when the grass has matured sufficiently to protect the ditch or swale – unless the slope of the swale is greater than 4 percent. The area beneath the check dams shall be seeded and mulched immediately after dam removal.
- Ensure that channel appurtenances, such as culvert entrances below check dams, are not subject to damage or blockage from displaced stones. Attachments Section C, Detail 19.0 depicts a typical rock check dam.

Maintenance Standards

- Check dams shall be monitored for performance and sediment accumulation during and after each runoff producing rainfall. Sediment shall be removed when it reaches one half the sump depth.
- Anticipate submergence and deposition above the check dam and erosion from high flows around the edges of the dam.
- If significant erosion occurs between dams, install a protective riprap liner in that portion of the channel.

BMP C208: Triangular Silt Dike (Geotextile-Encased Check Dam)

Purpose

Triangular silt dikes may be used as check dams, for perimeter protection, for temporary soil stockpile protection, for drop inlet protection, or as a temporary interceptor dike. See Attachments Section C, Detail 14.0 for example details.

Conditions of Use

- May be used for temporary check dams in ditches of any dimension
- May be used on soil or pavement with adhesive or staples
- TSDs have been used to build temporary:
 - Sediment ponds
 - Diversion ditches
 - Concrete wash out facilities
 - Curbing
 - Water bars
 - Level spreaders
 - Berms.

Design and Installation Specifications

- Made of urethane foam sewn into a woven geosynthetic fabric.
- It is triangular, 10 inches to 14 inches high in the center, with a 20-inch to 28-inch base. A 2-foot apron extends beyond both sides of the triangle along its standard section of 7 feet. A sleeve at one end allows attachment of additional sections as needed.
- Install with ends curved up to prevent water from flowing around the ends.
- The fabric flaps and check dam units are attached to the ground with wire staples. Wire staples should be No. 11 gauge wire and should be 200 millimeters to 300 millimeters in length.
- When multiple units are installed, the sleeve of fabric at the end of the unit shall overlap the abutting unit and be stapled.
- Check dams should be located and installed as soon as construction will allow.

- Check dams should be placed perpendicular to the flow of water.
- When used as check dams, the leading edge must be secured with rocks, sandbags, or a small key slot and staples.
- In the case of grass-lined ditches and swales, check dams and accumulated sediment shall be removed when the grass has matured sufficiently to protect the ditch or swale unless the slope of the swale is greater than 4 percent. The area beneath the check dams shall be seeded and mulched immediately after dam removal.

Maintenance Standards

- Triangular silt dams shall be monitored for performance and sediment accumulation during and after each runoff producing rainfall. Sediment shall be removed when it reaches one half the height of the dam.
- Anticipate submergence and deposition above the triangular silt dam and erosion from high flows around the edges of the dam. Immediately repair any damage or any undercutting of the dam.

BMP C209: Outlet Protection

Purpose

Outlet protection prevents scour at conveyance outlets and minimizes the potential for downstream erosion by reducing the velocity of concentrated stormwater flows.

Conditions of Use

Outlet protection is required at the outlets of all ponds, pipes, ditches, or other conveyances, and where runoff is conveyed to a natural or manmade drainage feature such as a stream, wetland, lake, or ditch.

Design and Installation Specifications

- The receiving channel at the outlet of a culvert shall be protected from erosion by rock lining a minimum of 6 feet downstream and extending up the channel sides a minimum of 1-foot above the maximum tailwater elevation or 1-foot above the crown, whichever is higher. For large pipes (more than 18 inches in diameter), the outlet protection lining of the channel is lengthened to four times the diameter of the culvert.
- Standard wingwalls, and tapered outlets and paved channels should also be considered when appropriate for permanent culvert outlet protection. (See WSDOT Hydraulic Manual, available through WSDOT Engineering Publications.)
- Organic or synthetic erosion blankets, with or without vegetation, are usually more effective than rock, cheaper, and easier to install. Materials can be chosen using manufacturer product specifications. ASTM test results are available for most products and the designer can choose the correct material for the expected flow.
- With low flows, vegetation (including sod) can be effective.
- The following guidelines shall be used for riprap outlet protection:
 - If the discharge velocity at the outlet is less than 5 feet per second (pipe slope less than 1 percent), use 2-inch to 8-inch riprap. Minimum thickness is 1 foot.
 - For 5 to 10 feet per second discharge velocity at the outlet (pipe slope less than 3 percent), use 24-inch to 4-foot riprap. Minimum thickness is 2 feet.
 - For outlets at the base of steep slope pipes (pipe slope greater than 10 percent), an engineered energy dissipater shall be used.

- Filter fabric or erosion control blankets should always be used under riprap to prevent scour and channel erosion.
- New pipe outfalls can provide an opportunity for low-cost fish habitat improvements. For example, an alcove of low-velocity water can be created by constructing the pipe outfall and associated energy dissipater back from the stream edge and digging a channel, over-widened to the upstream side, from the outfall. Overwintering juvenile and migrating adult salmonids may use the alcove as shelter during high flows. Bank stabilization, bioengineering, and habitat features may be required for disturbed areas. See Volume III, Chapter 4 for more information on outfall system design.

Maintenance Standards

- Inspect and repair as needed
- Add rock as needed to maintain the intended function
- Clean energy dissipater if sediment builds up.

BMP C220: Storm Drain Inlet Protection

Purpose

Purpose is to prevent coarse sediment from entering drainage systems prior to permanent stabilization of the disturbed area.

Conditions of Use

For use where storm drain inlets are to be made operational before permanent stabilization of the disturbed drainage area. Protection should be provided for all storm drain inlets downslope and within 500 feet of a disturbed or construction area, unless the runoff that enters the catch basin will be conveyed to a sediment pond or trap. Inlet protection may be used anywhere to protect the drainage system. It is likely that the drainage system will still require cleaning.

Table 3.9 lists several options for inlet protection. All of the methods for storm drain inlet protection are prone to plugging and require a high frequency of maintenance. Drainage areas should be limited to 1 acre or less. Emergency overflows may be required where stormwater ponding would cause a hazard. If an emergency overflow is provided, additional end-of-pipe treatment may be required.

Table 3.9. Storm Drain Inlet Protection.

Type of Inlet Protection	Emergency Overflow	Applicable for Paved/Earthen Surfaces	Conditions of Use
Drop Inlet Protection			
Excavated drop inlet protection	Yes, temporary flooding will occur	Earthen	Applicable for heavy flows. Easy to maintain. Large area Requirement: 30 x 30-feet/acre
Block and gravel drop inlet protection	Yes	Paved or Earthen	Applicable for heavy concentrated flows. Will not pond.
Gravel and wire drop inlet protection	No		Applicable for heavy concentrated flows. Will pond. Can withstand traffic.
Catch basin filters	Yes	Paved or Earthen	Frequent maintenance required.
Curb Inlet Protection			
Curb inlet protection with a wooden weir	Small capacity overflow	Paved	Used for sturdy, more compact installation.
Block and gravel curb inlet protection	Yes	Paved	Sturdy, but limited filtration.
Culvert Inlet Protection			
Culvert inlet sediment trap			18 month expected life.

Design and Installation Specifications

- *Excavated Drop Inlet Protection* – An excavated impoundment around the storm drain. Sediment settles out of the stormwater prior to entering the storm drain.
 - Depth 1 to 2 feet as measured from the crest of the inlet structure
 - Side slopes of excavation no steeper than 2:1
 - Minimum volume of excavation 35 cubic yards
 - Shape basin to fit site with longest dimension oriented toward the longest inflow area
 - Install provisions for draining to prevent standing water problems
 - Clear the area of all debris
 - Grade the approach to the inlet uniformly
 - Drill weep holes into the side of the inlet
 - Protect weep holes with screen wire and washed aggregate
 - Seal weep holes when removing structure and stabilizing area
 - It may be necessary to build a temporary dike to the down slope side of the structure to prevent bypass flow.

- *Block and Gravel Filter* – A barrier formed around the storm drain inlet with standard concrete blocks and gravel. See also Attachments Section C, Detail 2.0.
 - Height 1 to 2 feet above inlet
 - Recess the first row 2 inches into the ground for stability
 - Support subsequent courses by placing a 2 x 4 through the block opening
 - Do not use mortar
 - Lay some blocks in the bottom row on their side for dewatering the pool
 - Place hardware cloth or comparable wire mesh with one-half-inch openings over all block openings

- Place gravel just below the top of blocks on slopes of 2:1 or flatter
- An alternative design is a gravel donut
- Inlet slope of 3:1
- Outlet slope of 2:1
- 1-foot wide level stone area between the structure and the inlet
- Inlet slope stones 3 inches in diameter or larger
- Outlet slope use gravel one-half to three-fourths inches at a minimum thickness of 1 foot.
- *Gravel and Wire Mesh Filter* – A gravel barrier placed over the top of the inlet. This structure does not provide an overflow. See also Attachments Section C, Detail 3.0.
 - Hardware cloth or comparable wire mesh with one-half-inch openings
 - Coarse aggregate
 - Height 1 foot or more, 18 inches wider than inlet on all sides
 - Place wire mesh over the drop inlet so that the wire extends a minimum of 1 foot beyond each side of the inlet structure
 - If more than one strip of mesh is necessary, overlap the strips
 - Place coarse aggregate over the wire mesh
 - The depth of the gravel should be at least 12 inches over the entire inlet opening and extend at least 18 inches on all sides.
- *Curb Inlet Protection with Wooden Weir* – Barrier formed around a curb inlet with a wooden frame and gravel.
 - Wire mesh with one-half-inch openings
 - Extra strength filter cloth
 - Construct a frame
 - Attach the wire and filter fabric to the frame
 - Pile coarse washed aggregate against wire/fabric
 - Place weight on frame anchors.

- *Block and Gravel Curb Inlet Protection* – Barrier formed around an inlet with concrete blocks and gravel. See Figure 3.9.
 - Wire mesh with one-half-inch openings.
 - Place two concrete blocks on their sides abutting the curb at either side of the inlet opening. These are spacer blocks.
 - Place a 2 x 4 stud through the outer holes of each spacer block to align the front blocks.
 - Place blocks on their sides across the front of the inlet and abutting the spacer blocks.
 - Place wire mesh over the outside vertical face.
 - Pile coarse aggregate against the wire to the top of the barrier.
- *Curb and Gutter Sediment Barrier* – Sandbag or rock berm (riprap and aggregate) 3 feet high and 3 feet wide in a horseshoe shape. See Figure 3.10.
 - Construct a horseshoe shaped berm, faced with coarse aggregate if using riprap, 3 feet high and 3 feet wide, at least 2 feet from the inlet.
 - Construct a horseshoe shaped sedimentation trap on the outside of the berm sized to sediment trap standards for protecting a culvert inlet.
- *Inlet Fabric Fence Filter* – Attachments Section C, Detail 1.0 provides an illustration of the use of filter fabric as an inlet protection option.

Maintenance Standards

- Catch basin filters should be inspected frequently, especially after storm events. If the insert becomes clogged, it should be cleaned or replaced.
- For systems using stone filters: If the stone filter becomes clogged with sediment, the stones must be pulled away from the inlet and cleaned or replaced. Since cleaning of gravel at a construction site may be difficult, an alternative approach would be to use the clogged stone as fill and put fresh stone around the inlet.
- Do not wash sediment into storm drains while cleaning. Spread all excavated material evenly over the surrounding land area or stockpile and stabilize as appropriate.

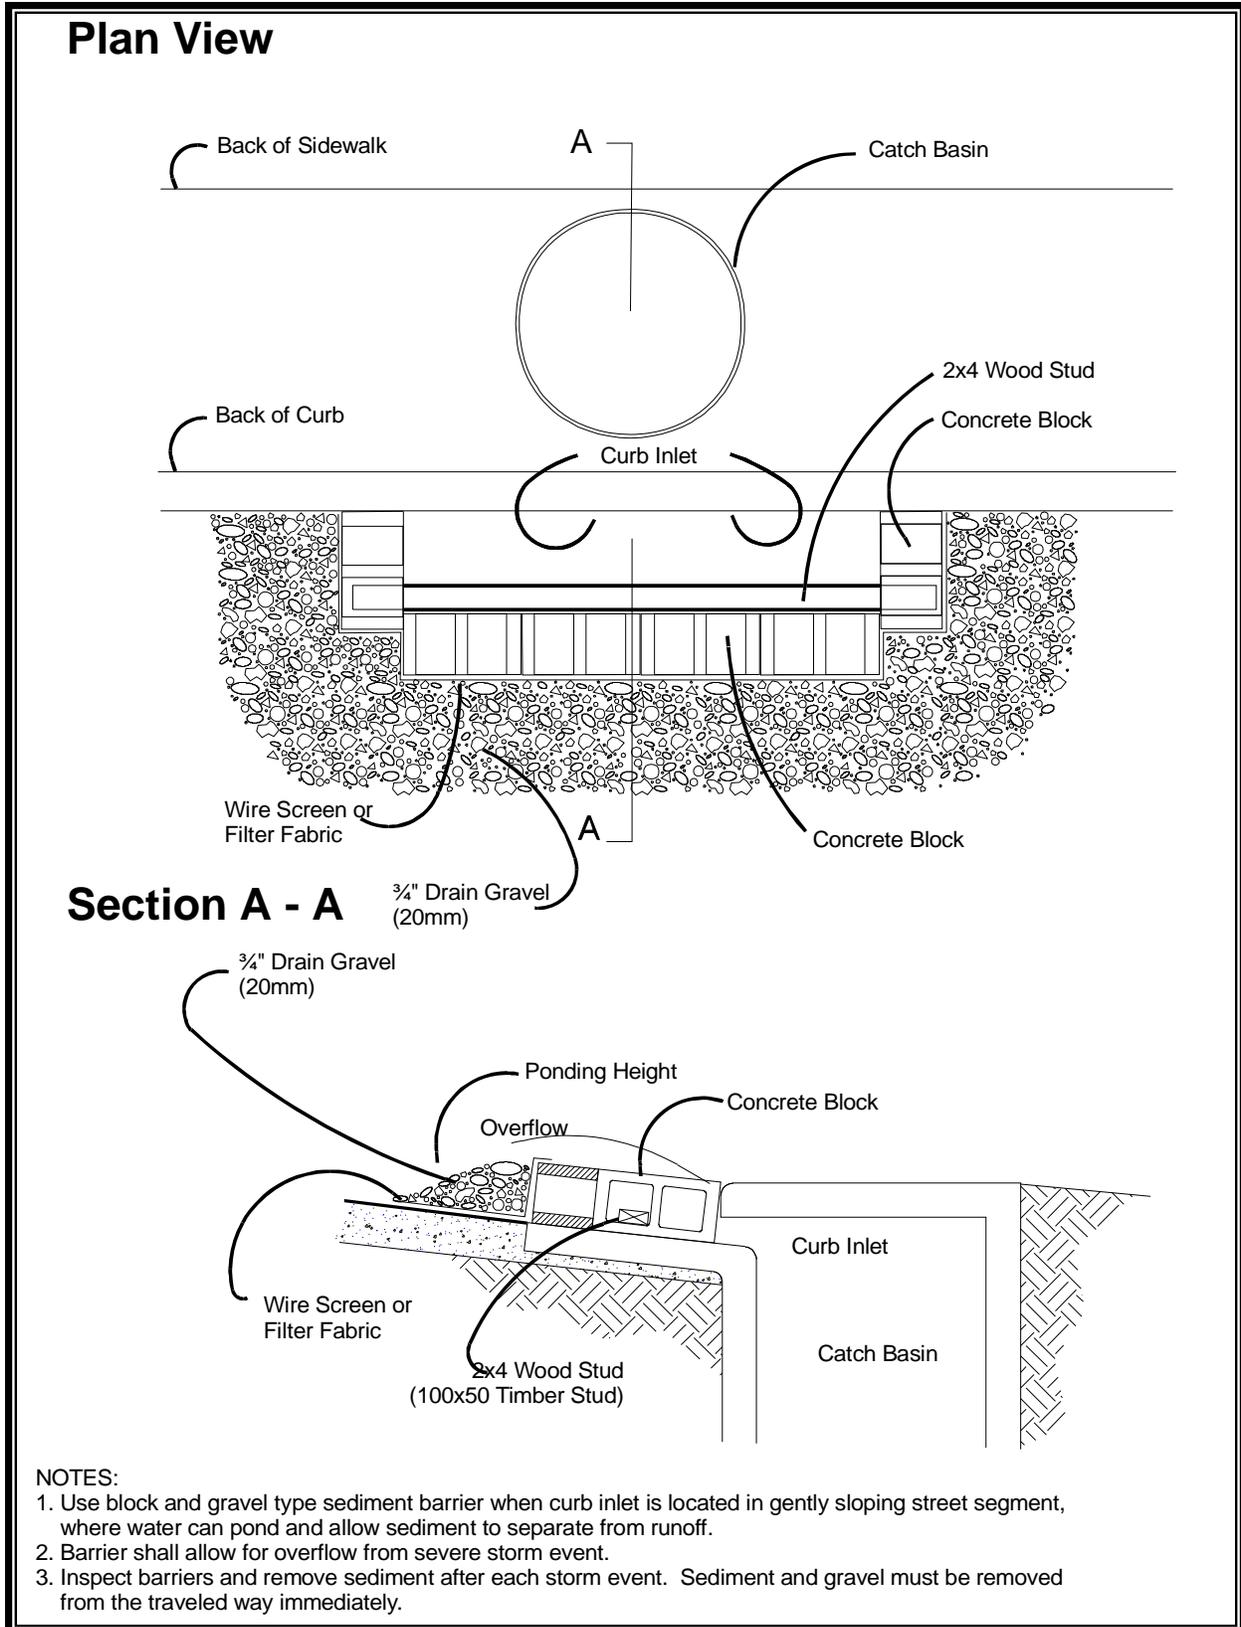


Figure 3.9. Block and Gravel Curb Inlet Protection.

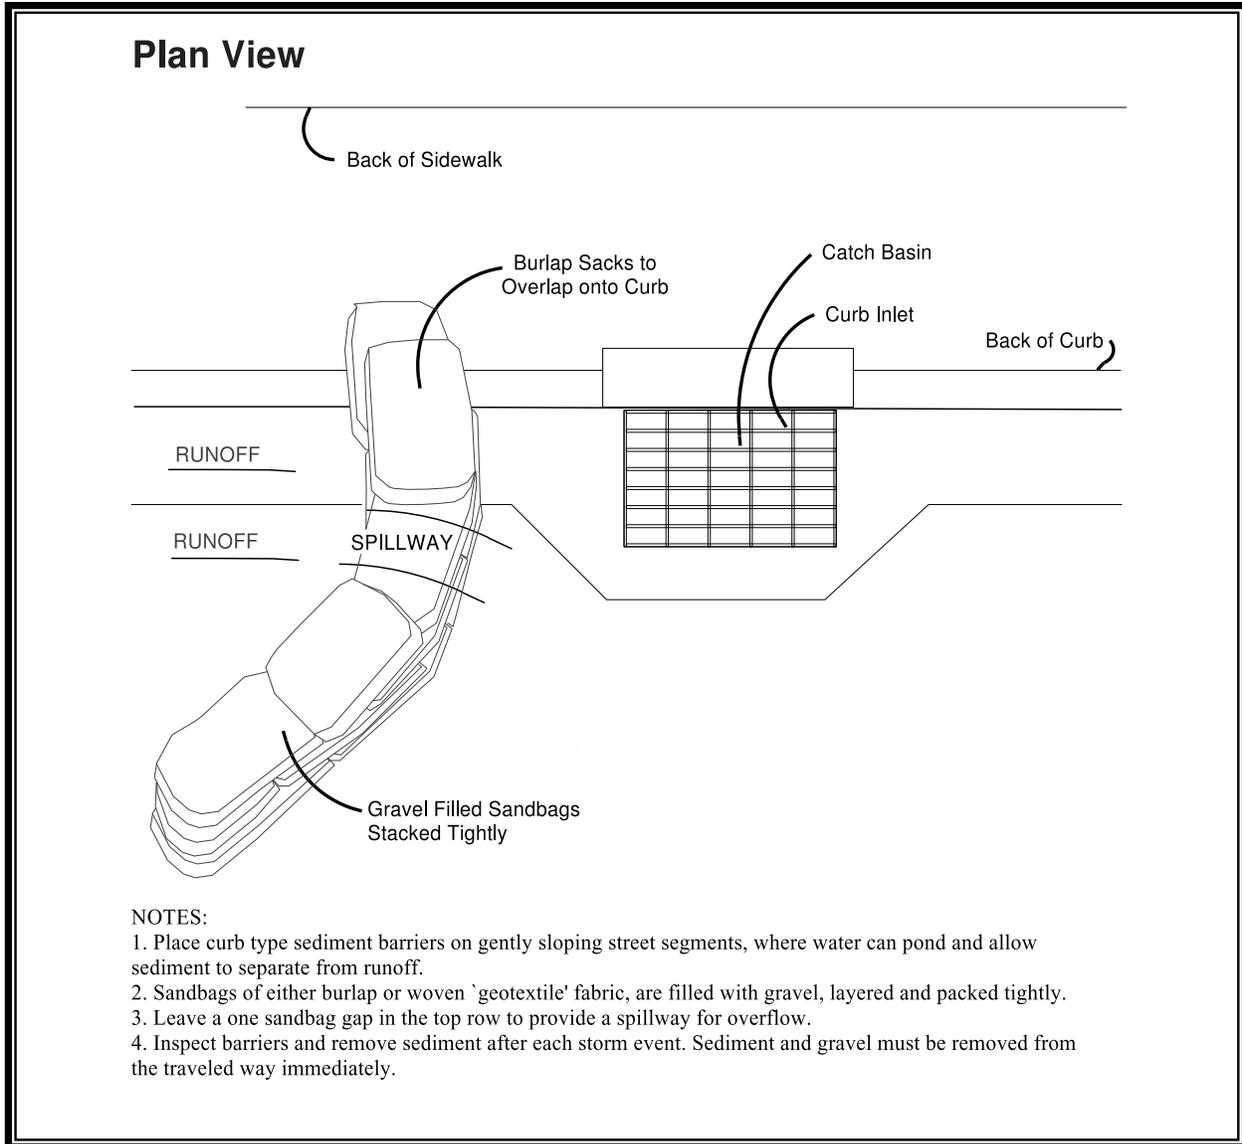


Figure 3.10. Curb and Gutter Barrier.

BMP C230: Straw Bale Barrier

Purpose

- To decrease the velocity of sheet flows and intercept and detain small amounts of sediment from disturbed areas of limited extent, preventing sediment from leaving the site. See Figure 3.11 for details on straw bale barriers.

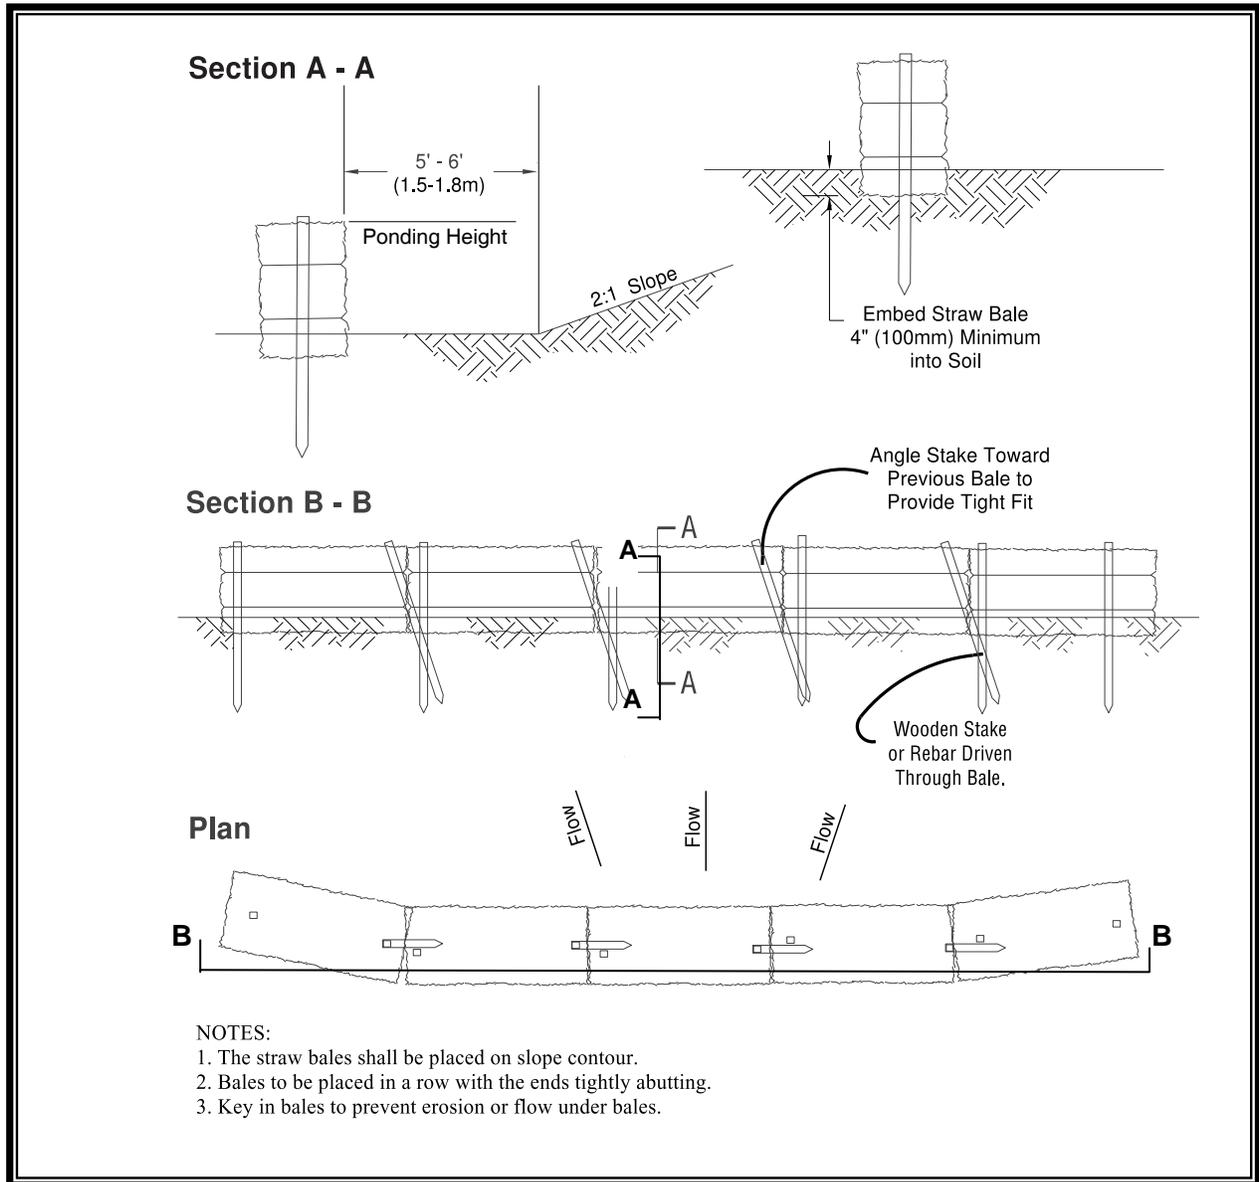


Figure 3.11. Straw Bale Barrier Conditions of Use.

- Below disturbed areas subject to sheet and rill erosion.
- Straw bales are among the most used and **least effective BMPs**. The best use of a straw bale is hand spread on the site.

- Where the size of the drainage area is no greater than one-fourth acre per 100 feet of barrier length; the maximum slope length behind the barrier is 100 feet; and the maximum slope gradient behind the barrier is 2:1.
- Where effectiveness is required for less than 3 months.
- **Under no circumstances shall straw bale barriers be constructed in streams, channels, swales or ditches.**
- Straw bale barriers should not be used where rock or hard surfaces prevent the full and uniform anchoring of the barrier.

Design and Installation Specifications

- Bales shall be placed in a single row, lengthwise on the contour, with ends of adjacent bales tightly abutting one another. An overflow/discharge point must be designated for runoff intercepted by the straw bales.
- All bales shall be either wire-bound or string-tied. Straw bales shall be installed so that bindings are oriented around the sides rather than along the tops and bottoms of the bales in order to prevent deterioration of the bindings.
- The barrier shall be entrenched and backfilled. A trench shall be excavated the width of a bale and the length of the proposed barrier to a minimum depth of 4 inches. The trench must be deep enough to remove all grass and other material that might allow underflow. After the bales are staked and chinked (filled by wedging), the excavated soil shall be backfilled against the barrier. Backfill soil shall conform to the ground level on the downhill side and shall be built up to 4 inches against the uphill side of the barrier.
- Each bale shall be securely anchored by at least two stakes or reinforcement bars driven through the bale. The first stake in each bale shall be driven toward the previously laid bale to force the bales together. Stakes or reinforcement bars shall be driven deep enough into the ground to securely anchor the bales. Stakes should not extend above the bales but instead should be driven in flush with the top of the bale for safety reasons.
- The gaps between the bales shall be chinked (filled by wedging) with straw to prevent water from escaping between the bales. Loose straw scattered over the area immediately uphill from a straw bale barrier tends to increase barrier efficiency. Wedging must be done carefully in order not to separate the bales.

Maintenance Standards

- Straw bale barriers shall be inspected immediately after each runoff-producing rainfall and at least daily during prolonged rainfall.
- Close attention shall be paid to the repair of damaged bales, end runs, and undercutting beneath bales.
- Necessary repairs to barriers or replacement of bales shall be accomplished promptly.
- Sediment deposits should be removed after each runoff-producing rainfall. They must be removed when the level of deposition reaches approximately one-half the height of the barrier.
- Any sediment deposits remaining in place after the straw bale barrier is no longer required shall be dressed to conform to the existing grade, prepared and seeded.
- Straw bales used as a temporary straw bale barrier shall be removed after project completion and stabilization to prevent sprouting of unwanted vegetation.

BMP C231: Brush Barrier

Purpose

The purpose of brush barriers is to reduce the transport of coarse sediment from a construction site by providing a temporary physical barrier to sediment and reducing the runoff velocities of overland flow.

Conditions of Use

- Brush barriers may be used downslope of all disturbed areas of less than one-quarter acre.
- Brush barriers are not intended to treat concentrated flows, nor are they intended to treat substantial amounts of overland flow. Any concentrated flows must be conveyed through the drainage system to a sediment pond. The only circumstance in which overland flow can be treated solely by a barrier, rather than by a sediment pond, is when the area draining to the barrier is small.
- Brush barriers should only be installed on contours.

Design and Installation Specifications

- Height 2 feet (minimum) to 5 feet (maximum).
- Width 5 feet at base (minimum) to 15 feet (maximum).
- Filter fabric (geotextile) may be anchored over the brush berm to enhance the filtration ability of the barrier. Ten-ounce burlap is an adequate alternative to filter fabric.
- Chipped site vegetation, composted mulch, or wood-based mulch (hog fuel) can be used to construct brush barriers.
- A 100 percent biodegradable installation can be constructed using 10-ounce burlap held in place by wooden stakes. Attachments Section C, Detail 11.0 depicts a typical brush barrier.

Maintenance Standards

- There shall be no signs of erosion or concentrated runoff under or around the barrier. If concentrated flows are bypassing the barrier, it must be expanded or augmented by toed-in filter fabric.
- The dimensions of the barrier must be maintained.

BMP C233: Silt Fence

Purpose

Use of a silt fence reduces the transport of coarse sediment from a construction site by providing a temporary physical barrier to sediment and reducing the runoff velocities of overland flow. See Attachments Section C, Detail 8.0 for details on silt fence construction.

Conditions of Use

- Silt fence may be used downslope of all disturbed areas.
- Silt fence is not intended to treat concentrated flows, nor is it intended to treat substantial amounts of overland flow. Any concentrated flows must be conveyed through the drainage system to a sediment pond. The only circumstance in which overland flow can be treated solely by a silt fence, rather than by a sediment pond, is when the area draining to the fence is 1 acre or less and flow rates are less than 0.5 cubic feet per second.
- Silt fences should not be constructed in streams or used in V-shaped ditches. They are not an adequate method of silt control for anything deeper than sheet or overland flow.

Design and Installation Specifications

- Drainage area of 1 acre or less or in combination with sediment basin in a larger site.
- Maximum slope steepness (normal [perpendicular] to fence line) 1:1.
- Maximum sheet or overland flow path length to the fence of 100 feet.
- No flows greater than 0.5 cubic feet per second.
- The geotextile used shall meet the following standards. All geotextile properties listed below are minimum average roll values (i.e., the test result for any sampled roll in a lot shall meet or exceed the values shown in Table 3.10).
- Standard strength fabrics shall be supported with wire mesh, chicken wire, 2 x 2-inch wire, safety fence, or jute mesh to increase the strength of the fabric. Silt fence materials are available that have synthetic mesh backing attached.

Table 3.10. Geotextile Standards.

Polymeric Mesh AOS (ASTM D4751)	0.60 mm maximum for film wovens (#30 sieve). 0.30 mm maximum for all other geotextile types (#50 sieve). 0.15 mm minimum for all fabric types (#100 sieve).
Water Permittivity (ASTM D4491)	0.02 sec ⁻¹ minimum
Grab Tensile Strength (ASTM D4632)	180 lbs. Minimum for extra strength fabric. 100 lbs minimum for standard strength fabric.
Grab Tensile Strength (ASTM D4632)	30% maximum
Ultraviolet Resistance (ASTM D4355)	70% minimum

- Filter fabric material shall contain ultraviolet ray inhibitors and stabilizers to provide a minimum of six months of expected usable construction life at a temperature range of 0°F to 120°F.
- 100 percent biodegradable silt fence is available that is strong, long lasting, and can be left in place after the project is completed, if permitted by local regulations.
- Standard notes for construction plans and specifications follow. Refer to Attachments Section C, Detail 8.0 for standard silt fence details.
- The contractor shall install and maintain temporary silt fences at the locations shown in the plans. The silt fences shall be constructed in the areas of clearing, grading, or drainage prior to starting those activities. A silt fence shall not be considered temporary if the silt fence must function beyond the life of the contract. The silt fence shall prevent soil carried by runoff water from going beneath, through, or over the top of the silt fence, but shall allow the water to pass through the fence.
- The minimum height of the top of silt fence shall be 2 feet and the maximum height shall be 2.5 feet above the original ground surface.
- The geotextile shall be sewn together at the point of manufacture, or at an approved location as determined by the engineer, to form geotextile lengths as required. All sewn seams shall be located at a support post. Alternatively, two sections of silt fence can be overlapped, provided the contractor can demonstrate, to the satisfaction of the engineer, that the overlap is long enough and that the adjacent fence sections are close enough together to prevent silt laden water from escaping through the fence at the overlap.

- The geotextile shall be attached on the up-slope side of the posts and support system with staples, wire, or in accordance with the manufacturer's recommendations. The geotextile shall be attached to the posts in a manner that reduces the potential for geotextile tearing at the staples, wire, or other connection device. Silt fence back-up support for the geotextile in the form of a wire or plastic mesh is dependent on the properties of the geotextile selected for use. If wire or plastic back-up mesh is used, the mesh shall be fastened securely to the up-slope of the posts with the geotextile being up-slope of the mesh back-up support.
- The geotextile at the bottom of the fence shall be buried in a trench to a minimum depth of 4 inches below the ground surface. The trench shall be backfilled and the soil tamped in place over the buried portion of the geotextile, such that no flow can pass beneath the fence and scouring cannot occur. When wire or polymeric back-up support mesh is used, the wire or polymeric mesh shall extend into the trench a minimum of 3 inches.
- The fence posts shall be placed or driven a minimum of 18 inches. A minimum depth of 12 inches is allowed if topsoil or other soft subgrade soil is not present and a minimum depth of 18 inches cannot be reached. Fence post depths shall be increased by 6 inches if the fence is located on slopes of 3:1 or steeper and the slope is perpendicular to the fence. If required post depths cannot be obtained, the posts shall be adequately secured by bracing or guying to prevent overturning of the fence due to sediment loading.
- Silt fences shall be located on contour as much as possible, except at the ends of the fence, where the fence shall be turned uphill such that the silt fence captures the runoff water and prevents water from flowing around the end of the fence.
- If the fence must cross contours, with the exception of the ends of the fence, gravel check dams placed perpendicular to the back of the fence shall be used to minimize concentrated flow and erosion along the back of the fence. The gravel check dams shall be approximately 1-foot deep at the back of the fence. It shall be continued perpendicular to the fence at the same elevation until the top of the check dam intercepts the ground surface behind the fence. The gravel check dams shall consist of crushed surfacing base course, gravel backfill for walls, or shoulder ballast. The gravel check dams shall be located every 10 feet along the fence where the fence must cross contours. The slope of the fence line where contours must be crossed shall not be steeper than 3:1.

- Wood, steel or equivalent posts shall be used. Wood posts shall have minimum dimensions of 2 inches by 2 inches by 3 feet minimum length, and shall be free of defects such as knots, splits, or gouges. Steel posts shall consist of either size No. 6 reinforcement bar or larger, ASTM A 120 steel pipe with a minimum diameter of 1-inch, U, T, L, or C shape steel posts with a minimum weight of 1.35 pounds/feet or other steel posts having equivalent strength and bending resistance to the post sizes listed. The spacing of the support posts shall be a maximum of 6 feet.
- Fence back-up support, if used, shall consist of steel wire with a maximum mesh spacing of 2 inches, or a prefabricated polymeric mesh. The strength of the wire or polymeric mesh shall be equivalent to or greater than 180 pounds grab tensile strength. The polymeric mesh must be as resistant to ultraviolet radiation as the geotextile it supports.
- Silt fence installation using the slicing method specification details follow. Refer to Figure 3.12 for slicing method details.
- The base of both end posts must be at least 2 to 4 inches above the top of the silt fence fabric on the middle posts for ditch checks to drain properly. Use a hand level or string level, if necessary, to mark base points before installation.
- Install posts 3 to 4 feet apart in critical retention areas and 6 feet apart in standard applications.

Maintenance Standards

- Install posts 24 inches deep on the downstream side of the silt fence, and as close as possible to the fabric, enabling posts to support the fabric from upstream water pressure.
- Install posts with the nipples facing away from the silt fence fabric.
- Attach the fabric to each post with three ties, all spaced within the top 8 inches of the fabric. Attach each tie diagonally 45 degrees through the fabric, with each puncture at least 1 inch vertically apart. In addition, each tie should be positioned to hang on a post nipple when tightening to prevent sagging.
- Wrap approximately 6 inches of fabric around the end posts and secure with three ties.
- No more than 24 inches of a 36-inch fabric is allowed aboveground level.

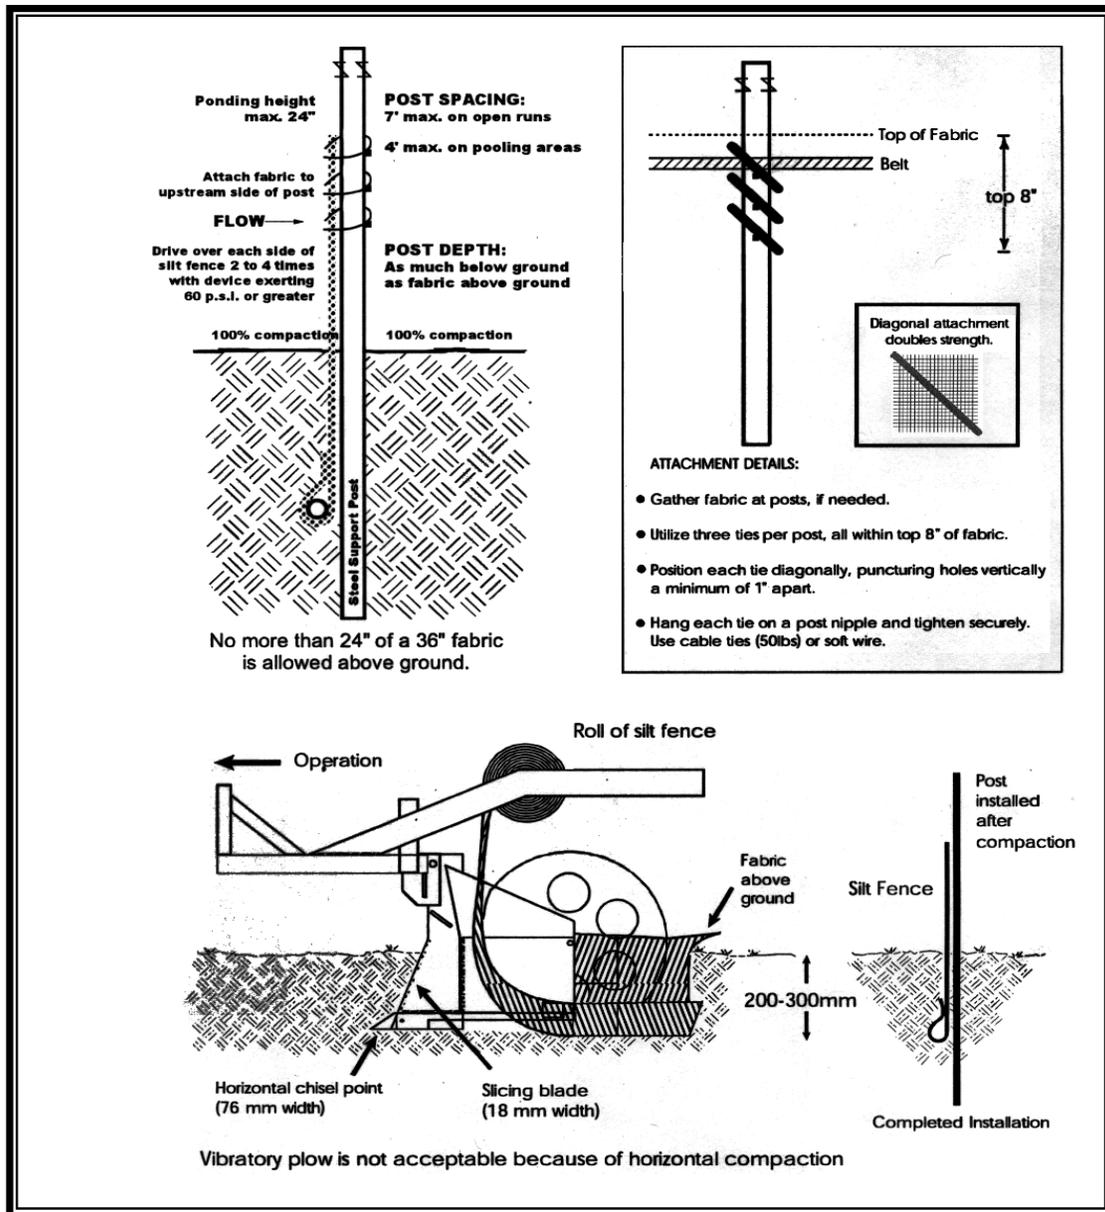


Figure 3.12. Silt Fence Installation by Slicing Method.

- The rope lock system must be used in all ditch check applications.
- The installation should be checked and corrected for any deviation before compaction. Use a flat-bladed shovel to tuck fabric deeper into the ground if necessary.
- Compaction is vitally important for effective results. Compact the soil immediately next to the silt fence fabric with the front wheel of the tractor, skid steer, or roller exerting at least 60 pounds per square inch. Compact the upstream side first and then each side twice for a total of four trips.

- Any damage shall be repaired immediately.
- If concentrated flows are evident uphill of the fence, they must be intercepted and conveyed to a sediment pond.
- It is important to check the uphill side of the fence for signs of the fence clogging and acting as a barrier to flow and then causing channelization of flows parallel to the fence. If this occurs, replace the fence or remove the trapped sediment.
- Sediment deposits shall either be removed when the deposit reaches approximately one-third the height of the silt fence, or a second silt fence shall be installed.
- If the filter fabric (geotextile) has deteriorated due to ultraviolet breakdown, it shall be replaced.

BMP C234: Vegetated Strip

Purpose

Vegetated strips reduce the transport of coarse sediment from a construction site by providing a temporary physical barrier to sediment and reducing the runoff velocities of overland flow.

Conditions of Use

- Vegetated strips may be used downslope of all disturbed areas.
- Vegetated strips are not intended to treat concentrated flows, nor are they intended to treat substantial amounts of overland flow. Any concentrated flows must be conveyed through the drainage system to a sediment pond. The only circumstance in which overland flow can be treated solely by a strip, rather than by a sediment pond, is when the following criteria are met (see Table 3.11):

Table 3.11. Vegetated Strips.

Average Slope	Slope Percent	Contributing Flowpath Length
1.5H:1V or less	67% or less	100 feet
2H:1V or less	50% or less	115 feet
4H:1V or less	25% or less	150 feet
6H:1V or less	16.7% or less	200 feet
10H:1V or less	10% or less	250 feet

Design and Installation Specifications

- The vegetated strip shall consist of a continuous strip of dense vegetation with a permeable topsoil and have a minimum 25-foot long flowpath. Grass-covered, landscaped areas are generally not adequate because the volume of sediment overwhelms the grass. Ideally, vegetated strips shall consist of undisturbed native growth with a well-developed soil that allows for infiltration of runoff.
- The slope within the strip shall not exceed 4H:1V.
- The uphill boundary of the vegetated strip shall be delineated with clearing limits.

Maintenance Standards

- Any areas damaged by erosion or construction activity shall be seeded immediately and protected by mulch.

- If more than 5 feet of the original vegetated strip width has had vegetation removed or is being eroded, sod must be installed.
- If there are indications that concentrated flows are traveling across the buffer, surface water controls must be installed to reduce the flows entering the buffer, or additional perimeter protection must be installed.

BMP C235: Straw Wattles

Purpose

Straw wattles are TESC barriers consisting of straw that is wrapped in biodegradable tubular plastic or similar encasing material. They reduce the velocity and can spread the flow of rill and sheet runoff, and can capture and retain sediment. Straw wattles are typically 8 to 10 inches in diameter and 25 to 30 feet in length. The wattles are placed in shallow trenches and staked along the contour of disturbed or newly constructed slopes. See Figure 3.13 for typical construction details.

Conditions of Use

- Disturbed areas that require immediate erosion protection
- Exposed soils during the period of short construction delays, or over winter months
- On slopes requiring stabilization until permanent vegetation can be established
- Straw wattles are effective for one to two wet seasons
- If conditions are appropriate, wattles can be staked to the ground using willow cuttings for added revegetation
- Rilling can occur beneath wattles if not properly entrenched and water can pass between wattles if not tightly abutted together.

Design Criteria

- It is critical that wattles are installed perpendicular to the flow direction and parallel to the slope contour.
- Narrow trenches should be dug across the slope on contour to a depth of 3 to 5 inches on clay soils and soils with gradual slopes. On loose soils, steep slopes, and areas with high rainfall, the trenches should be dug to a depth of 5 to 7 inches, or one-half to two-thirds of the thickness of the wattle.
- Start building trenches and installing wattles from the base of the slope and work up. Excavated material should be spread evenly along the uphill slope and compacted using hand tamping or other methods.
- Construct trenches on contours at intervals of 10 to 25 feet apart depending on the steepness of the slope, soil type, and rainfall. The steeper the slope, the closer together the trenches.

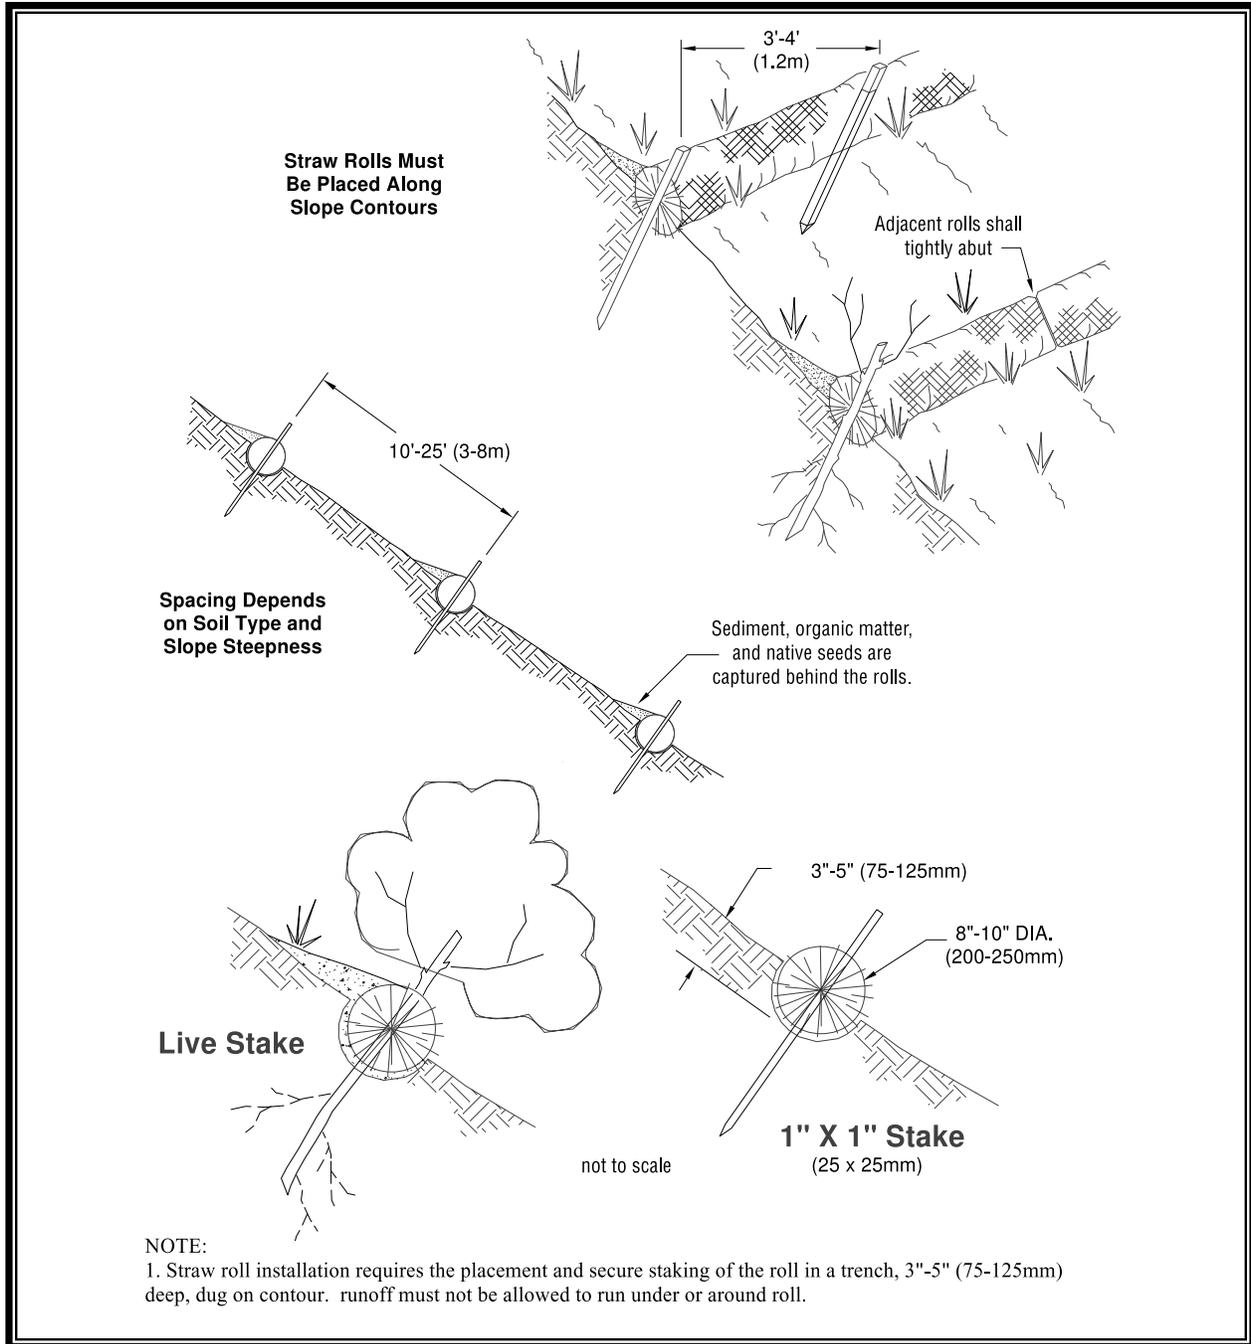


Figure 3.13. Straw Wattles.

- Install the wattles snugly into the trenches and abut tightly end to end. Do not overlap the ends.
- Install stakes at each end of the wattle, and at 4-foot centers along entire length of wattle.
- If required, install pilot holes for the stakes using a straight bar to drive holes through the wattle and into the soil.

- At a minimum, wooden stakes should be approximately 0.75 x 0.75 x 24 inches. Willow cuttings or three-eighths-inch reinforcement bar can also be used for stakes.

Maintenance Standards

- Stakes should be driven through the middle of the wattle, leaving 2 to 3 inches of the stake protruding above the wattle.
- Wattles may require maintenance to ensure they are in contact with soil and thoroughly entrenched, especially after significant rainfall on steep sandy soils.
- Inspect the slope after significant storms and repair any areas where wattles are not tightly abutted or water has scoured beneath the wattles.

BMP C240: Sediment Trap

Purpose

A sediment trap is a small temporary ponding area with a gravel outlet used to collect and store sediment from sites cleared and/or graded during construction. Sediment traps, along with other perimeter controls, shall be installed before any land disturbance takes place in the drainage area.

Conditions of Use

Prior to leaving a construction site, stormwater runoff must pass through a sediment pond or trap or other appropriate sediment removal BMP. Non-engineered sediment traps may be used on site prior to an engineered sediment trap or sediment pond to provide additional sediment removal capacity.

It is intended for use on sites where the tributary drainage area is less than 3 acres, with no unusual drainage features, and a projected build-out time of 6 months or less. The sediment trap is a temporary measure (with a design life of approximately 6 months) and shall be maintained until the site area is permanently protected against erosion by vegetation and/or structures.

Sediment traps are only effective in removing sediment down to about the medium silt size fraction. Runoff with sediment of finer grades (fine silt and clay) will pass through untreated, emphasizing the need to control erosion to the maximum extent first.

Whenever possible, sediment-laden water shall be discharged into onsite, relatively level, vegetated areas (see BMP C234 – Vegetated Strip). This is the only way to effectively remove fine particles from runoff unless chemical treatment or filtration is used. This can be particularly useful after initial treatment in a sediment trap. The areas of release must be evaluated on a site-by-site basis in order to determine appropriate locations for and methods of releasing runoff. Vegetated wetlands shall not be used for this purpose. Frequently, it may be possible to pump water from the collection point at the downhill end of the site to an upslope vegetated area. Pumping shall only augment the treatment system, not replace it, because of the possibility of pump failure or runoff volume in excess of pump capacity.

All projects that are constructing permanent facilities for runoff quantity control should use the rough-graded or final-graded permanent facilities for traps. This includes combined facilities and infiltration facilities. If infiltration facilities are to be used, the sides and bottom of the facility must only be rough excavated to a minimum of 2 feet above final grade. Final grading of the infiltration facility shall occur only when all contributing drainage areas are fully stabilized. When permanent facilities

are used as temporary sedimentation facilities, the surface area requirement of a sediment trap or pond must be met. If the surface area requirements are larger than the surface area of the permanent facility, then the trap or pond shall be enlarged to comply with the surface area requirement. The permanent pond shall also be divided into two cells as required for sediment ponds.

Either a permanent control structure or the temporary control structure (described in BMP C241, Temporary Sediment Pond) can be used. If a permanent control structure is used, it may be advisable to partially restrict the lower orifice with gravel to increase residence time while still allowing dewatering of the pond. A shut-off valve may be added to the control structure to allow complete retention of stormwater in emergency situations. In this case, an emergency overflow weir must be added.

A skimmer may be used for the sediment trap outlet if approved by the city.

Design and Installation Specifications

- See Attachments Section C, Details 21.0 and 22.0 for details.
- If permanent runoff control facilities are part of the project, they should be used for sediment retention.
- To determine the sediment trap geometry, first calculate the design surface area (*SA*) of the trap, measured at the invert of the weir. Use the following equation:

$$SA = FS(Q_2/V_s)$$

Where: Q_2 = Design inflow (cfs) based on the 2-year recurrence interval flow rate. Use a 15-minute time step using an approved continuous runoff model for the developed (unmitigated) site. If the time of concentration is less than 30-minutes, a 5-minute time step may be required. The 10-year recurrence interval peak flow shall be used if the project size, expected timing and duration of construction, or downstream conditions warrant a higher level of protection. If no hydrologic analysis is required, the rational method may be used.

V_s = The settling velocity of the soil particle of interest. The 0.02 mm (medium silt) particle with an assumed density of 2.65 g/cm³ has been selected as the particle of interest and has a settling velocity (V_s) of 0.00096 ft/sec.

$FS=$ A safety factor of 2 to account for non-ideal settling.

- Therefore, the equation for computing surface area becomes:

$$SA = 2 \times Q_2 / 0.00096$$

OR

2,080 square feet per cubic feet per second of inflow

Note: Even if permanent facilities are used, they must still have a surface area that is at least as large as that derived from the above formula. If they do not, the pond must be enlarged.

- To aid in determining sediment depth, all sediment traps shall have a staff gauge with a prominent labeled mark each 1-foot interval above the bottom of the trap.
- Sediment traps may not be feasible on utility projects due to the limited work space or the short-term nature of the work. Portable tanks may be used in place of sediment traps for utility projects.

Maintenance Standards

- Sediment shall be removed from the trap when it reaches 1-foot in depth
- Any damage to the pond embankments or slopes shall be repaired.

BMP C241: Temporary Sediment Pond

Purpose

Sediment ponds remove sediment from runoff originating from disturbed areas of the site. Sediment ponds are typically designed to remove sediment no smaller than medium silt (0.02 mm). Consequently, they usually reduce turbidity only slightly.

Conditions of Use

Prior to leaving a construction site, stormwater runoff must pass through a sediment pond or other appropriate sediment removal BMP.

A sediment pond shall be used where the contributing drainage area is 3 acres or more. Ponds must be used in conjunction with erosion control practices to reduce the amount of sediment flowing into the basin.

Design and Installation Specifications

- Sediment ponds must be installed only on sites where failure of the structure would not result in loss of life, damage to homes or buildings, or interruption of use or service of public roads or utilities. Also, sediment traps and ponds are attractive to children and can be very dangerous. If fencing of the pond is planned, the type of fence and its location shall be shown on the Erosion and Sediment Control Plan.
- Structures having a maximum storage capacity at the top of the dam of 10 acre-feet (435,600 ft³) or more are subject to the Washington Dam Safety Regulations (Chapter 173-175 WAC).
- See Attachments Section C, Details 5.0, 5.1, and 5.2 for details.
- If permanent runoff control facilities are part of the project, they should be used for sediment retention. The surface area requirements of the sediment pond must be met. This may require enlarging the permanent pond to comply with the surface area requirements. If a permanent control structure is used, it may be advisable to partially restrict the lower orifice with gravel to increase residence time while still allowing dewatering of the pond.
- Use of infiltration facilities for sedimentation ponds during construction tends to clog the soils and reduce their capacity to infiltrate. If infiltration facilities are to be used, the sides and bottom of the facility must only be rough excavated to a minimum of 2 feet above final grade. Final grading of the infiltration facility

shall occur only when all contributing drainage areas are fully stabilized. The infiltration pretreatment facility should be fully constructed and used with the sedimentation pond to help prevent clogging.

Determining Pond Geometry:

- Obtain the discharge from the hydrologic calculations of the peak flow for the 2-year recurrence interval runoff event (Q_2). Use a 15-minute time step and an approved continuous runoff model for the developed (unmitigated) site. If the time of concentration is less than 30 minutes, a 5-minute time step may be required. The 10-year recurrence interval peak flow shall be used if the project size, expected timing and duration of construction, or downstream conditions warrant a higher level of protection. If no hydrologic analysis is required, the Rational Method may be used.
- Determine the required surface area at the top of the riser pipe with the equation:

$$SA = 2 \times Q_2 / 0.00096$$

OR

2,080 square feet per cubic feet per second (cfs) of inflow

- See BMP C240 for more information on the derivation of the surface area calculation.
- The basic geometry of the pond can now be determined using the following design criteria:
 - Required surface area SA (from Step 2 above) at top of riser
 - Minimum 3.5-foot depth from top of riser to bottom of pond
 - Maximum 3:1 interior side slopes and maximum 2:1 exterior slopes. The interior slopes can be increased to a maximum of 2:1 if fencing is provided at or above the maximum water surface
 - One foot of freeboard between the top of the riser and the crest of the emergency spillway
 - Flat bottom
 - Minimum 1-foot deep spillway
 - Length-to-width ratio between 3:1 and 6:1.

Sizing of Discharge Mechanisms:

- The outlet for the pond consists of a combination of principal and emergency spillways. These outlets must pass the peak runoff expected from the contributing drainage area for a 100-year recurrence interval storm. If, due to site conditions and pond geometry, a separate emergency spill-way is not feasible, the principal spillway must pass the entire peak runoff expected from the 100-year recurrence interval storm. However, an attempt to provide a separate emergency spillway should always be made. The runoff calculations should be based on the site conditions during construction. The flow through the dewatering orifice cannot be utilized when calculating the 100-year recurrence interval storm elevation because of its potential to become clogged; therefore, available spillway storage must begin at the principal spillway riser crest.

- The principal spillway designed by the procedures contained in this standard will result in some reduction in the peak rate of runoff. However, the riser outlet design will not adequately control the pond discharge to the predevelopment discharge limitations as stated in Minimum Requirement #7: Flow Control. However, if the basin for a permanent stormwater detention pond is used for a temporary sedimentation pond, the control structure for the permanent pond can be used to maintain predevelopment discharge limitations. The size of the pond, the expected life of the construction project, the anticipated downstream effects and the anticipated weather conditions during construction, should be considered to determine the need of additional discharge control. See Figure 3.14 for riser inflow curves.
 - **Principal Spillway:** Determine the required diameter for the principal spillway (riser pipe). The diameter shall be the minimum necessary to pass the predeveloped, 10-year peak flow (Q_{10}) determined using a 15-minute time step in an approved continuous runoff model for the developed. Use Figure 3.14 to determine this diameter ($h = 1$ foot). *Note: A permanent control structure may be used instead of a temporary riser.*

 - **Emergency Overflow Spillway:** Determine the required size and design of the emergency overflow spillway for the developed 100-year peak flow indicated by an approved continuous runoff model using a 15-minute time step.

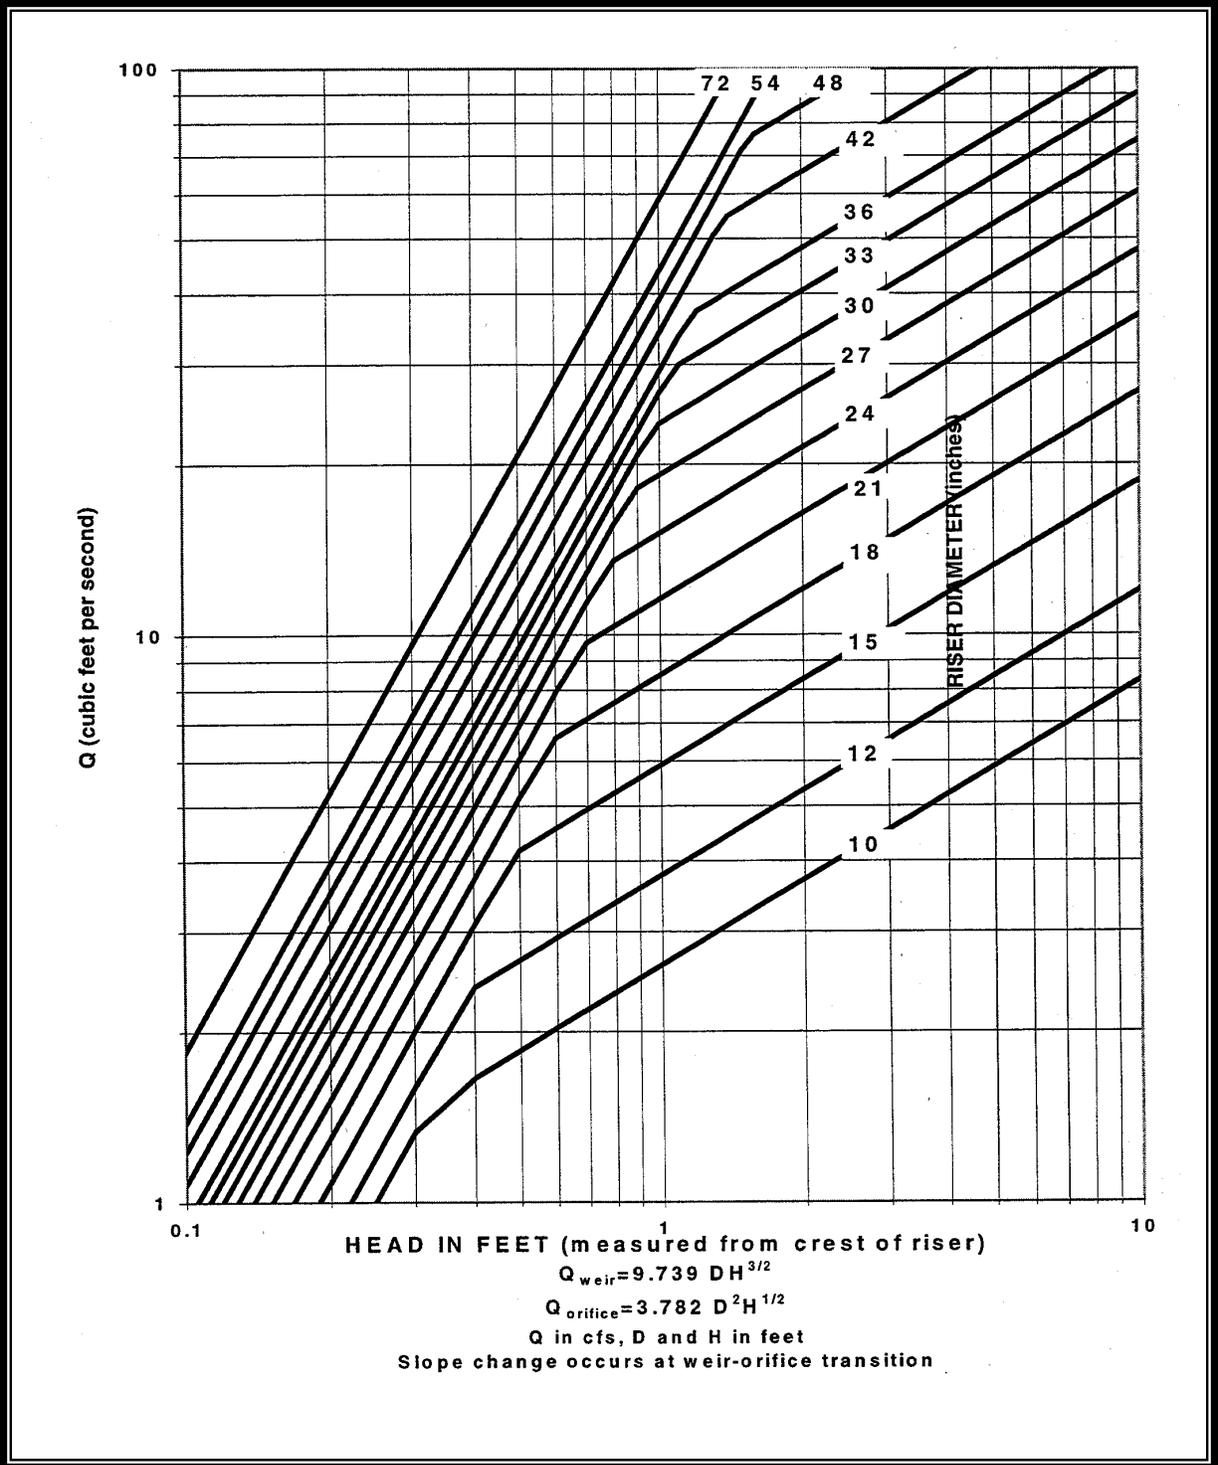


Figure 3.14. Riser Inflow Curves.

- **Dewatering Orifice:** Determine the size of the dewatering orifice(s) (minimum 1-inch diameter) using a modified version of the discharge equation for a vertical orifice and a basic equation for the area of a circular orifice. Determine the required area of the orifice with the following equation:

$$A_o = \frac{A_s (2h)^{0.5}}{0.6 \times 3600 T g^{0.5}}$$

Where: A_o = orifice area (square feet)

A_s = pond surface area (square feet)

h = head of water above orifice (height of riser in feet)

T = dewatering time (24 hours)

g = acceleration of gravity (32.2 feet/second²)

Convert the required surface area to the required diameter D of the orifice:

$$D = 24 \times \sqrt{\frac{A_o}{\pi}} = 13.54 \times \sqrt{A_o}$$

The vertical, perforated tubing connected to the dewatering orifice must be at least 2 inches larger in diameter than the orifice to improve flow characteristics. The size and number of perforations in the tubing should be large enough so that the tubing does not restrict flow. The orifice should control the flow rate.

Additional Design Specifications:

The **pond shall be divided** into two roughly equal volume cells by a permeable divider that will reduce turbulence while allowing movement of water between cells. The divider shall be at least one-half the height of the riser and a minimum of 1 foot below the top of the riser. Wire-backed, 2- to 3-foot high, extra strength filter fabric supported by treated 4 x 4-inches can be used as a divider. Alternatively, staked straw bales wrapped with filter fabric (geotextile) may be used. If the pond is more than 6 feet deep, a different mechanism must be proposed. A riprap embankment is one acceptable method of separation for deeper ponds. Other designs that satisfy the intent of this provision are allowed as long as the divider is permeable, structurally sound, and designed to prevent erosion under or around the barrier.

To aid in determining sediment depth, **1-foot intervals** above the pond bottom shall be prominently marked on the riser or a staff gauge.

If an **embankment** of more than 6 feet is proposed, the pond must comply with the criteria contained in Volume III, Section 3.2.1, regarding dam safety for detention BMPs. An electronic version of the Dam Safety Guidelines is available in PDF format at www.ecy.wa.gov/programs/wr/dams/dss.html.

The most common structural failure of sedimentation ponds is caused by piping. Piping refers to two phenomena: (1) water seeping through fine-grained soil, eroding the soil grain by grain and forming pipes or tunnels; and (2) water under pressure flowing upward through a granular soil with a head of sufficient magnitude to cause soil grains to lose contact and capability for support.

The most critical construction sequences to prevent piping will be:

- Tight connections between riser and barrel and other pipe connections
- Adequate anchoring of riser
- Proper soil compaction of the embankment and riser footing
- Proper construction of anti-seep devices.

Maintenance Standards

- Sediment shall be removed from the pond when it reaches 1-foot in depth.
- Any damage to the pond embankments or slopes shall be repaired.

BMP C250: Construction Stormwater Chemical Treatment

Purpose

This BMP applies when using stormwater chemicals in batch treatment or flow-through treatment.

Turbidity is difficult to control once fine particles are suspended in stormwater runoff from a construction site. Sedimentation ponds are effective at removing larger particulate matter by gravity settling, but are ineffective at removing smaller particulates such as clay and fine silt. Traditional ESC BMPs may not be adequate to ensure compliance with the water quality standards for turbidity in receiving water.

Chemical treatment can reliably provide exceptional reductions of turbidity and associated pollutants. Chemical treatment may be required to meet turbidity stormwater discharge requirements, especially when construction is to proceed through the wet season.

Conditions of Use

Formal written approval from both Ecology and Gig Harbor is required for the use of chemical treatment regardless of site size. When approved, the chemical treatment system must be included in the Stormwater Pollution Prevention Plan (SWPPP).

Design and Installation Specifications

See Appendix II-B for background information on chemical treatment.

Criteria for Chemical Treatment Product Use: Chemically treated stormwater discharged from construction sites must be nontoxic to aquatic organisms. The Chemical Technology Assessment Protocol (CTAPE) must be used to evaluate chemicals proposed for stormwater treatment. Only chemicals approved by Ecology under the CTAPE may be used for stormwater treatment. The approved chemicals, their allowable application techniques (batch treatment or flow-through treatment), allowable application rates, and conditions of use can be found at the Department of Ecology Emerging Technologies website: <http://www.ecy.wa.gov/programs/wq/stormwater/newtech/index.html>.

Treatment System Design Considerations: The design and operation of a chemical treatment system should take into consideration the factors that determine optimum, cost-effective performance. It is important to recognize the following:

- Only Ecology approved chemicals may be used and must follow approved dose rates.

- The pH of the stormwater must be in the proper range for the polymers to be effective, which is typically 6.5 to 8.5.
- The coagulant must be mixed rapidly into the water to ensure proper dispersion.
- A flocculation step is important to increase the rate of settling, to produce the lowest turbidity, and to keep the dosage rate as low as possible.
- Too little energy input into the water during the flocculation phase results in flocs that are too small and/or insufficiently dense. Too much energy can rapidly destroy floc as it is formed.
- Care must be taken in the design of the withdrawal system to minimize outflow velocities and to prevent floc discharge. Discharge from a batch treatment system should be directed through a physical filter such as a vegetated swale that would catch any unintended floc discharge. Currently, flow-through systems always discharge through the chemically enhanced sand filtration system.
- System discharge rates must take into account downstream conveyance integrity.

Polymer Batch Treatment Process Description:

A batch chemical treatment system consists of the stormwater collection system (either temporary diversion or the permanent site drainage system), an untreated stormwater storage pond, pumps, a chemical feed system, treatment cells, and interconnecting piping.

The batch treatment system shall use a minimum of two lined treatment cells in addition to the untreated stormwater storage pond. Multiple treatment cells allow for clarification of treated water while other cells are being filled or emptied. Treatment cells may be ponds or tanks. Ponds with constructed earthen embankments greater than 6 feet high require special engineering analyses.

Stormwater is collected at interception point(s) on the site and is diverted by gravity or by pumping to an untreated stormwater storage pond or other untreated stormwater holding area. The stormwater is stored until treatment occurs. It is important that the holding pond be large enough to provide adequate storage.

The first step in the treatment sequence is to check the pH of the stormwater in the untreated stormwater storage pond. The pH is adjusted by the application of carbon dioxide or a base until the stormwater in the

storage pond is within the desired pH range, 6.5 to 8.5. When used, carbon dioxide is added immediately downstream of the transfer pump. Typically sodium bicarbonate (baking soda) is used as a base, although other bases may be used. When needed, base is added directly to the untreated stormwater storage pond. The stormwater is recirculated with the treatment pump to provide mixing in the storage pond. Initial pH adjustments should be based on daily bench tests. Further pH adjustments can be made at any point in the process.

Once the stormwater is within the desired pH range (dependant on polymer being used), the stormwater is pumped from the untreated stormwater storage pond to a treatment cell as polymer is added. The polymer is added upstream of the pump to facilitate rapid mixing.

After polymer addition, the water is kept in a lined treatment cell for clarification of the sediment-floc. In a batch mode process, clarification typically takes from 30 minutes to several hours. Prior to discharge samples are withdrawn for analysis of pH and turbidity. If both are acceptable, the treated water is discharged.

Several configurations have been developed to withdraw treated water from the treatment cell. The original configuration is a device that withdraws the treated water from just beneath the water surface using a float with adjustable struts that prevent the float from settling on the cell bottom. This reduces the possibility of picking up sediment-floc from the bottom of the pond. The struts are usually set at a minimum clearance of about 12 inches; that is, the float will come within 12 inches of the bottom of the cell. Other systems have used vertical guides or cables which constrain the float, allowing it to drift up and down with the water level. More recent designs have an H-shaped array of pipes, set on the horizontal.

This scheme provides for withdrawal from four points rather than one. This configuration reduces the likelihood of sucking settled solids from the bottom. It also reduces the tendency for a vortex to form. Inlet diffusers, a long floating or fixed pipe with many small holes in it, are also an option.

Safety is a primary concern. Design should consider the hazards associated with operations, such as sampling. Facilities should be designed to reduce slip hazards and drowning. Tanks and ponds should have life rings, ladders, or steps extending from the bottom to the top.

Polymer Flow-Through Treatment Process Description:

At a minimum, a flow-through chemical treatment system consists of the stormwater collection system (either temporary diversion or the permanent

site drainage system), an untreated stormwater storage pond, and the chemically enhanced sand filtration system.

Stormwater is collected at interception point(s) on the site and is diverted by gravity or by pumping to an untreated stormwater storage pond or other untreated stormwater holding area. The stormwater is stored until treatment occurs. It is important that the holding pond be large enough to provide adequate storage.

Stormwater is then pumped from the untreated stormwater storage pond to the chemically enhanced sand filtration system where polymer is added. Adjustments to pH may be necessary before chemical addition. The sand filtration system continually monitors the stormwater for turbidity and pH. If the discharge water is ever out of an acceptable range for turbidity or pH, the water is recycled to the untreated stormwater pond where it can be retreated.

For batch treatment and flow-through treatment, the following equipment should be located in a lockable shed:

- The chemical injector
- Secondary non-corrosive containment for acid, caustic, buffering compound, and treatment chemical
- Emergency shower and eyewash
- Monitoring equipment.

System Sizing

Certain sites are required to implement flow control for the developed sites. These sites must also control stormwater release rates during construction. Generally, these are sites that discharge stormwater directly, or indirectly, through a conveyance system, into a fresh water. System sizing is dependent on flow control requirements.

Sizing Criteria for Batch Treatment Systems for Flow Control Exempt Water Bodies

The total volume of the untreated stormwater storage pond and treatment ponds or tanks must be large enough to treat the volume of stormwater that is produced during multiple day storm events. It is recommended that at a minimum the untreated stormwater storage pond be sized to hold 1.5 times the runoff volume of the 10-year, 24-hour storm event. Bypass should be provided around the chemical treatment system to accommodate extreme storm events.

Primary settling should be encouraged in the untreated stormwater storage pond. A forebay with access for maintenance may be beneficial.

There are two opposing considerations in sizing the treatment cells. A larger cell is able to treat a larger volume of water each time a batch is processed. However, the larger the cell the longer the time required to empty the cell. A larger cell may also be less effective at flocculation and therefore require a longer settling time. The simplest approach to sizing the treatment cell is to multiply the allowable discharge flow rate times the desired drawdown time. A 4-hour drawdown time allows one batch per cell per 8-hour work period, given 1 hour of flocculation followed by 2 hours of settling.

If the discharge is directly to a lake, flow control exempt receiving water listed in Volume I, or to an infiltration system, there is no discharge flow limit.

Ponds sized for flow control water bodies must at a minimum meet the sizing criteria for flow control exempt waters.

Sizing Criteria for Flow-Through Treatment Systems for Flow Control Exempt Water Bodies:

When sizing storage ponds or tanks for flow-through systems for flow control exempt water bodies, the treatment system capacity should be a factor. The untreated stormwater storage pond or tank should be sized to hold 1.5 times the runoff volume of the 10-year, 24-hour storm event minus the treatment system flow rate for an 8-hour period. For a chitosan-enhanced sand filtration system, the treatment system flow rate should be sized using a hydraulic loading rate between 6 to 8 gpm/ft². Other hydraulic loading rates may be more appropriate for other systems. Bypass should be provided around the chemical treatment system to accommodate extreme storms.

Sizing Criteria for Flow Control Water Bodies

Sites that must implement flow control for the developed site condition must also control stormwater release rates during construction. Construction site stormwater discharges shall not exceed the discharge durations of the pre-developed condition for the range of pre-developed discharge rates from 50 percent of the 2-year recurrence interval flow through the 10-year flow as predicted by an approved continuous runoff model. The pre-developed condition to be matched shall be the land cover condition immediately prior to the development project. This restriction on release rates can affect the size of the storage pond and treatment cells.

The following is how WWHM can be used to determine the release rates from the chemical treatment systems:

- Determine the pre-developed flow durations to be matched by entering the land use area under the “Pre-developed” scenario in WWHM. The default flow range is from 50 percent of the 2-year recurrence interval flow through the 10-year flow.
- Enter the post developed land use area in the “Developed Unmitigated” scenario in WWHM.
- Copy the land use information from the “Developed Unmitigated” to “Developed Mitigated” scenario.
- While in the “Developed Mitigated” scenario, add a pond element under the basin element containing the post-developed land use areas. This pond element represents information on the available untreated stormwater storage and discharge from the chemical treatment system. In cases where the discharge from the chemical treatment system is controlled by a pump, a stage/storage/discharge (SSD) table representing the pond must be generated outside WWHM and imported into WWHM. WWHM can route the runoff from the post-developed condition through this SSD table (the pond) and determine compliance with the flow duration standard. This would be an iterative design procedure where if the initial SSD table proved to be inadequate, the designer would have to modify the SSD table outside WWHM and re-import in WWHM and route the runoff through it again. The iteration will continue until a pond that complies with the flow duration standard is correctly sized.

Notes on SSD table characteristics:

- The pump discharge rate would likely be initially set at just below 50 percent of the 2-year recurrence interval flow from the pre-developed condition. As runoff coming into the untreated stormwater storage pond increases and the available untreated stormwater storage volume gets used up, it would be necessary to increase the pump discharge rate above 50 percent of the 2-year recurrence interval flow. The increase(s) above 50 percent of the 2-year recurrence interval flow must be such that they provide some relief to the untreated stormwater storage needs but at the same time will not cause violations of the flow duration standard at the higher flows. The final design SSD table will identify the appropriate pumping rates and the corresponding stage and storages.
- When building such a flow control system, the design must ensure that any automatic adjustments to the pumping rates will be as a result of changes to the available storage in accordance with the final design SSD table.

It should be noted that the above procedures would be used to meet the flow control requirements. The chemical treatment system must be able to meet the runoff treatment requirements. It is likely that the discharge flow rate of 50 percent of the 2-year recurrence interval or more may exceed the treatment capacity of the system. If that is the case, the untreated stormwater discharge rate(s) (i.e., influent to the treatment system) must be reduced to allow proper treatment. Any reduction in the flows would likely result in the need for a larger untreated stormwater storage volume.

- If the discharge is to a municipal storm drainage system, the allowable discharge rate may be limited by the capacity of the public system. It may be necessary to clean the municipal storm drainage system prior to the start of the discharge to prevent scouring solids from the drainage system. If the municipal storm drainage system discharges to a water body not on the flow control exempt list, the project site is subject to flow control requirements.
- If system design does not allow you to discharge at the slower rates as described above and if the site has a retention or detention pond that will serve the planned development, the discharge from the treatment system may be directed to the permanent retention/detention pond to comply with the flow control requirement. In this case, the untreated stormwater storage pond and treatment system will be sized according to the sizing criteria for flow-through treatment systems for flow control exempt water bodies described earlier except all discharge (water passing through the treatment system and stormwater bypassing the treatment system) will be directed into the permanent retention/detention pond. If site constraints make locating the untreated stormwater storage pond difficult, the permanent retention/detention pond may be divided to serve as the untreated stormwater storage pond and the post-treatment flow control pond. A berm or barrier must be used in this case so the untreated water does not mix with the treated water. Both untreated stormwater storage requirements, and adequate post-treatment flow control must be achieved. The post-treatment flow control pond's revised dimensions must be entered into the WWHM and the WWHM must be run to confirm compliance with the flow control requirement.

Maintenance Standards

Monitoring: At a minimum, the following monitoring shall be conducted. Test results shall be recorded on a daily log kept on site. Additional testing may be required by the NPDES Permit based on site conditions:

Operational Monitoring

- Total volume treated and discharged
- Flow must be continuously monitored and recorded at not greater than 15-minute intervals
- Type and amount of chemical used for pH adjustment, if any
- Quantity of chemical used for treatment
- Settling time.

Compliance Monitoring

- Influent and effluent pH and turbidity must be continuously monitored and recorded at not greater than 15-minute intervals.
- pH and turbidity of the receiving water.

Biomonitoring

- Treated stormwater must be non-toxic to aquatic organisms. Treated stormwater must be tested for aquatic toxicity or residual chemical content. Frequency of biomonitoring will be determined by Ecology.
- Residual chemical tests must be approved by Ecology prior to their use.
- If testing treated stormwater for aquatic toxicity, you must test for acute (lethal) toxicity. Bioassays shall be conducted by a laboratory accredited by Ecology, unless otherwise approved by Ecology. Acute toxicity tests shall be conducted per the CTAPE protocol.
- Discharge Compliance: Prior to discharge, treated stormwater must be sampled and tested for compliance with pH and turbidity limits. These limits may be established by the Construction Stormwater General Permit or a site-specific discharge permit. Sampling and testing for other pollutants may also be necessary at some sites. The pH must be within the range of 6.5 to 8.5 standard units and not cause a change in the pH of the receiving water of more than 0.2 standard units.
- Treated stormwater samples and measurements shall be taken from the discharge pipe or another location representative of the nature of the treated stormwater discharge. Samples used for determining

compliance with the water quality standards in the receiving water shall not be taken from the treatment pond prior to decanting. Compliance with the water quality standards is determined in the receiving water.

- Operator Training: Each contractor who intends to use chemical treatment shall be trained by an experienced contractor on an active site.

Standard BMPs:

- Surface stabilization BMPs should be implemented on site to prevent significant erosion. All sites shall use a truck wheel wash to prevent tracking of sediment off site.

Sediment Removal and Disposal:

- Sediment shall be removed from the storage or treatment cells as necessary. Typically, sediment removal is required at least once during a wet season and at the decommissioning of the cells. Sediment remaining in the cells between batches may enhance the settling process and reduce the required chemical dosage.
- Sediment that is known to be non-toxic may be incorporated into the site away from drainages.

BMP C251: Construction Stormwater Filtration

Purpose

Filtration removes sediment from runoff originating from disturbed areas of the site.

Conditions of Use

Traditional BMPs used to control soil erosion and sediment loss from sites under development may not be adequate to ensure compliance with the water quality standard for turbidity in the receiving water. Filtration may be used in conjunction with gravity settling to remove sediment as small as fine silt (0.5 µm). The reduction in turbidity will be dependent on the particle size distribution of the sediment in the stormwater. In some circumstances, sedimentation and filtration may achieve compliance with the water quality standard for turbidity.

The use of construction stormwater filtration does not require approval from Ecology or Gig Harbor as long as treatment chemicals are not used. Filtration in conjunction with polymer treatment requires testing under the Chemical Technology Assessment Protocol – Ecology (CTAPE) before it can be initiated. Approval from Gig Harbor and the appropriate regional Ecology office must be obtained at each site where polymers use is proposed prior to use. For more guidance on stormwater chemical treatment see BMP C250.

Background Information

Filtration with sand media has been used for over a century to treat water and wastewater. The use of sand filtration for treatment of stormwater has developed recently, generally to treat runoff from streets, parking lots, and residential areas. The application of filtration to construction stormwater is currently under development.

Design and Installation Specifications

Two types of filtration systems may be applied to construction stormwater treatment: rapid and slow. Rapid sand filters are the typical system used for water and wastewater treatment. They can achieve relatively high hydraulic flow rates, on the order of 2 to 20 gpm/sf, because they have automatic backwash systems to remove accumulated solids. In contrast, slow sand filters have very low hydraulic rates, on the order of 0.02 gpm/sf, because they do not have backwash systems. To date, slow sand filtration has generally been used to treat stormwater. Slow sand filtration is mechanically simple in comparison to rapid sand filtration but requires a much larger filter area.

- **Filtration Equipment.** Sand media filters are available with automatic backwashing features that can filter to 50 μm particle size. Screen or bag filters can filter down to 5 μm . Fiber wound filters can remove particles down to 0.5 μm . Filters should be sequenced from the largest to the smallest pore opening. Sediment removal efficiency will be related to particle size distribution in the stormwater.
- **Treatment Process Description.** Stormwater is collected at interception point(s) on the site and is diverted to an untreated stormwater sediment pond or tank for removal of large sediment and storage of the stormwater before it is treated by the filtration system. The untreated stormwater is pumped from the trap, pond, or tank through the filtration system in a rapid sand filtration system. Slow sand filtration systems are designed as flow through systems using gravity.

Sizing Criteria for Flow-Through Treatment Systems for Flow Control

Exempt Water Bodies:

When sizing storage ponds or tanks for flow-through systems for flow control exempt water bodies the treatment system capacity should be a factor. The untreated stormwater storage pond or tank should be sized to hold 1.5 times the runoff volume of the 10-year, 24-hour storm event minus the treatment system flow rate for an 8-hour period. For a chitosan-enhanced sand filtration system, the treatment system flow rate should be sized using a hydraulic loading rate between 6 to 8 gpm/ft². Other hydraulic loading rates may be more appropriate for other systems. Bypass should be provided around the chemical treatment system to accommodate extreme storms.

Sizing Criteria for Flow Control Water Bodies:

Sites that must implement flow control for the developed site condition must also control stormwater release rates during construction. Construction site stormwater discharges shall not exceed the discharge durations of the pre-developed condition for the range of pre-developed discharge rates from 50 percent of the 2-year recurrence interval flow through the 10-year flow as predicted by an approved continuous runoff model. The pre-developed condition to be matched shall be the land cover condition immediately prior to the development project. This restriction on release rates can affect the size of the storage pond, the filtration system, and the flow rate through the filter system.

The following is how WWHM can be used to determine the release rates from the filtration systems:

- Determine the pre-developed flow durations to be matched by entering the land use area under the “Pre-developed” scenario in WWHM. The default flow range is from 50 percent of the 2-year recurrence interval flow through the 10-year flow.
- Enter the post developed land use area in the “Developed Unmitigated” scenario in WWHM.
- Copy the land use information from the “Developed Unmitigated” to “Developed Mitigated” scenario.
- There are two possible ways to model stormwater filtration systems:
 - The stormwater filtration system uses an untreated stormwater storage pond/tank and the discharge from this pond/tank is pumped to one or more filters. In-line filtration chemicals would be added to the flow right after the pond/tank and before the filter(s). Because the discharge is pumped, WWHM cannot generate a stage/storage/discharge (SSD) table for this system. This system is modeled the same way as described in BMP C250 and is as follows:
 - While in the “Developed Mitigated” scenario, add a pond element under the basin element containing the post-developed land use areas. This pond element represents information on the available untreated stormwater storage and discharge from the filtration system. In cases where the discharge from the filtration system is controlled by a pump, a stage/storage/ discharge (SSD) table representing the pond must be generated outside WWHM and imported into WWHM. WWHM can route the runoff from the post-developed condition through this SSD table (the pond) and determine compliance with the flow duration standard. This would be an iterative design procedure where if the initial SSD table proved to be out of compliance, the designer would have to modify the SSD table outside WWHM and re-import in WWHM and route the runoff through it again. The iteration will continue until a pond that enables compliance with the flow duration standard is designed.
 - Notes on SSD table characteristics:
 - The pump discharge rate would likely be initially set at just below one-half if the 2-year recurrence

interval flow from the pre-developed condition. As runoff coming into the untreated stormwater storage pond increases and the available untreated stormwater storage volume gets used up, it would be necessary to increase the pump discharge rate above 50 percent of the 2-year recurrence interval flow. The increase(s) above 50 percent of the 2-year must be such that they provide some relief to the untreated stormwater storage needs but at the same time they will not cause violations of the flow duration standard at the higher flows. The final design SSD table will identify the appropriate pumping rates and the corresponding stage and storages.

- When building such a flow control system, the design must ensure that any automatic adjustments to the pumping rates will be as a result of changes to the available storage in accordance with the final design SSD table.
- The stormwater filtration system uses a storage pond/tank and the discharge from this pond/tank gravity flows to the filter. This is usually a slow sand filter system and it is possible to model it in WWHM as a Filter element or as a combination of Pond and Filter element placed in series. The stage/storage/discharge table(s) may then be generated within WWHM as follows:
 - While in the “Developed Mitigated” scenario, add a Filter element under the basin element containing the post-developed land use areas. The length and width of this filter element would have to be the same as the bottom length and width of the upstream untreated stormwater storage pond/tank.
 - In cases where the length and width of the filter is not the same as those for the bottom of the upstream untreated stormwater storage tank/pond, the treatment system may be modeled as a Pond element followed by a Filter element. By having these two elements, WWHM would then generate a SSD table for the storage pond which then gravity flows to the Filter element. The Filter element downstream of the untreated stormwater storage pond would have a storage component through the media, and an overflow component for when the filtration capacity is exceeded.

- WWHM can route the runoff from the post-developed condition through the treatment systems in 4b and determine compliance with the flow duration standard. This would be an iterative design procedure where if the initial sizing estimates for the treatment system proved to be inadequate, the designer would have to modify the system and route the runoff through it again. The iteration would continue until compliance with the flow duration standard is achieved.
- It should be noted that the above procedures would be used to meet the flow control requirements. The filtration system must be able to meet the runoff treatment requirements. It is likely that the discharge flow rate of 50 percent of the 2-year recurrence interval flow or more may exceed the treatment capacity of the system. If that is the case, the untreated stormwater discharge rate(s) (i.e., influent to the treatment system) must be reduced to allow proper treatment. Any reduction in the flows would likely result in the need for a larger untreated stormwater storage volume.
- If system design does not allow you to discharge at the slower rates as described above and if the site has a retention or detention pond that will serve the planned development, the discharge from the treatment system may be directed to the permanent retention/detention pond to comply with the flow control requirements. In this case, the untreated stormwater storage pond and treatment system will be sized according to the sizing criteria for flow-through treatment systems for flow control exempt water bodies described earlier except all discharges (water passing through the treatment system and stormwater bypassing the treatment system) will be directed into the permanent retention/detention pond. If site constraints make locating the untreated stormwater storage pond difficult, the permanent retention/detention pond may be divided to serve as the untreated stormwater discharge pond and the post-treatment flow control pond. A berm or barrier must be used in this case so the untreated water does not mix with the treated water. Both untreated stormwater storage requirements, and adequate post-treatment flow control must be achieved. The post-treatment flow control pond's revised dimensions must be entered into the WWHM and the WWHM must be run to confirm compliance with the flow control requirement.

Maintenance Standards

Rapid sand filters typically have automatic backwash systems that are triggered by a pre-set pressure drop across the filter. If the backwash water volume is not large or substantially more turbid than the untreated stormwater stored in the holding pond or tank, backwash return to the

untreated stormwater pond or tank may be appropriate. However, other means of treatment and disposal may be necessary.

Screen, bag, and fiber filters must be cleaned and/or replaced when they become clogged.

Sediment shall be removed from the storage and/or treatment ponds as necessary. Typically, sediment removal is required once or twice during a wet season and at the decommissioning of the ponds.

BMP C252: High pH Neutralization Using CO₂***Description***

When pH levels in stormwater rise above 8.5, it is necessary to lower the pH levels to the acceptable range of 6.5 to 8.5, this process is called pH neutralization. The pH neutralization involves the use of solid or compressed carbon dioxide gas in water requiring neutralization. Neutralized stormwater may be discharged to surface waters under the General Construction NPDES Permit but neutralized process water must be managed to prevent discharge to surface waters. Process wastewater includes wastewaters such as concrete truck wash-out, hydro-demolition, or saw-cutting slurry.

Reason for pH Neutralization

- A pH level range of 6.5 to 8.5 is typical for most natural watercourses, and this neutral pH is required for the survival of aquatic organisms. Should the pH rise or drop out of this range, fish and other aquatic organisms may become stressed and may die.
- Calcium hardness can contribute to high pH values and cause toxicity that is associated with high pH conditions. A high level of calcium hardness in waters of the state is not allowed.
- The water quality standard for pH in Washington State is in the range of 6.5 to 8.5. Groundwater standard for calcium and other dissolved solids in Washington State is less than 500 mg/l.

Causes of High pH

High pH at construction sites is most commonly caused by the contact of stormwater with poured or recycled concrete, cement, mortars, and other Portland cement or lime-containing construction materials. (See BMP C151: Concrete Handling for more information on concrete handling procedures.) The principal caustic agent in cement is calcium hydroxide (free lime).

Advantages of CO₂ Sparging

- Rapidly neutralizes high pH water
- Cost effective and safer to handle than acid compounds
- CO₂ is self-buffering. It is difficult to overdose and create harmfully low pH levels.
- Material is readily available.

The Chemical Process

- When carbon dioxide (CO₂) is added to water (H₂O), carbonic acid (H₂CO₃) is formed which can further dissociate into a proton (H⁺) and a bicarbonate anion (HCO₃⁻) as shown below:



- The free proton is a weak acid that can lower the pH. Water temperature has an effect on the reaction as well. The colder the water temperature is the slower the reaction occurs and the warmer the water temperature is the quicker the reaction occurs. Most construction applications in Washington State have water temperatures in the 50°F or higher range so the reaction is almost simultaneous.

Treatment Procedures

- High pH water may be treated using continuous treatment, continuous discharge systems. These manufactured systems continuously monitor influent and effluent pH to ensure that pH values are within an acceptable range before being discharged. All systems must have fail safe automatic shut off switches in the event that pH is not within the acceptable discharge range. Only trained operators may operate manufactured systems. System manufacturers often provide trained operators or training on their devices.
- The following procedure may be used when not using a continuous discharge system:
 - Prior to treatment, Gig Harbor must be notified.
 - Every effort should be made to isolate the potential high pH water in order to treat it separately from other stormwater on-site.
 - Water should be stored in an acceptable storage facility, detention pond, or containment cell prior to treatment.
 - Transfer water to be treated to the treatment structure. Ensure that treatment structure size is sufficient to hold the amount of water that is to be treated. Do not fill tank completely, allow at least 2 feet of freeboard.
 - The operator samples the water for pH and notes the clarity of the water. As a rule of thumb, less CO₂ is necessary for clearer water. This information should be recorded.

- In the pH adjustment structure, add CO₂ until the pH falls in the range of 6.9 to 7.1. Remember that pH water quality standards apply so adjusting pH to within 0.2 pH units of receiving water (background pH) is recommended. It is unlikely that pH can be adjusted to within 0.2 pH units using dry ice. Compressed carbon dioxide gas should be introduced to the water using a carbon dioxide diffuser located near the bottom of the tank; this will allow carbon dioxide to bubble up through the water and diffuse more evenly.
- Slowly release the water to discharge making sure water does not get stirred up in the process. Release about 80 percent of the water from the structure leaving any sludge behind.
- Discharge treated water through a pond or drainage system.
- Excess sludge needs to be disposed of properly as concrete waste. If several batches of water are undergoing pH treatment, sludge can be left in treatment structure for the next batch treatment. Dispose of sludge when it fills 50 percent of tank volume.
- Sites that must implement flow control for the developed site must also control stormwater release rates during construction. All treated stormwater must go through a flow control facility before being released to surface waters which require flow control.

Safety and Materials Handling

- All equipment should be handled in accordance with OSHA rules and regulations
- Follow manufacturer guidelines for materials handling.

Operator Records

- Each operator should provide:
 - A diagram of the monitoring and treatment equipment
 - A description of the pumping rates and capacity the treatment equipment is capable of treating.
- Each operator should keep a written record of the following:
 - Client name and phone number
 - Date of treatment

- Weather conditions
- Project name and location
- Volume of water treated
- pH of untreated water
- Amount of CO₂ needed to adjust water to a pH range of 6.9 to 7.1
- pH of treated water
- Discharge point location and description.

A copy of this record should be given to the client/contractor who should retain the record for 3 years.

BMP C253: pH Control for High pH Water

Description

When pH levels in stormwater rise above 8.5, it is necessary to lower the pH levels to the acceptable range of 6.5 to 8.5; this process is called pH neutralization. Stormwater with pH levels exceeding water quality standards may be treated by infiltration, dispersion in vegetation or compost, pumping to a sanitary sewer, disposal at a permitted concrete batch plant with pH neutralization capabilities, or carbon dioxide sparging. BMP C252 gives guidelines for carbon dioxide sparging.

Reason for pH Neutralization

A pH level between 6.5 and 8.5 is typical for most natural watercourses, and this pH range is required for the survival of aquatic organisms. Should the pH rise or drop out of this range, fish and other aquatic organisms may become stressed and may die.

Causes of High pH

High pH levels at construction sites are most commonly caused by the contact of stormwater with poured or recycled concrete, cement, mortars, and other Portland cement or lime-containing construction materials. (See BMP C151: Concrete Handling for more information on concrete handling procedures.) The principal caustic agent in cement is calcium hydroxide (free lime).

Disposal Methods

Infiltration

- Infiltration is only allowed if soil type allows all water to infiltrate (no surface runoff) without causing or contributing to a violation of surface or groundwater quality standards.
- Infiltration techniques should be consistent with Volume V, Chapter 6.

Dispersion

- Use Volume VI, Section 3, sheet flow or concentrated flow dispersion.

Sanitary Sewer Disposal

- Gig Harbor approval is required prior to disposal via the sanitary sewer.

Concrete Batch Plant Disposal

- Only permitted facilities may accept high pH water
- Facility should be contacted before treatment to ensure they can accept the high pH water.

Stormwater Discharge

- Any pH treatment options that generate treated water that must be discharged off site are subject to flow control requirements. Sites that must implement flow control for the developed site must also control stormwater release rates during construction. All treated stormwater must go through a flow control facility before being released to surface waters which require flow control.

References and Information Sources

- Association of General Contractors of Washington, Water Quality Manual.
- Clark County Conservation District, Erosion and Runoff Control, January 1981.
- Federal Register, Vol. 57, No. 246, pages 60848-60923. Dec. 22, 1992.
- King County Conservation District, Construction and Erosion Control, December 1981.
- King County Department of Transportation Road Maintenance BMP Manual (Final Draft), May 1998.
- King County Surface Water Design Manual, September 1998.
- Maryland Erosion and Sedimentation Control Manual, 1983.
- Michigan State Guidebook for Erosion and Sediment Control, 1975.
- Snohomish County Addendum to the 1992 Ecology Stormwater Management Manual for the Puget Sound Basin, September 1998.
- University of Washington, by Loren Reinelt, Construction Site Erosion and Sediment Control Inspector Training Manual, Center for Urban Water Resources Management, October 1991.
- University of Washington, by Loren Reinelt, Processes, Procedures, and Methods to Control Pollution Resulting from all Construction Activity, Center for Urban Water Resources Management, October 1991.
- Virginia Erosion and Sediment Control Handbook, 2nd Edition, 1980.

**Appendix II-A –
Recommended Standard Notes for Erosion and Sediment
Control Plans**

Appendix II-A – Recommended Standard Notes for Erosion and Sediment Control Plans

The following standard notes are suggested for use in erosion control plans. The city has other mandatory notes for construction plans that may be applicable, see Volume I, Section 3.5. Plans should also identify with phone numbers the person or firm responsible for the preparation of and maintenance of the temporary erosion and sedimentation control plan.

Standard Notes

Approval of this erosion and sedimentation control plan does not constitute an approval of permanent road or drainage design (e.g., size and location of roads, pipes, restrictors, channels, retention facilities, utilities, etc.).

The implementation of these Erosion and Sediment Control Plans and the construction, maintenance, replacement, and upgrading of these ESC facilities is the responsibility of the applicant/contractor until all construction is completed and approved and vegetation/landscaping is established.

The boundaries of the clearing limits shown on this plan shall be clearly flagged in the field prior to construction. During the construction period, no disturbance beyond the flagged clearing limits shall be permitted. The flagging shall be maintained by the applicant/contractor for the duration of construction.

The ESC facilities shown on this plan must be constructed in conjunction with all clearing and grading activities, and in such a manner as to insure that sediment and sediment laden water do not enter the drainage system, roadways, or violate applicable water standards.

The ESC facilities shown on this plan are the minimum requirements for anticipated site conditions. During the construction period, these ESC facilities shall be upgraded as needed for unexpected storm events and to ensure that sediment and sediment-laden water do not leave the site.

The ESC facilities shall be inspected daily by the applicant/contractor and maintained as necessary to ensure their continued functioning.

The ESC facilities on inactive sites shall be inspected and maintained a minimum of once a month or within the 48 hours following a major storm event.

At no time shall more than 1 foot of sediment be allowed to accumulate within a trapped catch basin. All catch basins and conveyance lines shall be cleaned prior to paving. The cleaning operation shall not flush sediment laden water into the downstream system.

Stabilized construction entrances shall be installed at the beginning of construction and maintained for the duration of the project. Additional measures may be required to insure that all paved areas are kept clean for the duration of the project.

**Appendix II-B –
Background Information on Chemical Treatment**

Appendix II-B – Background Information on Chemical Treatment

Coagulation and flocculation have been used for over a century to treat water. It is used less frequently for the treatment of wastewater. The use of coagulation and flocculation for treating stormwater is a very recent application. Experience with the treatment of water and wastewater has resulted in a basic understanding of the process, in particular factors that affect performance. This experience can provide insights as to how to most effectively design and operate similar systems in the treatment of stormwater.

Fine particles suspended in water give it a milky appearance, measured as turbidity. Their small size, often much less than 1 μm in diameter, give them a very large surface area relative to their volume. These fine particles typically carry a negative surface charge. Largely because of these two factors, small size and negative charge, these particles tend to stay in suspension for extended periods of time. Thus, removal is not practical by gravity settling. These are called stable suspensions. Polymers, as well as inorganic chemicals such as alum, speed the process of clarification. The added chemical destabilizes the suspension and causes the smaller particles to agglomerate. The process consists of three steps: coagulation, flocculation, and settling or clarification. Each step is explained below as well as the factors that affect the efficiency of the process.

Coagulation: Coagulation is the first step. It is the process by which negative charges on the fine particles that prevent their agglomeration are disrupted. Chemical addition is one method of destabilizing the suspension, and polymers are one class of chemicals that are generally effective. Chemicals that are used for this purpose are called coagulants. Coagulation is complete when the suspension is destabilized by the neutralization of the negative charges. Coagulants perform best when they are thoroughly and evenly dispersed under relatively intense mixing. This rapid mixing involves adding the coagulant in a manner that promotes rapid dispersion, followed by a short time period for destabilization of the particle suspension. The particles are still very small and are not readily separated by clarification until flocculation occurs.

Flocculation: Flocculation is the process by which fine particles that have been destabilized bind together to form larger particles that settle rapidly. Flocculation begins naturally following coagulation, but is enhanced by gentle mixing of the destabilized suspension. Gentle mixing helps to bring particles in contact with one another such that they bind and continually grow to form "flocs." As the size of the flocs increases they become heavier and tend to settle more rapidly.

Clarification: The final step is the settling of the particles. Particle density, size and shape are important during settling. Dense, compact flocs settle more readily than less dense, fluffy flocs. Because of this, flocculation to form dense, compact flocs is particularly important during water treatment. Water temperature is important during settling. Both the density and viscosity of water are affected by temperature; these in turn affect settling. Cold temperatures increase viscosity and density, thus slowing down the rate at which the particles settle.

The conditions under which clarification is achieved can affect performance. Currents can affect settling. Currents can be produced by wind, by differences between the temperature of the incoming water and the water in the clarifier, and by flow conditions near the inlets and outlets. Quiescent water such as that which occurs during batch clarification provides a good environment for effective performance as many of these factors become less important in comparison to typical sedimentation basins. One source of currents that is likely important in batch systems is movement of the water leaving the clarifier unit. Given that flocs are relatively small and light the exit velocity of the water must be as low as possible. Sediment on the bottom of the basin can be resuspended and removed by fairly modest velocities.

Coagulants: Polymers are large organic molecules that are made up of subunits linked together in a chain-like structure. Attached to these chain-like structures are other groups that carry positive or negative charges, or have no charge. Polymers that carry groups with positive charges are called cationic, those with negative charges are called anionic, and those with no charge (neutral) are called nonionic.

Cationic polymers can be used as coagulants to destabilize negatively charged turbidity particles present in natural waters, wastewater and stormwater. Aluminum sulfate (alum) can also be used as this chemical becomes positively charged when dispersed in water. In practice, the only way to determine whether a polymer is effective for a specific application is to perform preliminary or on-site testing.

Polymers are available as powders, concentrated liquids, and emulsions (which appear as milky liquids). The latter are petroleum based, which are not allowed for construction stormwater treatment. Polymer effectiveness can degrade with time and also from other influences. Thus, manufacturers' recommendations for storage should be followed. Manufacturer's recommendations usually do not provide assurance of water quality protection or safety to aquatic organisms. Consideration of water quality protection is necessary in the selection and use of all polymers.

Application Considerations: Application of coagulants at the appropriate concentration or dosage rate for optimum turbidity removal is important for management of chemical cost, for effective performance, and to avoid aquatic toxicity. The optimum dose in a given application depends on several site-specific features. Turbidity of untreated water can be important with turbidities greater than 5,000 NTU. The surface charge of particles to be removed is also important. Environmental factors that can influence dosage rate are water temperature, pH, and the presence of constituents that consume or otherwise affect polymer effectiveness. Laboratory experiments indicate that mixing previously settled sediment (floc sludge) with the untreated stormwater significantly improves clarification, therefore reducing the effective dosage rate. Preparation of working solutions and thorough dispersal of polymers in water to be treated is also important to establish the appropriate dosage rate.

For a given water sample, there is generally an optimum dosage rate that yields the lowest residual turbidity after settling. When dosage rates below this optimum value (underdosing) are applied, there is an insufficient quantity of coagulant to react with, and therefore destabilize, all of the turbidity present. The result is residual turbidity (after flocculation and settling) that is higher than with the optimum dose. Overdosing, application of dosage rates greater than the optimum value, can also negatively impact performance. Again, the result is higher residual turbidity than that with the optimum dose.

Mixing in Coagulation/Flocculation: The G-value, or just "G," is often used as a measure of the mixing intensity applied during coagulation and flocculation. The symbol G stands for "velocity gradient", which is related in part to the degree of turbulence generated during mixing. High G-values mean high turbulence, and vice versa. High G-values provide the best conditions for coagulant addition. With high Gs, turbulence is high and coagulants are rapidly dispersed to their appropriate concentrations for effective destabilization of particle suspensions.

Low G-values provide the best conditions for flocculation. Here, the goal is to promote formation of dense, compact flocs that will settle readily. Low Gs provide low turbulence to promote particle collisions so that flocs can form. Low Gs generate sufficient turbulence such that collisions are effective in floc formation, but do not break up flocs that have already formed.

Design engineers wishing to review more detailed presentations on this subject are referred to the following textbooks.

- Fair, G., J. Geyer and D. Okun, *Water and Wastewater Engineering*, Wiley and Sons, NY, 1968.

- American Water Works Association, Water Quality and Treatment, McGraw-Hill, NY, 1990.
- Weber, W.J., Physiochemical Processes for Water Quality Control, Wiley and Sons, NY, 1972.

Adjustment of the pH and Alkalinity: The pH must be in the proper range for the polymers to be effective, which is 6.5 to 8.5 for Calgon CatFloc 2953, the most commonly used polymer. As polymers tend to lower the pH, it is important that the stormwater have sufficient buffering capacity. Buffering capacity is a function of alkalinity. Without sufficient alkalinity, the application of the polymer may lower the pH to below 6.5. A pH below 6.5 not only reduces the effectiveness of the polymer, it may create a toxic condition for aquatic organisms. Stormwater may not be discharged without readjustment of the pH to above 6.5. The target pH should be within 0.2 standard units of the receiving water pH.

Experience gained at several projects in the City of Redmond has shown that the alkalinity needs to be at least 50 mg/L to prevent a drop in pH to below 6.5 when the polymer is added.